

# User's Guide


## LTE3301-M209

4G LTE Indoor Router

### Default Login Details

LAN IP Address	http://192.168.1.1
User Name	admin
Password	1234

Version 1.00 Edition 1, 11/2019

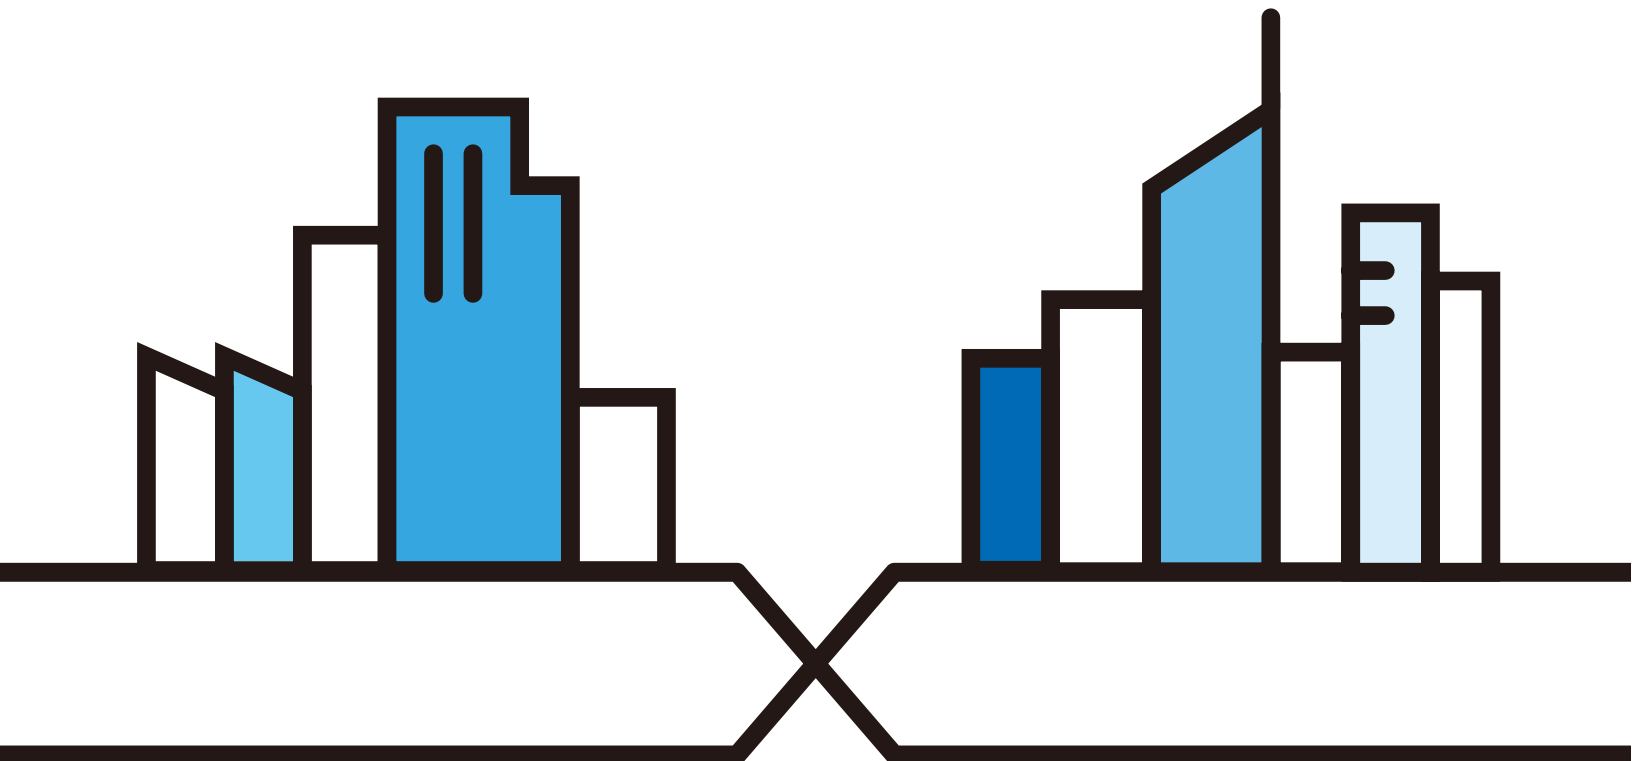

---

**IMPORTANT!**

**READ CAREFULLY BEFORE USE.**

**KEEP THIS GUIDE FOR FUTURE REFERENCE.**

Screenshots and graphics in this book may differ slightly from your product due to differences in your product firmware or your computer operating system. Every effort has been made to ensure that the information in this manual is accurate.

### **Related Documentation**

- Quick Start Guide

The Quick Start Guide shows how to connect the LTE3301 and access the Web Configurator wizards. It contains information on setting up your network and configuring for Internet access.



# Contents Overview

<b>User's Guide</b> .....	<b>11</b>
Introduction .....	12
Introducing the Web Configurator .....	19
Setup Wizard .....	29
Tutorials .....	34
<b>Technical Reference</b> .....	<b>45</b>
Monitor .....	46
WAN .....	53
Wireless LAN .....	63
LAN .....	80
DHCP Server .....	82
NAT .....	87
DDNS .....	96
Routing .....	98
Interface Group .....	101
Firewall .....	104
Content Filtering .....	109
IPv6 Firewall .....	111
SMS .....	113
Remote Management .....	116
Bandwidth Management .....	119
Universal Plug-and-Play (UPnP) .....	123
TR-069 .....	130
Maintenance .....	132
Troubleshooting .....	140

# Document Conventions

## Warnings and Notes

These are how warnings and notes are shown in this guide.

**Warnings tell you about things that could harm you or your device.**








Note: Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

## Syntax Conventions

- The LTE3301-M209 in this user's guide may be referred to as the "Zyxel Device" in this guide.
- Product labels, screen names, field labels and field choices are all in **bold** font.
- A right angle bracket ( > ) within a screen name denotes a mouse click. For example, **Network Setting > Routing > DNS Route** means you first click **Network Setting** in the navigation panel, then the **Routing** sub menu and finally the **DNS Route** tab to get to that screen.

## Icons Used in Figures

Figures in this user guide may use the following generic icons. The Zyxel Device icon is not an exact representation of your device.

LTE Device 	Generic Router 	Switch 
Firewall 	Cell Tower 	Printer 
Server 		

# Table of Contents

<b>Contents Overview .....</b>	<b>3</b>
<b>Document Conventions .....</b>	<b>4</b>
<b>Table of Contents .....</b>	<b>5</b>
<b>Part I: User's Guide.....</b>	<b>11</b>
<b>Chapter 1</b>	
<b>Introduction.....</b>	<b>12</b>
1.1 Overview .....	12
1.2 Applications .....	12
1.3 Ways to Manage the Zyxel Device .....	13
1.4 Good Habits for Managing the Zyxel Device .....	13
1.5 Resetting the Zyxel Device .....	13
1.5.1 How to Use the RESET Button .....	13
1.6 The WPS Button .....	13
1.7 Hardware .....	14
1.7.1 Front Panel .....	14
1.7.2 LEDs .....	15
1.7.3 Rear Panel .....	16
1.8 Wall Mounting .....	17
<b>Chapter 2</b>	
<b>Introducing the Web Configurator .....</b>	<b>19</b>
2.1 Overview .....	19
2.2 Accessing the Web Configurator .....	19
2.2.1 Login Screen .....	20
2.2.2 Password Screen .....	20
2.3 The Main Screen .....	21
2.3.1 Title Bar .....	22
2.3.2 Navigation Panel .....	23
2.4 Status Screen .....	25
<b>Chapter 3</b>	
<b>Setup Wizard.....</b>	<b>29</b>
3.1 Overview .....	29
3.2 Accessing the Wizard .....	29

3.3 Wizard Setup .....	29
<b>Chapter 4</b>	
<b>Tutorials .....</b>	<b>34</b>
4.1 Overview .....	34
4.2 Set Up a Wireless Network Using WPS .....	34
4.2.1 Push Button Configuration (PBC) .....	34
4.2.2 PIN Configuration .....	35
4.3 Connect to Zyxel Device Wireless Network without WPS .....	36
4.3.1 Configure Your Notebook .....	38
4.4 Using Multiple SSIDs on the Zyxel Device .....	40
4.4.1 Configuring Security Settings of Multiple SSIDs .....	41
<b>Part II: Technical Reference.....</b>	<b>45</b>
<b>Chapter 5</b>	
<b>Monitor.....</b>	<b>46</b>
5.1 Overview .....	46
5.2 What You Can Do .....	46
5.3 The Log Screen .....	46
5.3.1 View Log .....	46
5.4 DHCP Table Screen .....	47
5.5 ARP Table Screen .....	48
5.6 Packet Statistics Screen .....	49
5.7 WLAN Station Status Screen .....	50
5.8 LTE Modem Status Screen .....	51
<b>Chapter 6</b>	
<b>WAN .....</b>	<b>53</b>
6.1 Overview .....	53
6.2 What You Can Do .....	53
6.3 What You Need To Know .....	54
6.4 Management WAN Screen .....	56
6.4.1 Management WAN Edit .....	57
6.5 Network Scan Screen .....	59
6.6 IPv6 Screen .....	61
6.7 PIN Management Screen .....	62
<b>Chapter 7</b>	
<b>Wireless LAN .....</b>	<b>63</b>
7.1 Overview .....	63

7.1.1 What You Can Do .....	63
7.1.2 What You Should Know .....	64
7.2 General Wireless LAN Screen .....	66
7.3 Wireless Security .....	68
7.3.1 No Security .....	68
7.3.2 WPA2-PSK .....	69
7.4 More AP Screen .....	70
7.4.1 More AP Edit .....	71
7.5 MAC Filter Screen .....	72
7.6 Wireless LAN Advanced Screen .....	74
7.7 Quality of Service (QoS) Screen .....	75
7.8 WPS Screen .....	75
7.9 WPS Station Screen .....	77
7.10 Scheduling Screen .....	77
7.11 WDS Screen .....	78
<b>Chapter 8</b>	
<b>LAN .....</b>	<b>80</b>
8.1 Overview .....	80
8.2 What You Can Do .....	80
8.3 What You Need To Know .....	80
8.4 IP Screen .....	81
<b>Chapter 9</b>	
<b>DHCP Server.....</b>	<b>82</b>
9.1 Overview .....	82
9.1.1 What You Can Do .....	82
9.1.2 What You Need To Know .....	82
9.2 General Screen .....	82
9.3 Advanced Screen .....	84
9.4 Client List Screen .....	86
<b>Chapter 10</b>	
<b>NAT .....</b>	<b>87</b>
10.1 Overview .....	87
10.1.1 What You Can Do .....	87
10.2 General Screen .....	88
10.3 Port Forwarding Screen .....	88
10.3.1 Port Forwarding Edit Screen .....	90
10.4 Port Trigger Screen .....	91
10.5 ALG Screen .....	92
10.6 Technical Reference .....	93
10.6.1 NAT Port Forwarding: Services and Port Numbers .....	93

10.6.2 NAT Port Forwarding Example .....	94
10.6.3 Trigger Port Forwarding .....	94
10.6.4 Trigger Port Forwarding Example .....	94
10.6.5 Two Points To Remember About Trigger Ports .....	95
<b>Chapter 11</b>	
<b>DDNS .....</b>	<b>96</b>
11.1 Overview .....	96
11.2 What You Can Do .....	96
11.3 General Screen .....	96
<b>Chapter 12</b>	
<b>Routing .....</b>	<b>98</b>
12.1 Overview .....	98
12.2 What You Can Do .....	98
12.3 Static Route Screen .....	99
12.3.1 Add/Edit Static Route .....	99
12.4 Dynamic Routing Screen .....	100
<b>Chapter 13</b>	
<b>Interface Group .....</b>	<b>101</b>
13.1 Overview .....	101
13.2 What You Can Do .....	101
13.3 Interface Group Screen .....	101
13.3.1 Interface Group > Add Screen .....	102
<b>Chapter 14</b>	
<b>Firewall .....</b>	<b>104</b>
14.1 Overview .....	104
14.1.1 What You Can Do .....	104
14.1.2 What You Need To Know .....	104
14.2 General Screen .....	105
14.3 Services Screen .....	106
<b>Chapter 15</b>	
<b>Content Filtering .....</b>	<b>109</b>
15.1 Overview .....	109
15.2 What You Can Do .....	109
15.3 Content Filter .....	109
<b>Chapter 16</b>	
<b>IPv6 Firewall .....</b>	<b>111</b>
16.1 Overview .....	111



---

16.2 What You Can Do .....	111
16.3 IPv6 Firewall Screen .....	111
<b>Chapter 17</b>	
<b>SMS .....</b>	<b>113</b>
17.1 Overview .....	113
17.2 What You Can Do .....	113
17.3 SMS Screen .....	113
17.3.1 SMS > New SMS .....	114
17.3.2 SMS > SMS Inbox .....	114
<b>Chapter 18</b>	
<b>Remote Management .....</b>	<b>116</b>
18.1 Remote Management Overview .....	116
18.2 What You Can Do .....	116
18.3 WWW Screen .....	116
18.4 Remote Management Screen .....	118
<b>Chapter 19</b>	
<b>Bandwidth Management .....</b>	<b>119</b>
19.1 Overview .....	119
19.2 What You Can Do .....	119
19.3 What You Need To Know .....	119
19.4 General Screen .....	120
19.5 Advanced Screen .....	120
19.5.1 Add Bandwidth Management Rule .....	121
<b>Chapter 20</b>	
<b>Universal Plug-and-Play (UPnP) .....</b>	<b>123</b>
20.1 Overview .....	123
20.2 What You Can Do .....	123
20.3 What You Need to Know .....	123
20.3.1 NAT Traversal .....	123
20.3.2 Cautions with UPnP .....	124
20.4 UPnP Screen .....	124
20.5 Technical Reference .....	124
20.5.1 Using UPnP in Windows 7 Example .....	124
20.5.2 Turning on UPnP in Windows 10 Example .....	127
<b>Chapter 21</b>	
<b>TR-069 .....</b>	<b>130</b>
21.1 Overview .....	130
21.2 What You Can Do .....	130

21.3 TR-069 Screen .....	130
<b>Chapter 22</b>	
<b>Maintenance.....</b>	<b>132</b>
22.1 Overview .....	132
22.2 What You Can Do .....	132
22.3 General Screen .....	132
22.4 User Account Screen .....	133
22.4.1 Edit a User Account .....	133
22.5 Time Setting Screen .....	134
22.6 Firmware Upgrade Screen .....	136
22.7 Backup/Restore Screen .....	137
22.8 System Restart Screen .....	139
<b>Chapter 23</b>	
<b>Troubleshooting.....</b>	<b>140</b>
23.1 Overview .....	140
23.2 Power, Hardware Connections, and LEDs .....	140
23.3 Zyxel Device Access and Login .....	141
23.4 Internet Access .....	142
23.5 Wireless Connections .....	143
Appendix A Setting Up Your Computer's IP Address .....	145
Appendix B Common Services .....	171
Appendix C Customer Support .....	174
Appendix D Legal Information .....	180
<b>Index .....</b>	<b>187</b>

---

# PART I

## User's Guide

---

# CHAPTER 1

## Introduction


### 1.1 Overview

This chapter introduces the main features and applications of the Zyxel Device.

The Zyxel Device is a wireless router, which can connect to a mobile network and the Internet through a wireless WAN connection.

It provides easy network access to mobile users without additional wiring. You can set up a wireless network with other IEEE 802.11b/g/n compatible devices.

A range of services such as a firewall and content filtering are also available for secure Internet computing.

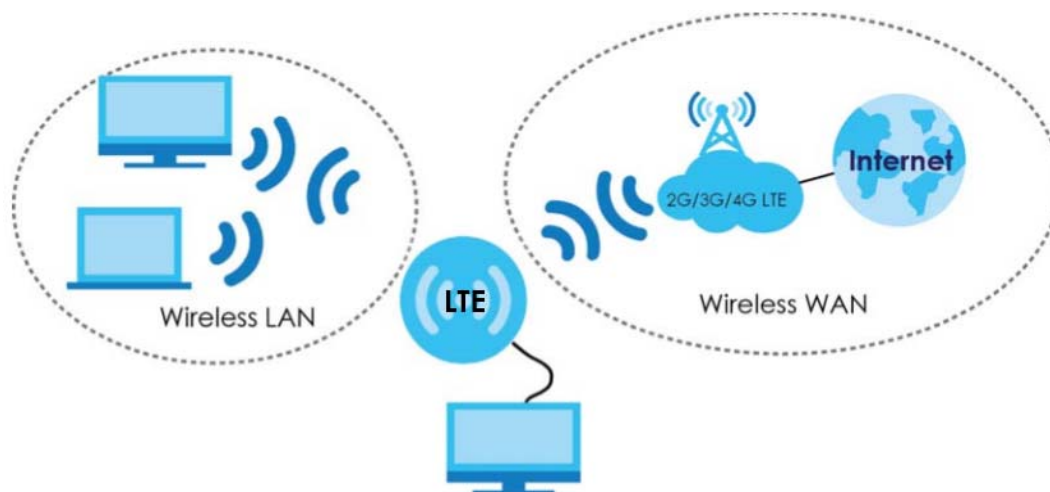

### 1.2 Applications

You can have the following networks with the Zyxel Device:

- **Wired.** You can connect network devices via the Ethernet ports of the Zyxel Device so that they can communicate with each other and access the Internet.
- **Wireless LAN.** Wireless clients can connect to the Zyxel Device to access network resources. You can use WPS (Wi-Fi Protected Setup) to create an instant network connection with another WPS-compatible device.
- **Wireless WAN.** Insert a 4G SIM card into the SIM card slot to connect to a mobile network for Internet access.

## 1.3 Ways to Manage the Zyxel Device

Use any of the following methods to manage the Zyxel Device.

- WPS (Wi-Fi Protected Setup). You can use the WPS button or the WPS section of the Web Configurator to set up a wireless network with your Zyxel Device.
- Web Configurator. This is recommended for everyday management of the Zyxel Device using a (supported) web browser.

## 1.4 Good Habits for Managing the Zyxel Device

Do the following things regularly to make the Zyxel Device more secure and to manage the Zyxel Device more effectively.

- Change the password. Use a password that's not easy to guess and that consists of different types of characters, such as numbers and letters.
- Write down the password and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). See [Section 22.7 on page 137](#). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the Zyxel Device to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the Zyxel Device. You could simply restore your last configuration.

## 1.5 Resetting the Zyxel Device

If you forget your password or IP address, or you cannot access the Web Configurator, you will need to use the **RESET** button at the back of the Zyxel Device to reload the factory-default configuration file. This means that you will lose all configurations that you had previously saved, the password will be reset to "1234" (see [Section 22.4 on page 133](#)) and the IP address will be reset to "192.168.1.1".

### 1.5.1 How to Use the RESET Button

- 1 Make sure the power LED is on.
- 2 Press the **RESET** button for one to four seconds to restart/reboot the Zyxel Device.
- 3 Press the **RESET** button for longer than ten seconds to set the Zyxel Device back to its factory-default configurations.

## 1.6 The WPS Button

Your Zyxel Device supports Wi-Fi Protected Setup (WPS), which is an easy way to set up a secure wireless network. WPS is an industry standard specification, defined by the Wi-Fi Alliance.

WPS allows you to quickly set up a wireless network with strong security, without having to configure security settings manually. Each WPS connection works between two devices. Both devices must support WPS (check each device's documentation to make sure).

Depending on the devices you have, you can either press a button (on the device itself, or in its configuration utility) or enter a PIN (a unique Personal Identification Number that allows one device to authenticate the other) in each of the two devices. When WPS is activated on a device, it has two minutes to find another device that also has WPS activated. Then, the two devices connect and set up a secure network by themselves.

You can use the WPS button (  ) on the top panel of the Zyxel Device to activate WPS in order to quickly set up a wireless network with strong security.

- 1 Make sure the power LED is on (not blinking).
- 2 Press the WPS button for more than three seconds and release it. Press the WPS button on another WPS-enabled device within range of the Zyxel Device.

Note: You must activate WPS in the Zyxel Device and in another wireless device within two minutes of each other.


For more information on using WPS, see [Section 4.2 on page 34](#).

## 1.7 Hardware

### 1.7.1 Front Panel

The following graphic displays the front panel of the Zyxel Device.

Figure 1 LTE3301-M209 Front Panel

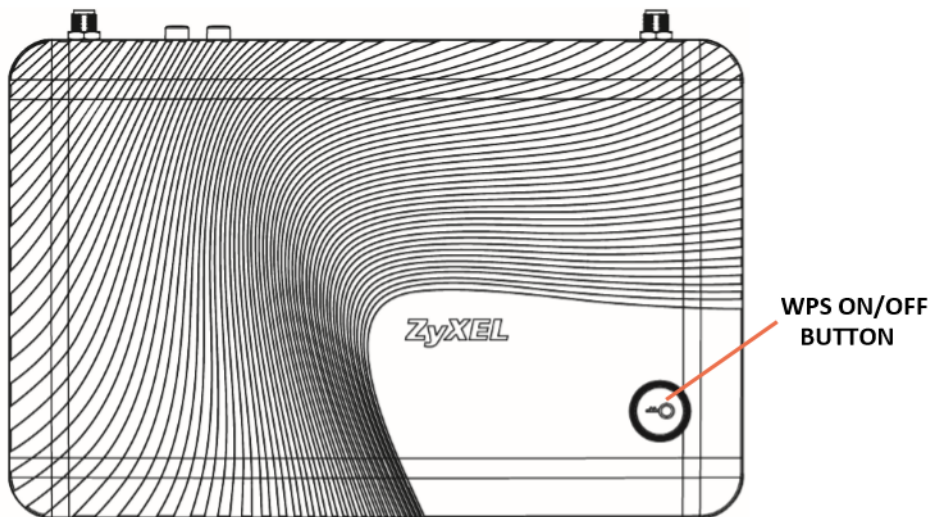


## 1.7.2 LEDs

### SIM Card Slot

The Zyxel Device comes with a built-in 4G LTE module for 4G connections. To set up a 4G connection using the built-in 4G LTE module, just insert a 4G SIM card into the SIM card slot at the back of the Zyxel Device.

Note: You must insert the 4G SIM card into the card slot before turning on the Zyxel Device.

**Figure 2** Front Panel

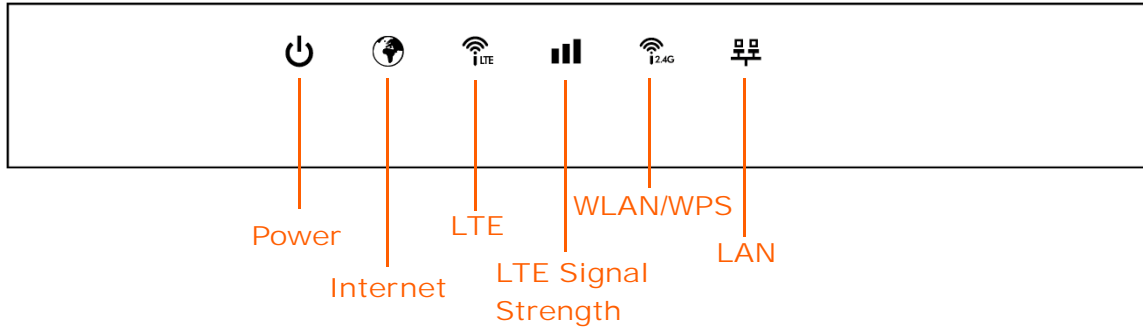

The following table describes the LEDs.

**Table 1** Front panel LEDs

LED	COLOR	STATUS	DESCRIPTION
Power	Green	On	The Zyxel Device is receiving power and functioning properly.
		Blinking	The Zyxel Device is in the process of starting up or restoring the default settings.
	Off	The Zyxel Device is not receiving power.	
Internet	Green	On	The Zyxel Device's WAN connection is ready.
		Blinking	The Zyxel Device is sending/receiving data through the WAN.
	Off	The WAN connection is not ready, or has failed.	
LTE	Green	On	The Zyxel Device is registered and successfully connected to a 4G network.
		Blinking (slow)	The Zyxel Device is registered and successfully connected to a 2G/3G network.
		Blinking (fast)	The Zyxel Device Series is looking for an available 4G/3G/2G network.
	Off	There is no SIM card inserted, the SIM card is invalid, the PIN code is not correct or there is no service.	


Table 1 Front panel LEDs (continued)

LED	COLOR	STATUS	DESCRIPTION
LTE Signal Strength	Green	On	A valid SIM card is inserted and the wireless WAN interface is enabled.  Signal strength: Excellent RSRP (Reference Signal Receiving Power) >= -79 dBm
	Orange	On	Signal strength: Fair -81 dBm >= RSRP >= -95 dBm
	Red	On	Signal strength: Poor -97 dBm > RSRP
	Blinking		There is no LTE signal because there is no valid SIM card inserted and/or the wireless WAN interface is disabled.
WLAN/WPS	Green	On	The Zyxel Device is ready and the 2.4GHz wireless LAN is on, but is not sending/receiving data through the wireless LAN.
		Blinking (slow)	The Zyxel Device is sending/receiving data through the wireless LAN.
		Blinking (fast)	The Zyxel Device is negotiating a WPS connection with a wireless client.
	Off		The wireless LAN is not ready or has failed or WPS is disabled.
LAN	Green	On	The Zyxel Device's LAN connection is ready.
	Off		The LAN connection is not ready, or has failed.

### 1.7.3 Rear Panel

The following graphics displays the rear panels of the Zyxel Device.

Figure 3 LTE3301-M209 Rear Panel

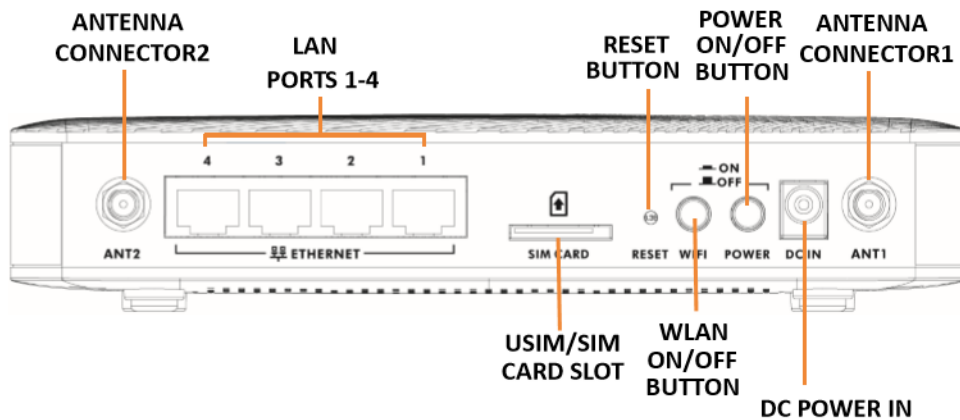

The following table describes the items on the rear panel.

Table 2 Rear Panel Ports

LABEL	DESCRIPTION
Antenna Connector 1&2	Install two external antennas to improve your wireless WAN signals.
LAN Ports 1-4	Connect a device with an Ethernet port that requires high-speed Internet access. For example, connect a computer, NAS storage device, gaming console and so on.



Table 2 Rear Panel Ports (continued)

LABEL	DESCRIPTION
USIM/SIM Card Slot	Insert your SIM card to the SIM card slot for the LTE network access.
Reset	Press the button to return the Zyxel Device to the factory defaults, if you forget your password or cannot access the Web Configurator.
WLAN	Press the WLAN button to turn on the WiFi.
Power	Press the power button after the power cable is connected to start the device.
DC Power In	Use the power adapter provided with your Zyxel Device to connect an appropriate power source to this socket.

## 1.8 Wall Mounting

You may need screw anchors if mounting on a concrete or brick wall.

Table 3 Wall Mounting Information

Distance between holes	11 cm
M4 Screws	Two
Screw anchors (optional)	Two

- 1 Select a position free of obstructions on a wall strong enough to hold the weight of the device.
- 2 Mark two holes on the wall at the appropriate distance apart for the screws.


**Be careful to avoid damaging pipes or cables located inside the wall when drilling holes for the screws.**

- 3 If using screw anchors, drill two holes for the screw anchors into the wall. Push the anchors into the full depth of the holes, then insert the screws into the anchors. Do not insert the screws all the way in - leave a small gap of about 0.5 cm.

If not using screw anchors, use a screwdriver to insert the screws into the wall. Do not insert the screws all the way in - leave a gap of about 0.5 cm.

- 4 Make sure the screws are fastened well enough to hold the weight of the Zyxel Device with the connection cables.
- 5 Align the holes on the back of the Zyxel Device with the screws on the wall. Hang the Zyxel Device on the screws.

Figure 4 Wall Mounting Example

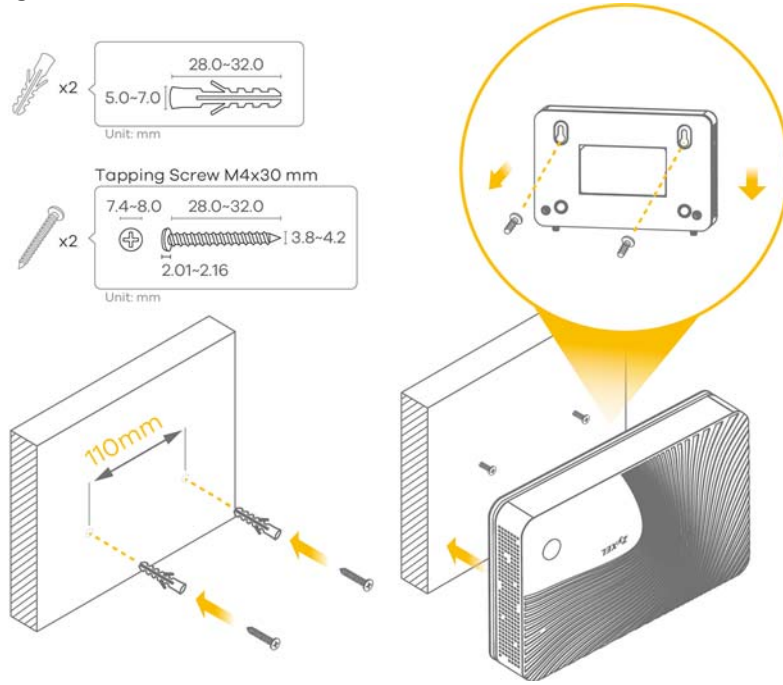

# CHAPTER 2

# Introducing the Web Configurator

## 2.1 Overview

This chapter describes how to access the Zyxel Device Web Configurator and provides an overview of its screens.

The Web Configurator is an HTML-based management interface that allows easy setup and management of the Zyxel Device via Internet browser. Use

- Internet Explorer 11.0 and later versions
- Mozilla Firefox 67.0.2 and later versions
- Safari 10.14.6 and later versions

The recommended screen resolution is 1024 by 768 pixels.

In order to use the Web Configurator you need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in Windows 10.
- JavaScript (enabled by default).
- Java permissions (enabled by default).

Refer to the Troubleshooting chapter ([Chapter 23 on page 140](#)) to see how to make sure these functions are allowed in Internet Explorer.

## 2.2 Accessing the Web Configurator


- 1 Make sure your Zyxel Device hardware is properly connected and prepare your computer or computer network to connect to the Zyxel Device.
- 2 Launch your web browser.
- 3 Type "http://192.168.1.1" as the website address.

Your computer must be in the same subnet in order to access this website address.

## 2.2.1 Login Screen

The Web Configurator initially displays the following login screen.

Figure 5 Login screen

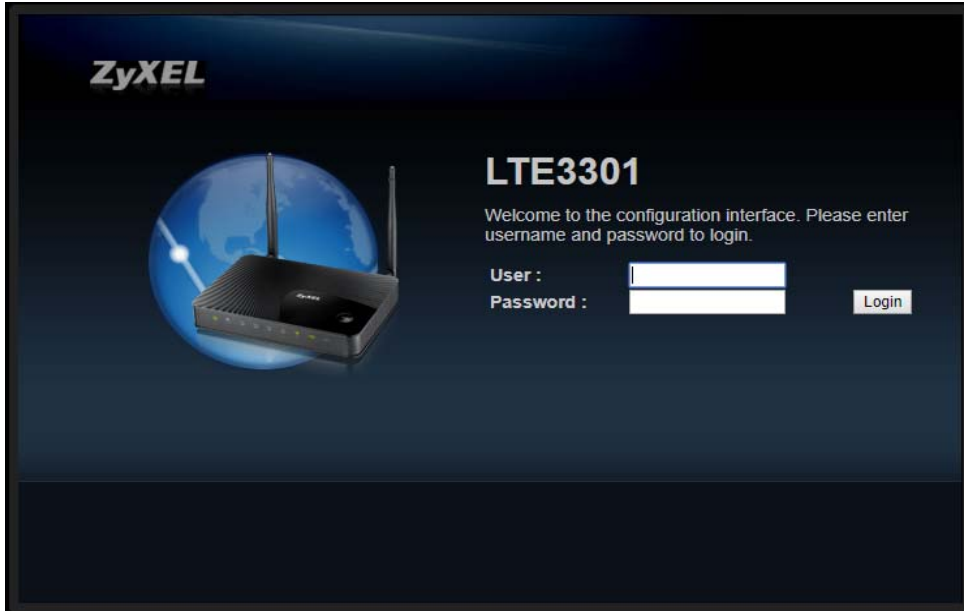

The following table describes the labels in this screen.


Table 4 Login screen

LABEL	DESCRIPTION
User	Type "admin" (default) as the user name.
Password	Type "1234" (default) as the password. Click <b>Login</b> .

## 2.2.2 Password Screen

You should see a screen asking you to change your password (highly recommended) as shown next.

Figure 6 Change Password Screen

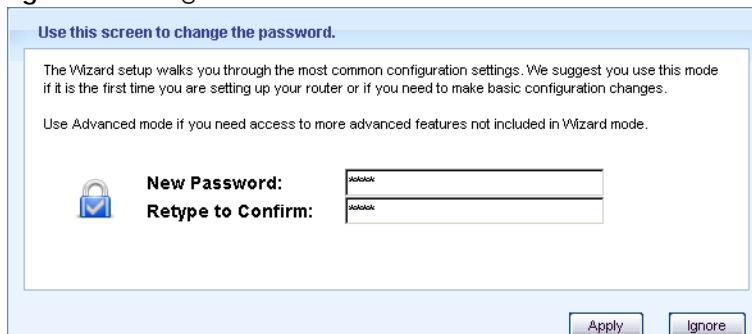

The following table describes the labels in this screen.

Table 5 Change Password Screen

LABEL	DESCRIPTION
New Password	Type a new password.
Retype to Confirm	Retype the password for confirmation.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Ignore	Click <b>Ignore</b> if you do not want to change the password this time.

Note: The management session automatically times out when the time period set in the **Administrator Inactivity Timer** field expires (default five minutes; go to [Chapter 22 on page 132](#) to change this). Simply log back into the Zyxel Device if this happens.

## 2.3 The Main Screen

The Web Configurator's main screen is divided into these parts:

Figure 7 The Web Configurator's Main Screen

The screenshot shows the ZyXEL LTE3301 Web Configurator's main screen. The interface is divided into several sections:

- Title Bar (A):** Located at the top, it includes the ZyXEL logo, the device model 'LTE3301', a language dropdown menu set to 'English', and icons for help, search, and refresh. A 'Refresh Interval' dropdown is set to 'None', and a 'Refresh Now' button is present.
- Navigation Panel (B):** A vertical sidebar on the left side of the screen, containing icons for Home, Status, Configuration, and other functions.
- Main Window (C):** The central area displaying system information, organized into several tables and sections:
  - Device Information:** A table listing items like Host Name (LTE3301), Model Number (LTE3301), Firmware Version (V1.00(ABLG 3)b3), and WAN/LAN/WLAN information.
  - System Status:** A table showing System Up Time (0day 2hr 2min 44sec), Current Date/Time (2013-1-1/03:13:07), and System Resource usage (CPU Usage: 46%, Memory Usage: 61%).
  - Interface Status:** A table listing interfaces (WAN, LAN 1-4, WLAN) and their current status (Down or Up) along with their rates.
  - Summary:** A section at the bottom with links for Packet Statistics, WLAN Station Status, and LTE Modem Status.

- A - Title Bar
- B - Navigation Panel
- C - Main Window

### 2.3.1 Title Bar

The title bar provides some useful links that always appear over the screens below, regardless of how deep into the Web Configurator you navigate.

**Figure 8** Title Bar



The icons provide the following functions.

**Table 6** Title Bar: Web Configurator Icons

LABEL	DESCRIPTION
Language Selector English	Click this icon to select a language for your Web Configurator.
Wizard	Click this icon to open the setup wizard for the Zyxel Device.
About	Click this icon to open a screen where you can click a link to visit the ZyXEL web site to see detailed product information.
Logout	Click this icon to log out of the Web Configurator.

### 2.3.2 Navigation Panel

Use the sub-menus on the navigation panel to configure Zyxel Device features.

**Figure 9** Navigation Panel



The following table describes the sub-menus.

**Table 7** Navigation Panel

LINK	TAB	FUNCTION
Status		This screen shows the Zyxel Device's general device, system and interface status information. Use this screen to access the summary statistics tables.
<b>Monitor</b>		
Log	View Log	Use this screen to see the logged messages for the Zyxel Device.
	Log Setting	Use this screen to select the logs you wish to display.
DHCP Table	DHCP Table	Use this screen to view current DHCP client information.

Table 7 Navigation Panel (continued)

LINK	TAB	FUNCTION
ARP Table	ARP Table	Use this screen to view the ARP table. It displays the IP and MAC address of each LAN connection.
Packet Statistics	Packet Statistics	Use this screen to view port status and packet specific statistics.
WLAN Station Status	Association List	Use this screen to view the wireless stations that are currently associated to the Zyxel Device's 2.4GHz wireless LAN.
LTE Modem Status		Use this screen to view the detailed information about the LTE module, cellular interface, and SIM card. You can also view the LTE connection status.
<b>Configuration</b>		
Network		
WAN	Management WAN	This screen allows you to configure ISP parameters, WAN IP address assignment, and DNS servers.
	Network Scan	Use this screen to specify the type of the mobile network to which the Zyxel Device is connected and how you want the Zyxel Device to connect to an available mobile network.
	IPv6	Use this screen to configure the Zyxel Device's IPv6 settings.
	PIN Management	Use this screen to enable PIN authentication and configure the PIN code.
Wireless LAN	General	Use this screen to enable the wireless LAN and configure wireless LAN and wireless security settings.
	More AP	Use this screen to configure multiple BSSs on the Zyxel Device.
	MAC Filter	Use the MAC filter screen to allow or deny wireless stations based on their MAC addresses from connecting to the Zyxel Device.
	Advanced	This screen allows you to configure advanced wireless LAN settings.
	QoS	Use this screen to configure Wi-Fi Multimedia Quality of Service (WMM QoS). WMM QoS allows you to prioritize wireless traffic according to the delivery requirements of individual services.
	WPS	Use this screen to configure the WPS settings.
	WPS Station	Use this screen to add a wireless station using WPS.
	Scheduling	Use this screen to schedule the times the Wireless LAN is enabled.
	WDS	Use this screen to enable and configure the WDS settings.
LAN	IP	Use this screen to configure LAN IP address and subnet mask.
DHCP Server	General	Use this screen to enable the Zyxel Device's DHCP server.
	Advanced	Use this screen to assign IP addresses to specific individual computers based on their MAC addresses and to have DNS servers assigned by the DHCP server.
	Client List	Use this screen to view information related to your DHCP status.
NAT	General	Use this screen to enable NAT.
	Port Forwarding	Use this screen to configure servers behind the Zyxel Device and forward incoming service requests to the server(s) on your local network.
	Port Trigger	Use this screen to change your Zyxel Device's port triggering settings.
	ALG	Use this screen to enable or disable SIP (VoIP) ALG (Application Layer Gateway) in the Zyxel Device.
Dynamic DNS	Dynamic DNS	Use this screen to set up dynamic DNS.
Routing	Static Route	Use this screen to configure IP static routes.
	Dynamic Routing	Use this screen to enable and configure RIP on the Zyxel Device.



Table 7 Navigation Panel (continued)

LINK	TAB	FUNCTION
Interface Group	Interface Group	Use this screen to create a new interface group.
<b>Security</b>		
Firewall	General	Use this screen to activate/deactivate the firewall.
	Services	This screen shows a summary of the firewall rules, and allows you to edit/add a firewall rule.
Content Filter	Content Filter	Use this screen to restrict web features and designate a trusted computer. You can also block certain web sites containing certain keywords in the URL.
IPv6 firewall	Services	Use this screen to configure IPv6 firewall rules.
<b>Application</b>		
SMS	SMS	Use this screen to send and view the text messages that the Zyxel Device received from mobile devices or the service provider.
<b>Management</b>		
Remote MGMT	WWW	Use this screen to change your Zyxel Device's remote management settings.
	Remote Management	Use this screen to configure through which IP address can access the Zyxel Device.
Bandwidth Management	General	Use this screen to enable bandwidth management.
	Advanced	Use this screen to set the upstream bandwidth and edit a bandwidth management rule.
UPnP	UPnP	Use this screen to enable UPnP on the Zyxel Device.
TR-069	TR-069	Use this screen to configure your Zyxel Device to be managed by an ACS.
<b>Maintenance</b>		
General	General	Use this screen to view and change administrative settings such as system and domain names.
Account	User Account	Use this screen to change the user name and password of your Zyxel Device.
Time	Time Setting	Use this screen to change your Zyxel Device's time and date.
Telnet from LAN	Telnet from LAN	This screen is for troubleshooting only.
Firmware Upgrade	Firmware Upgrade	Use this screen to upload firmware to your Zyxel Device.
Backup/Restore	Backup/Restore	Use this screen to backup and restore the configuration or reset the factory defaults to your Zyxel Device.
Restart	System Restart	This screen allows you to reboot the Zyxel Device without turning the power off.

## 2.4 Status Screen


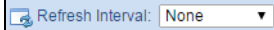





Click  to open the **Status** screen.

Figure 10 Status Screen

The following table describes the icons shown in the **Status** screen.

Table 8 Status Screen Icon Key

ICON	DESCRIPTION
	Select a number of seconds or <b>None</b> from the drop-down list box to refresh all screen statistics automatically at the end of every time interval or to not refresh the screen statistics.
	Click this button to refresh the status screen statistics.
	Click this icon to see the <b>Status</b> page. The information in this screen depends on the device mode you select.
	Click this icon to see the <b>Monitor</b> navigation menu.
	Click this icon to see the <b>Configuration</b> navigation menu.
	Click this icon to see the <b>Maintenance</b> navigation menu.

The following table describes the labels shown in the **Status** screen.

Table 9 Status Screen

LABEL	DESCRIPTION
Device Information	
Host Name	This is the <b>System Name</b> you enter in the <b>Maintenance &gt; General</b> screen. It is for identification purposes.
Model Number	This is the model name of your device.
Firmware Version	This is the firmware version and the date created.
WAN Information	
MAC Address	This shows the WAN Ethernet adapter MAC Address of your device.
IP Address	This shows the WAN port's IP address.
IP Subnet Mask	This shows the WAN port's subnet mask.
Default Gateway	This shows the WAN port's gateway IP address.
IPv6 Address	This shows the IPv6 address of the Zyxel Device on the WAN.
Operation Band	This shows the network type and the frequency band used by the mobile network to which the Zyxel Device is connecting.
LAN Information	
MAC Address	This shows the LAN Ethernet adapter MAC Address of your device.
IP Address	This shows the LAN port's IP address.
IP Subnet Mask	This shows the LAN port's subnet mask.
DHCP	This shows the LAN port's DHCP role - <b>Server</b> or <b>Disable</b> .
IPv6 Address	This shows the IPv6 address of the Zyxel Device on the LAN.
WLAN Information	
WLAN OP Mode	This is the device mode to which the Zyxel Device's wireless LAN is set - <b>Access Point Mode</b> .
MAC Address	This shows the 2.4GHz wireless adapter MAC Address of your device.
SSID	This shows a descriptive name used to identify the Zyxel Device in the 2.4GHz wireless LAN.
Channel	This shows the channel number which you select manually.
System	This shows the wireless standards the Zyxel Device supports.
Security	This shows the level of wireless security the Zyxel Device is using.
Firewall	This shows whether the firewall is enabled or not.
Summary	
Packet Statistics	Click <b>Details...</b> to go to the <b>Monitor &gt; Packet Statistics</b> screen ( <a href="#">Section on page 48</a> ). Use this screen to view port status and packet specific statistics.
WLAN Station Status	Click <b>Details...</b> to go to the <b>Monitor &gt; WLAN Station Status</b> screen ( <a href="#">Section 5.7 on page 50</a> ). Use this screen to view the wireless stations that are currently associated to the Zyxel Device's 2.4GHz wireless LAN.
LTE Modem Status	Click <b>Details...</b> to go to the <b>Monitor &gt; LTE Modem Status</b> screen ( <a href="#">Section 5.7 on page 50</a> ). Use this screen to view the detailed information about the LTE module, cellular interface, and SIM card. You can also view the LTE connection status.
System Status	
Item	This column shows the type of data the Zyxel Device is recording.
Data	This column shows the actual data recorded by the Zyxel Device.
System Up Time	This is the total time the Zyxel Device has been on.
Current Date/Time	This field displays your Zyxel Device's present date and time.

Table 9 Status Screen (continued)

LABEL	DESCRIPTION
System Resource	
- CPU Usage	This displays what percentage of the Zyxel Device's processing ability is currently used. When this percentage is close to 100%, the Zyxel Device is running at full load, and the throughput is not going to improve anymore. If you want some applications to have more throughput, you should turn off other applications (for example, using bandwidth management.)
- Memory Usage	This shows what percentage of the heap memory the Zyxel Device is using.
Interface Status	
Interface	This displays the Zyxel Device port types. The port types are: <b>WAN</b> , <b>LAN</b> and <b>WLAN</b> .
Status	For the LAN and WAN ports, this field displays <b>Down</b> (line is down) or <b>Up</b> (line is up or connected).  For the 2.4GHz WLAN, it displays <b>Up</b> when the 2.4GHz WLAN is enabled or <b>Down</b> when the 2.4G WLAN is disabled.
Rate	For the LAN ports, this displays the port speed or is left blank when the line is disconnected.  For the WAN port, it always displays the maximum transmission rate.  For the 2.4GHz WLAN, it displays the maximum transmission rate when the WLAN is enabled and is left blank when the WLAN is disabled.

# CHAPTER 3

## Setup Wizard

### 3.1 Overview


This chapter provides information on the wizard setup screens in the Web Configurator.

The Web Configurator's wizard helps you configure your device to access the Internet and change the wireless LAN settings. Refer to your ISP for your Internet account information. Leave a field blank if you don't have that information.

### 3.2 Accessing the Wizard

- 1 Launch your web browser and type "http://192.168.1.1" as the website address. Type "admin" (default) as the user name, "1234" (default) as the password and click **Login**.
- 2 Click the **Wizard** icon in the top right corner of the web configurator to open the Wizard screen.

 
Figure 11 Title Bar: Wizard icon



### 3.3 Wizard Setup


- 1 The first wizard screen displays showing the main steps in the wizard setup. Click **Next** to proceed with the time zone setup screen.

Figure 12 Wizard: Start

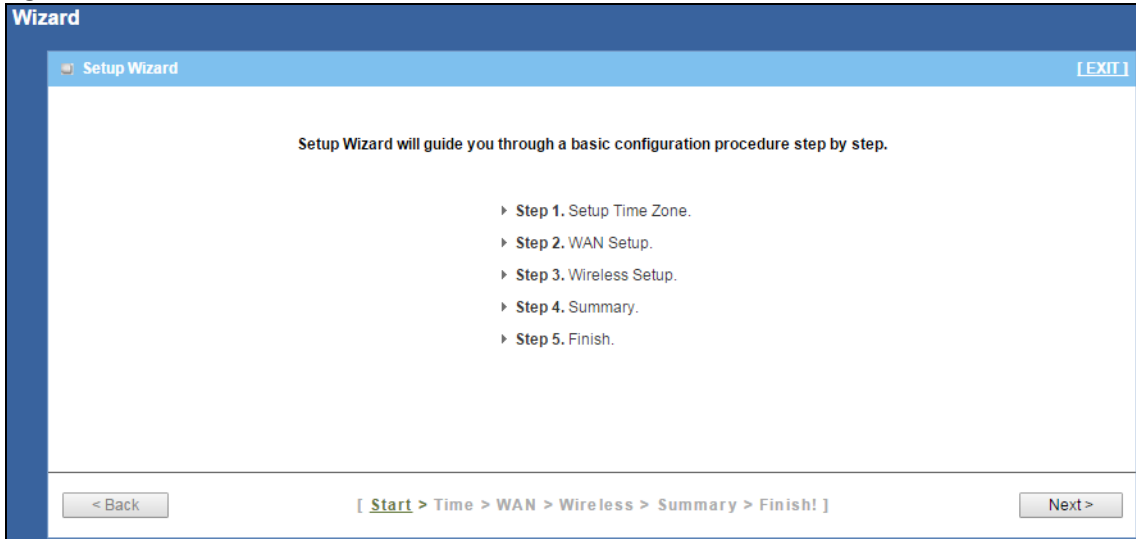

- 2 The Zyxel Device automatically detects your location and displays the correct time zone. If the result is not correct, click **Detect Again** or manually select the time zone of Zyxel Device's location and click **Next**.

Figure 13 Wizard: Time

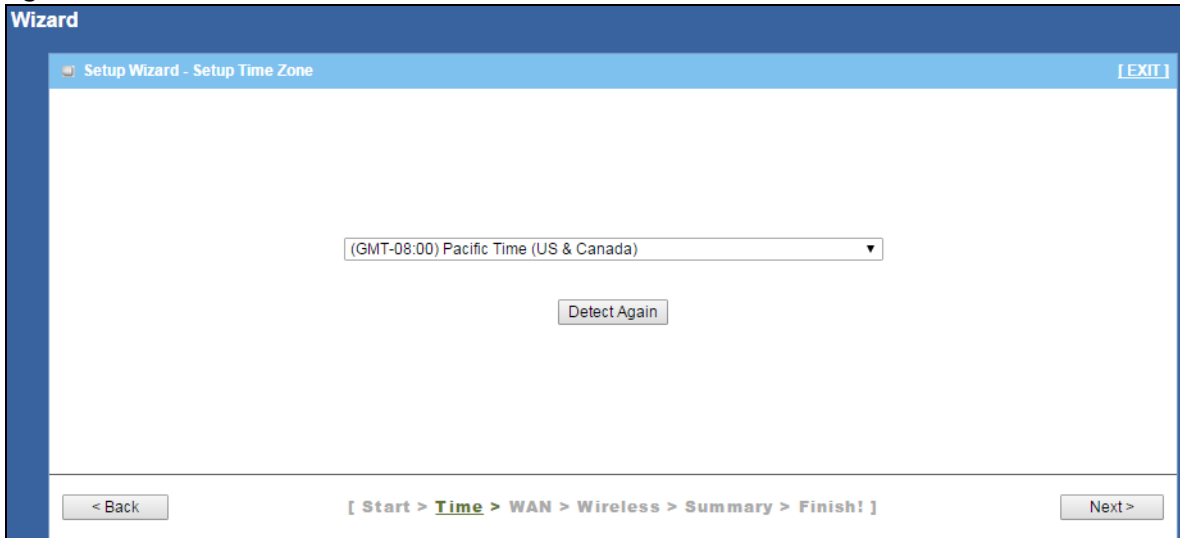

- 3 Enter your APN (Access Point Name) provided by your service provider. Select the country where the Zyxel Device is located and your service provider name. Click **Next**.

Figure 14 Wizard: WAN

**Wizard**

Setup Wizard - Internet Configuration [EXIT]

The current connection type is set to LTE.

▶ APN Name

▶ Country

▶ Service Provider

< Back [ Start > Time > **WAN** > Wireless > Summary > Finish! ] Next >

- Use this screen to enable or disable the Zyxel Device's wireless LAN, and enter the wireless network name (SSID). Select a channel or use **Auto** to have the Zyxel Device automatically determine a channel to use. Click **Next**.

Figure 15 Wizard: Wireless Settings

**Wizard**

Setup Wizard - Wireless settings [EXIT]

▶ Wireless Module  Enable  Disable

▶ Network ID(SSID)

▶ Channel

< Back [ Start > Time > WAN > **Wireless** > Summary > Finish! ] Next >

- Select **WPA2-PSK** and enter a pre-shared key from 8 to 63 case-sensitive characters for data encryption. The wireless clients which want to associate with this wireless network must have the same wireless security settings. Otherwise, select **No Security** to allow any client to associate with this network without any data encryption or authentication. Click **Next**.

Figure 16 Wizard: Wireless Security

Wizard

Setup Wizard - Wireless settings [EXIT]

▶ Security Mode WPA2-PSK ▼

▶ Pre-Shared Key 48A7B141263C1

< Back [ Start > Time > WAN > Wireless > Summary > Finish! ] Next >

- 6 Use the read-only summary table to check whether what you have configured is correct. Click **Apply Settings** to save your settings. Otherwise, click **Back** to go back to the previous screens.

Figure 17 Wizard: Summary

Wizard

Setup Wizard - Summary [EXIT]

Please confirm the information below

[ WAN Setting ]	
WAN Interface	WAN
WAN Type	3G/4G
APN	internet
[ Wireless Setting ]	
Wireless	Enable
SSID	ZyXEL_A2DD
Channel	Auto
Security Mode	WPA2-PSK
Pre-Shared Key	48A7B141263C1


Do you want to proceed the network testing?

< Back [ Start > Time > WAN > Wireless > Summary > Finish! ] Apply Settings

- 7 The system takes about 35 seconds to apply settings.




**Figure 18** Wizard: Apply Settings

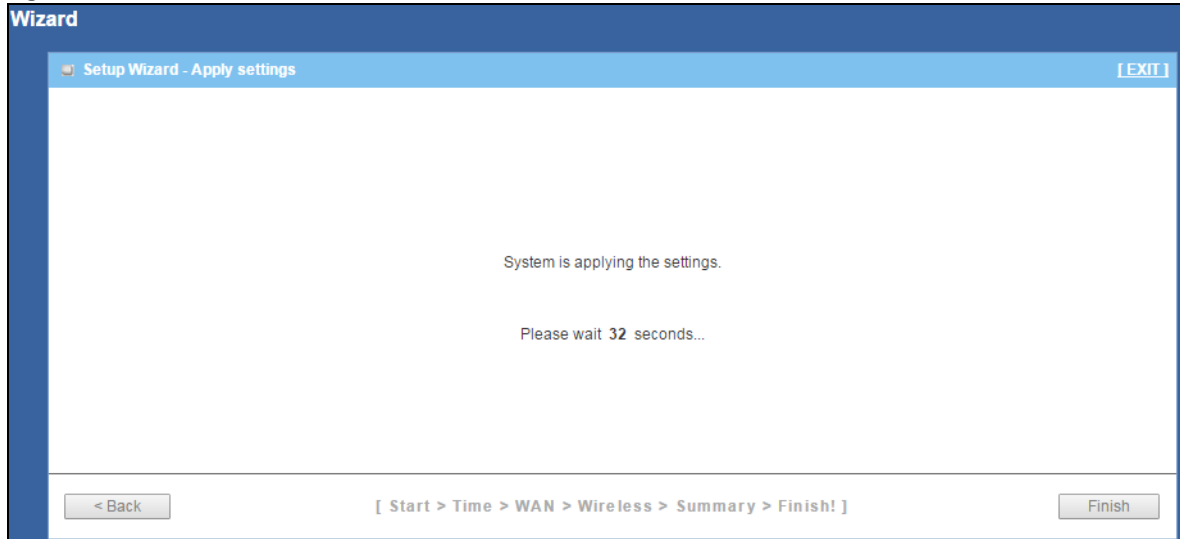

- 8 Click **Finish** to complete the wizard setup.

**Figure 19** Wizard: Finish

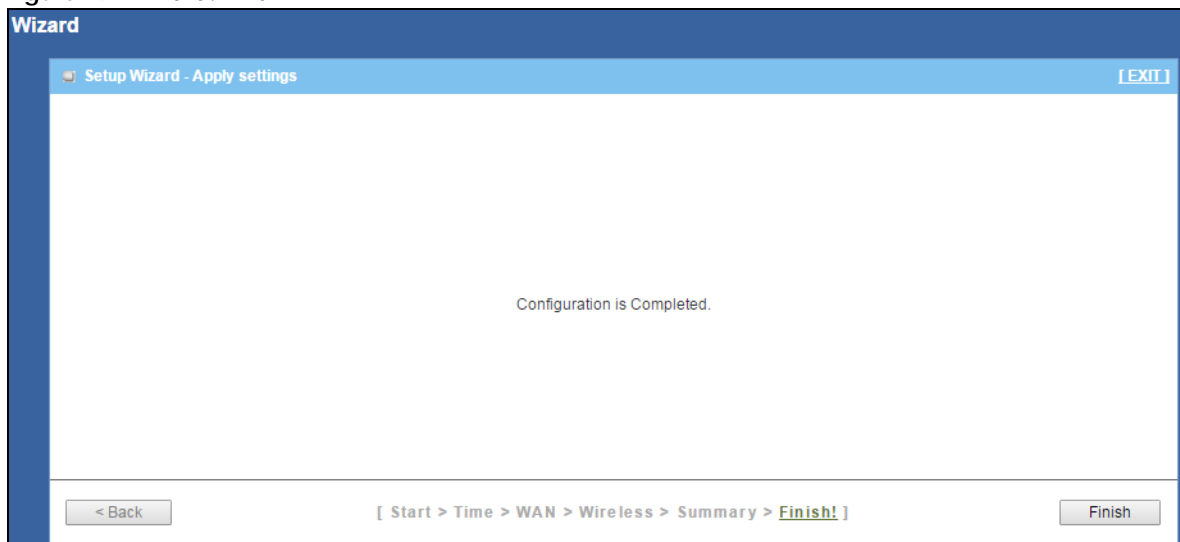

You are now ready to connect wirelessly to your Zyxel Device and access the Internet.

# CHAPTER 4

## Tutorials

### 4.1 Overview

This chapter provides tutorials for setting up your Zyxel Device.

- [Set Up a Wireless Network Using WPS](#)
- [Connect to Zyxel Device Wireless Network without WPS](#)
- [Using Multiple SSIDs on the Zyxel Device](#)

### 4.2 Set Up a Wireless Network Using WPS

This section gives you an example of how to set up wireless network using WPS. This example uses the Zyxel Device as the AP and NWD210N as the wireless client which connects to a notebook.

Note: The wireless client must be a WPS-aware device (for example, a WPS USB adapter or PCI card).

There are two WPS methods for creating a secure connection via the web configurator or utility. This tutorial shows you how to do both.

- **Push Button Configuration (PBC)** - create a secure wireless network simply by pressing a button. See [Section 4.2.1 on page 34](#). This is the easier method.
- **PIN Configuration** - create a secure wireless network simply by entering a wireless client's PIN (Personal Identification Number) in the Zyxel Device's interface. See [Section 4.2.2 on page 35](#). This is the more secure method, since one device can authenticate the other.

#### 4.2.1 Push Button Configuration (PBC)

- 1 Make sure that your Zyxel Device is turned on. Make sure the **WIFI** button (at the rear panel of the Zyxel Device) is pushed in, and that the device is placed within range of your notebook.
- 2 Make sure that you have installed the wireless client (this example uses the NWD210N) driver and utility in your notebook.
- 3 In the wireless client utility, find the WPS settings. Enable WPS and press the WPS button (**Start** or **WPS** button)
- 4 Log into Zyxel Device's Web Configurator and press the **Push Button** in the **Configuration > Network > Wireless LAN 2.4G > WPS Station** screen.

Note: Your Zyxel Device has a WPS button located on its panel, as well as a WPS button in its configuration utility. Both buttons have exactly the same function; you can use one or the other.

Note: It doesn't matter which button is pressed first. You must press the second button within two minutes of pressing the first one.

The Zyxel Device sends the proper configuration settings to the wireless client. This may take up to two minutes. Then the wireless client is able to communicate with the Zyxel Device securely.

The following figure shows you an example to set up wireless network and security by pressing a button on both Zyxel Device and wireless client (the NWD210N in this example).

**Figure 20** Example WPS Process: PBC Method  
**Wireless Client**



## 4.2.2 PIN Configuration

When you use the PIN configuration method, you need to use both Zyxel Device's configuration interface and the client's utilities.


- 1 Launch your wireless client's configuration utility. Go to the WPS settings and select the PIN method to get a PIN number.
- 2 Enter the PIN number to the **PIN** field in the **Configuration > Network > Wireless LAN > WPS Station** screen on the Zyxel Device.
- 3 Click **Start** buttons (or button next to the PIN field) on both the wireless client utility screen and the Zyxel Device's **WPS Station** screen within two minutes.

The Zyxel Device authenticates the wireless client and sends the proper configuration settings to the wireless client. This may take up to two minutes. Then the wireless client is able to communicate with the Zyxel Device securely.

The following figure shows you the example to set up wireless network and security on Zyxel Device and wireless client (ex. NWD210N in this example) by using PIN method.

**Figure 21** Example WPS Process: PIN Method

### Wireless Client

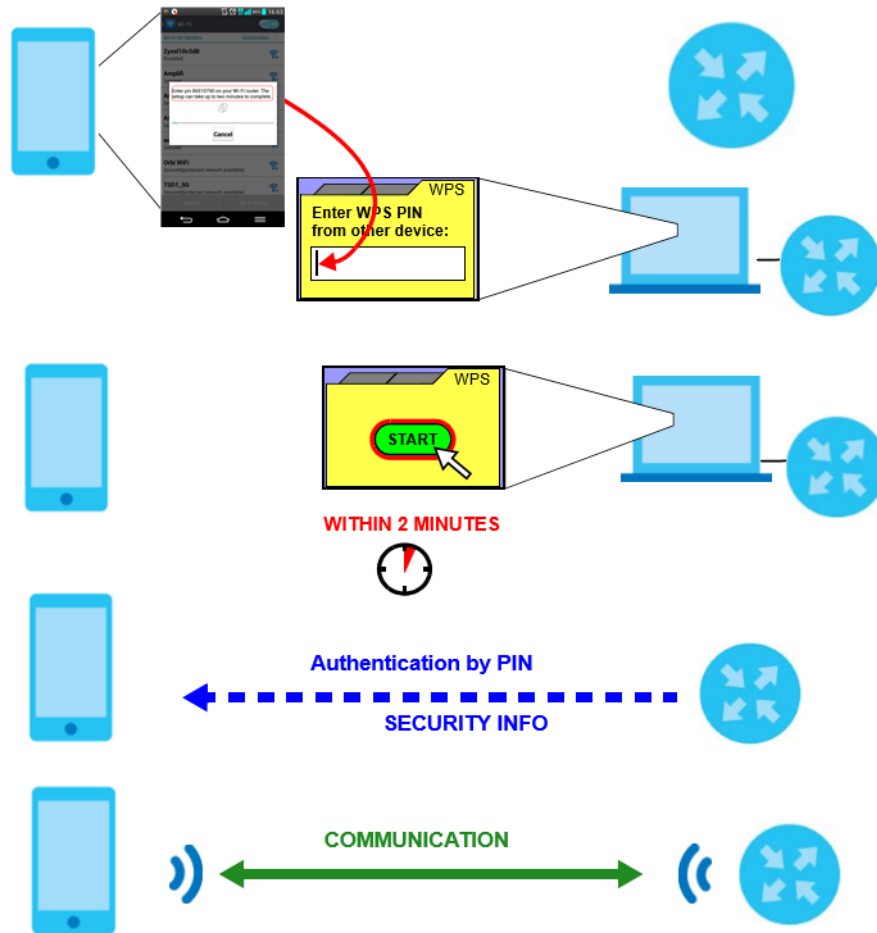

## 4.3 Connect to Zyxel Device Wireless Network without WPS

This example shows you how to configure wireless security settings with the following parameters on your Zyxel Device and connect your computer to the Zyxel Device wireless network.

SSID	SSID_Example3
------	---------------

<b>Channel</b>	6
<b>Security</b>	WPA2-PSK (Pre-Shared Key: ThisismyWPA-PSKpre-sharedkey)

Follow the steps below to configure the wireless settings on your Zyxel Device.

The instructions require that your hardware is connected (see the Quick Start Guide) and you are logged into the Web Configurator through your LAN connection (see [Section 2.2 on page 19](#)).

- 1 Make sure the **WIFI** button (at the rear panel of the Zyxel Device) is pushed in.
- 2 Open the **Configuration > Network > Wireless LAN > General** screen in the AP's Web Configurator.
- 3 Confirm that the wireless LAN is enabled on the Zyxel Device.
- 4 Enter **SSID\_Example3** as the SSID and select **Channel-06** as the channel. Set security mode to **WPA2-PSK** and enter **ThisismyWPA-PSKpre-sharedkey** in the **Pre-Shared Key** field. Click **Apply**.

The screenshot shows the 'Wireless Setup' configuration page. The 'Wireless LAN Status' is set to 'Enable'. The 'Name (SSID)' is 'SSID\_Example3'. The 'Channel Selection' is 'Channel-6 2437MHz'. The 'Security Mode' is 'WPA2-PSK'. The 'Pre-Shared Key' is 'ThisismyWPA-PSKpre-sharedkey'. The 'Group Key Update Timer' is '3600 seconds'. A note states: 'Note: No Security and WPA2-PSK can be configured when WPS enabled.'

- 5 Open the **Status** screen. Verify your wireless and wireless security settings under **WLAN Information** and check if the WLAN connection is up under **Interface Status**.

**Status** Refresh Interval: None Refresh Now

Device Information	
Item	Data
Host Name:	LTE3301
Model Number:	LTE3301
Firmware Version:	V1.00(ABLG.3)b3
WAN Information	
- MAC Address:	B8:EC:A3:EC:8F:1C
- IP Address:	0.0.0.0
- IP Subnet Mask:	0.0.0.0
- Default Gateway:	0.0.0.0
- IPv6 Address:	
- Operation Band:	
LAN Information:	
- MAC Address:	B8:EC:A3:EC:8F:1D
- IP Address:	192.168.1.1
- IP Subnet Mask:	255.255.255.0
- DHCP:	Server
- IPv6 Address:	
WLAN Information:	
- WLAN OP Mode:	Access Point Mode
- MAC Address:	B8:EC:A3:EC:8F:1D
- SSID:	Zyxel_8F1D
- Channel:	3
- System:	B/G/N Mixed
- Security:	WPA2-PSK
Firewall:	Enable

System Status	
Item	Data
System Up Time:	0day 2hr 31min 52sec
Current Date/Time:	2013-1-1/03:32:53
System Resource:	
- CPU Usage:	<div style="width: 79%;"></div> 79%
- Memory Usage:	<div style="width: 60%;"></div> 60%

Interface Status		
Interface	Status	Rate
WAN	Down	150M
LAN 1	Up	100M
LAN 2	Down	
LAN 3	Down	
LAN 4	Down	
WLAN	Down	

**Summary**

[Packet Statistics\(Details...\)](#)

[WLAN Station Status\(Details...\)](#)

[LTE Modem Status\(Details...\)](#)


### 4.3.1 Configure Your Notebook

Note: In this example, we use the ZyXEL NWD6505 wireless adapter as the wireless client.


- 1 The Zyxel Device supports IEEE 802.11b, IEEE 802.11g, and IEEE 802.11n wireless clients. Make sure that your notebook or computer's wireless adapter supports one of these standards.
- 2 Wireless adapters come with software sometimes called a "utility" that you install on your computer. See your wireless adapter's User's Guide for information on how to do that.
- 3 After you've installed the driver and attached the NWD6505 to your computer's USB port, right-click the **Wireless Network Connection** icon in your computer's system tray, select and click **View Available Wireless Networks**.




- The **Wireless Network Connection** screen displays. Click **Refresh network list** to view the available wireless APs within range.
- Select **SSID\_Example3** and click **Connect**.

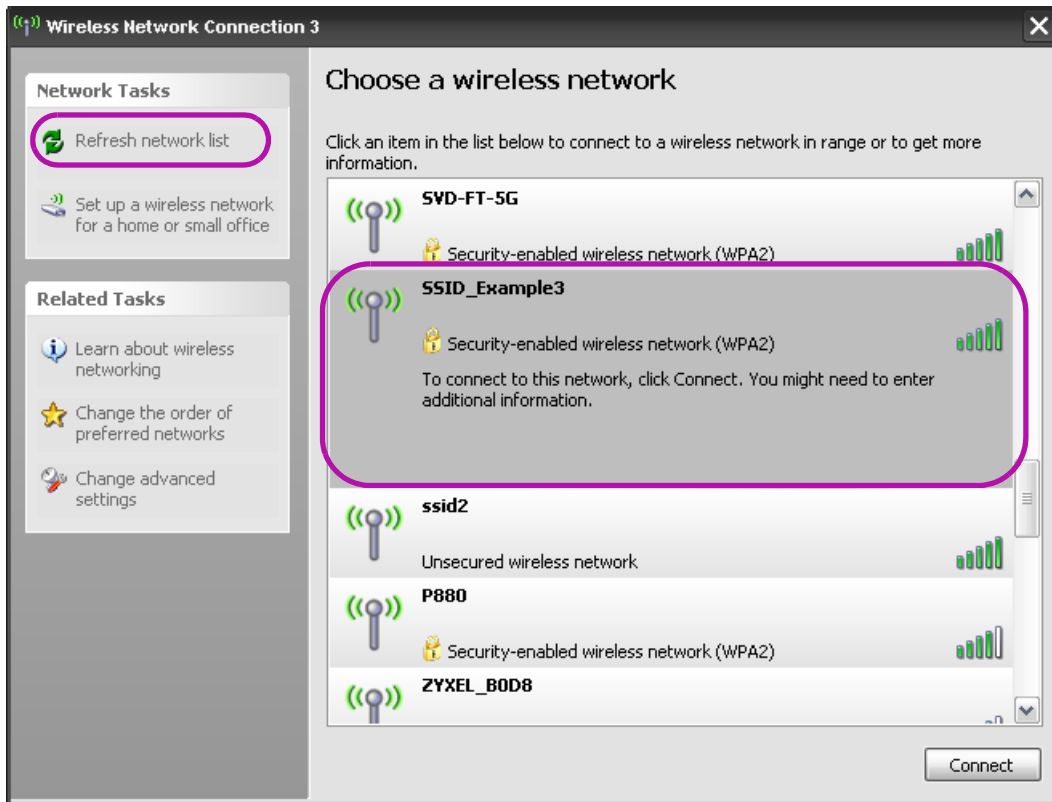

- Type the security key in the following screen. Click **Connect**.

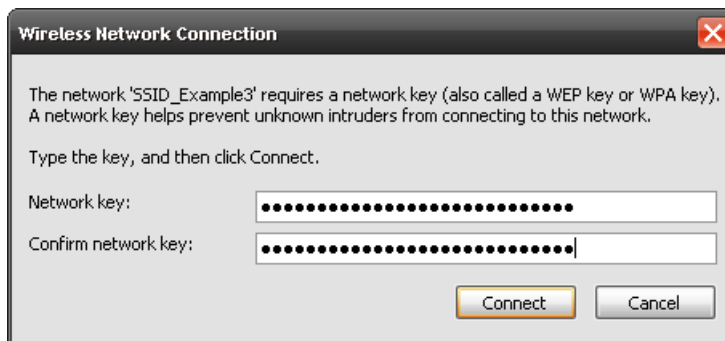

- Check the status of your wireless connection in the screen below.

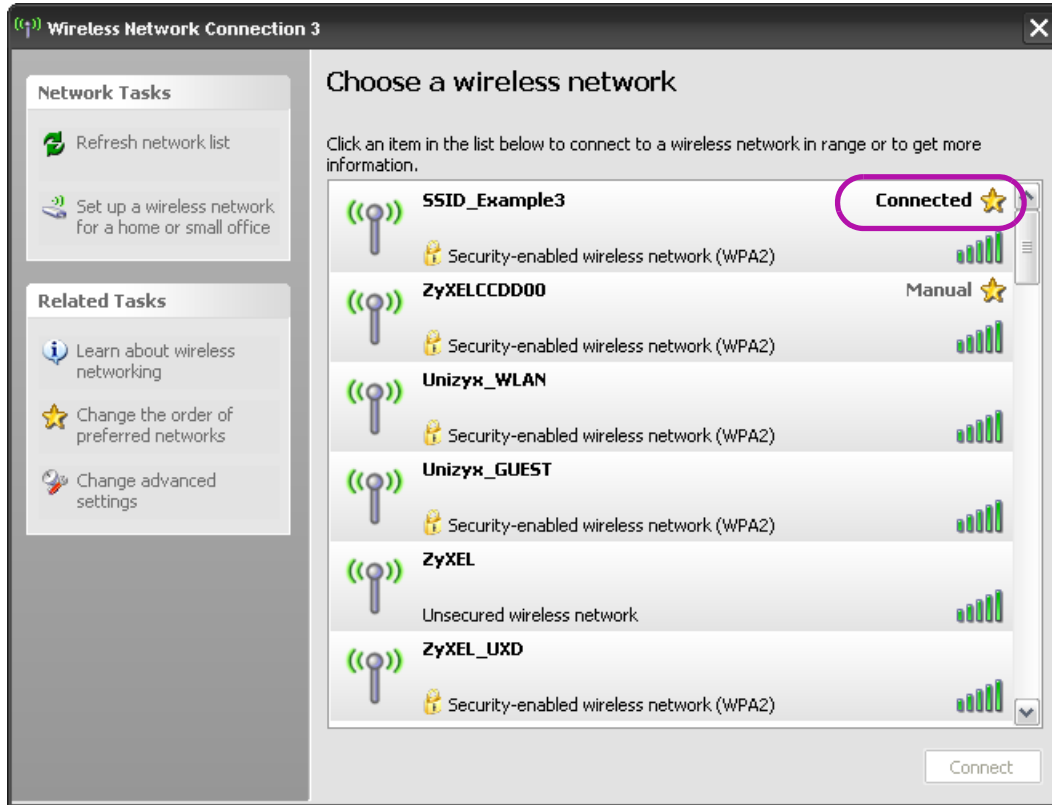

- 8 If the wireless client keeps trying to connect to or acquiring an IP address from the Zyxel Device, make sure you entered the correct security key.

If the connection has limited or no connectivity, make sure the DHCP server is enabled on the Zyxel Device.

If your connection is successful, open your Internet browser and enter <http://www.zyxel.com> or the URL of any other web site in the address bar. If you are able to access the web site, your wireless connection is successfully configured.

## 4.4 Using Multiple SSIDs on the Zyxel Device


You can configure more than one SSID on a Zyxel Device. See [Section 7.4 on page 70](#).

This allows you to configure multiple independent wireless networks on the Zyxel Device as if there were multiple APs (virtual APs). Each virtual AP has its own SSID, and wireless security type. That is, each SSID on the Zyxel Device represents a different access point/wireless network to wireless clients in the network.

Clients can associate only with the SSIDs for which they have the correct security settings. Clients using different SSIDs can access the Internet and the wired network behind the Zyxel Device (such as a printer).



For example, you may set up three wireless networks (A, B and C) in your office. A is for workers, B is for guests and C is specific to a VoIP device in the meeting room.

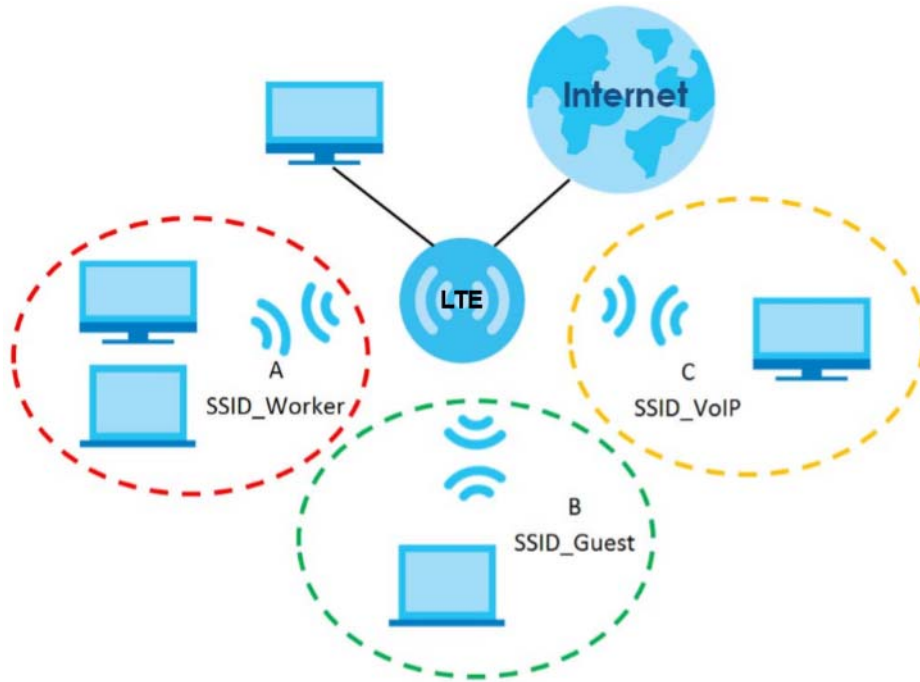

### 4.4.1 Configuring Security Settings of Multiple SSIDs


The Zyxel Device is in router mode by default.

This example shows you how to configure the SSIDs with the following parameters on your Zyxel Device

SSID	SECURITY TYPE	KEY
SSID_Worker	WPA2-PSK WPA Compatible	DoNotStealMyWirelessNetwork
SSID_VoIP	WPA-PSK	VoIPOnly12345678
SSID_Guest	WPA-PSK	keyexample123

- 1 Connect your computer to the LAN port of the Zyxel Device using an Ethernet cable.
- 2 The default IP address of the Zyxel Device is "192.168.1.1". In this case, your computer must have an IP address in the range between "192.168.1.2" and "192.168.1.254".
- 3 Click **Start > Run** on your computer in Windows. Type "cmd" in the dialog box. Enter "ipconfig" to show your computer's IP address. If your computer's IP address is not in the correct range then see [Appendix A on page 145](#) for information on changing your computer's IP address.
- 4 After you've set your computer's IP address, open a web browser such as Internet Explorer and type "http://192.168.1.1" as the web address in your web browser.
- 5 Enter "admin" as the user name and "1234" (default) as the password and click **Login**.
- 6 Type a new password and retype it to confirm, then click **Apply**. Otherwise, click **Ignore**.

- 7 Go to **Configuration > Network > Wireless LAN > More AP**. Click the **Edit** icon of the first entry to configure wireless and security settings for **SSID\_Worker**.

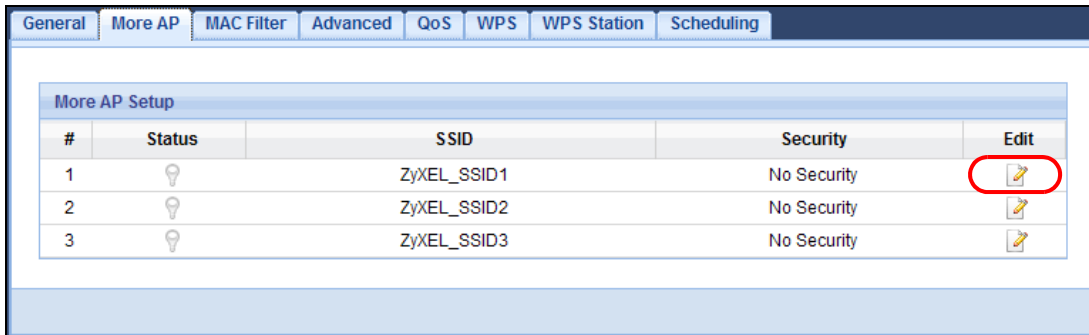

- 8 Configure the screen as follows. In this example, you enable **Intra-BSS Traffic** for **SSID\_Worker** to allow wireless clients in the same wireless network to communicate with each other. Click **Apply**.

**Wireless Setup**

Active:

Name (SSID):

Hide SSID

Intra-BSS Traffic

WMM QoS

---

**Security**

Security Mode:


WPA-PSK Compatible

Pre-Shared Key:

Group Key Update Timer:  seconds

No Security and WPA2-PSK can be configured when WPS enabled.

- 9 Click the **Edit** icon of the second entry to configure wireless and security settings for **SSID\_VoIP**.

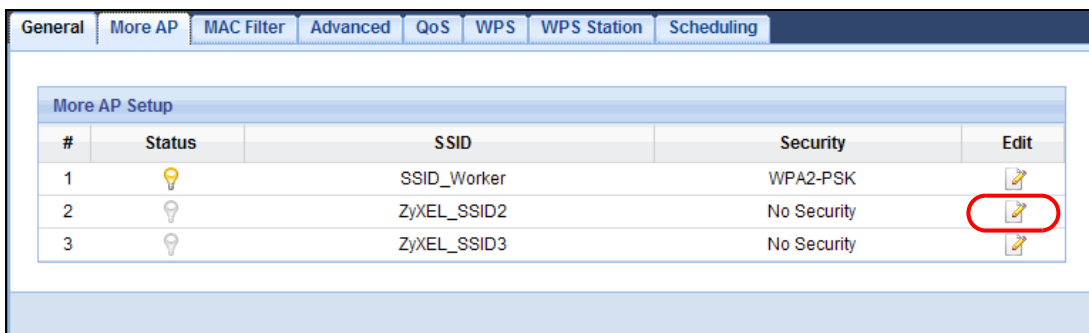

- 10 Configure the screen as follows. You do not enable **Intra-BSS Traffic** for **SSID\_VoIP**. Click **Apply**.

**Wireless Setup**

Active :

Name (SSID) :

Hide SSID

Intra-BSS Traffic

WMM QoS

---


**Security**

Security Mode :







WPA-PSK Compatible

Pre-Shared Key

Group Key Update Timer  seconds

 Note: No Security and WPA2-PSK can be configured when WPS enabled.

- 11 Click the **Edit** icon of the third entry to configure wireless and security settings for **SSID\_Guest**.

More AP Setup				
#	Status	SSID	Security	Edit
1		SSID_Worker	WPA2-PSK	
2		SSID_VoIP	WPA-PSK	
3		ZyXEL_SSID3	No Security	

- 12 Configure the screen as follows. In this example, you enable **Intra-BSS Traffic** for **SSID\_Guest** to allow wireless clients in the same wireless network to communicate with each other. Click **Apply**.

**Wireless Setup**

Active :

Name (SSID) :

Hide SSID

Intra-BSS Traffic

WMM QoS

---

**Security**


Security Mode :

---

WPA-PSK Compatible

Pre-Shared Key

Group Key Update Timer  seconds

 **Note:** No Security and WPA2-PSK can be configured when WPS enabled.

---

# PART II

## Technical Reference

---

# CHAPTER 5

## Monitor

### 5.1 Overview

This chapter discusses read-only information related to the device state of the Zyxel Device.

To access the Monitor screens, click  after login.



You can also click the links in the **Summary** table of the **Status** screen to view the packets sent/received as well as the status of wireless clients connected to the Zyxel Device.

### 5.2 What You Can Do

- Use the **Log** screen to see the logs for the activity on the Zyxel Device ([Section 5.3 on page 46](#)).
- Use the **DHCP Table** screen to view information related to your DHCP status ([Section 5.4 on page 47](#)).
- Use the **ARP Table** screen to view the IPv4-to-MAC address mapping(s) for each device connected to the Zyxel Device ([Section 5.5 on page 48](#)).
- Use the **Packet Statistics** screen to view port status, packet specific statistics, the "system up time" and so on ([Section 5.6 on page 49](#)).
- Use the **WLAN Station Status** screen to view the wireless stations that are currently associated to the Zyxel Device ([Section 5.7 on page 50](#)).
- Use the **LTE Modem Status** screen to view the detailed information about the LTE module, cellular interface, and SIM card. You can also check the LTE connection status ([Section 5.8 on page 51](#)).


### 5.3 The Log Screen

The Web Configurator allows you to look at all of the Zyxel Device's logs in one location.

#### 5.3.1 View Log


Use the **View Log** screen to see the logged messages for the Zyxel Device. The log wraps around and deletes the old entries after it fills. Select what logs you want to see in the **Log Setting** screen. Click **Refresh** to renew the log screen. Click **Clear Log** to delete all the logs.

Figure 22 View Log

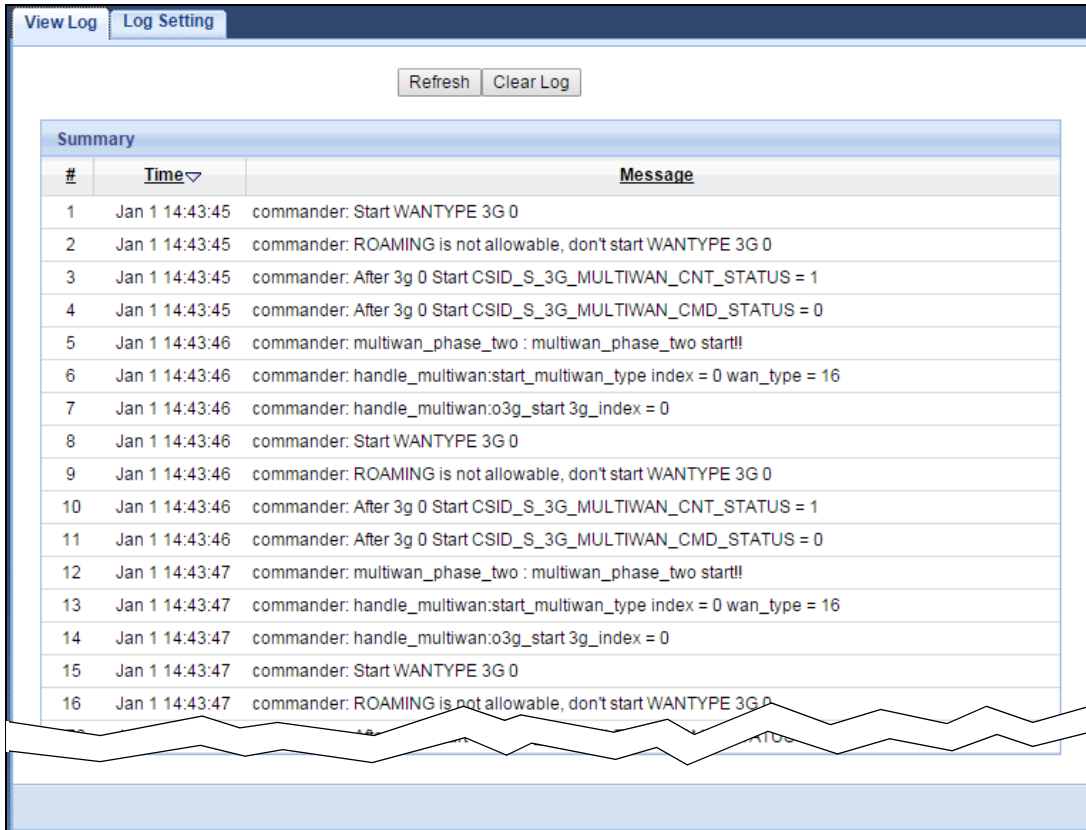

You can configure which logs to display in the **View Log** screen. Go to the **Log Setting** screen and select the logs you wish to display. Click **Apply** to save your settings. Click **Cancel** to start the screen afresh.

Figure 23 Log Settings

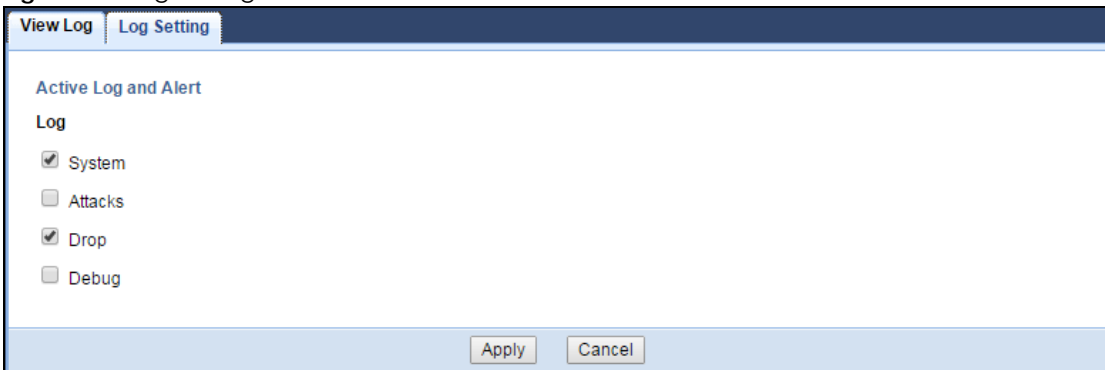

## 5.4 DHCP Table Screen

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a server. You can configure the Zyxel Device's LAN as a DHCP server or disable it. When configured as a server, the Zyxel Device provides the TCP/IP configuration for the clients. If DHCP service is disabled, you must have another DHCP server on that network, or else the computer must be manually configured.

Click **Monitor > DHCP Table** or **Configuration > Network > DHCP Server > Client List**. Read-only information here relates to your DHCP status. The DHCP table shows current DHCP client information (including **MAC Address**, and **IP Address**) of all network clients using the Zyxel Device's DHCP server.

**Figure 24** Monitor > DHCP Table

DHCP Table					
#	Status	Host Name	IP Address	MAC Address	Reserve
1		twpc	192.168.1.46	00:21:85:0c:44:4b	<input type="checkbox"/>

The following table describes the labels in this screen.

Table 10 Monitor > DHCP Table

LABEL	DESCRIPTION
#	This is the index number of the host computer.
Status	This field displays whether the connection to the host computer is up (a yellow bulb) or down (a gray bulb).
Host Name	This field displays the computer host name.
IP Address	This field displays the IP address relative to the # field listed above.
MAC Address	This field shows the MAC address of the computer with the name in the <b>Host Name</b> field.  Every Ethernet device has a unique MAC (Media Access Control) address which uniquely identifies a device. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.
Reserve	Select this if you want to reserve the IP address for this specific MAC address.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 5.5 ARP Table Screen

Address Resolution Protocol (ARP) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address, also known as a Media Access Control or MAC address, on the local area network.

An IP (version 4) address is 32 bits long. MAC addresses are 48 bits long. The ARP Table maintains an association between each MAC address and its corresponding IP address.

Use the ARP table to view the IPv4-to-MAC address mapping(s) for each device connected to the Zyxel Device. The neighbor table shows the IPv6-to-MAC address mapping(s) of each neighbor. To open this screen, click **Monitor > ARP Table**.



Figure 25 Monitor &gt; ARP Table

#	IP Address	MAC Address	Device	State
1	192.168.1.34	74:27:ea:2b:fa:aa	br0	REACHABLE

Refresh

Table 11 Monitor &gt; ARP Table

LABEL	DESCRIPTION
#	This is the ARP or neighbor table entry.
IP Address	This is the learned IPv4 or IPv6 IP address of a device connected to a port on the Zyxel Device.
MAC Address	This is the MAC address of the device with the listed IP address.
Device	This is the name of the Zyxel Device's interface to which the device is connected.
State	This column shows the current status of the connection.
Refresh	Click <b>Refresh</b> to update this screen.

## 5.6 Packet Statistics Screen

Click **Monitor > Packet Statistics** or the **Packet Statistics (Details...)** hyperlink in the **Status** screen. Read-only information here includes port status, packet specific statistics and the "system up time". The **Poll Interval(s)** field is configurable and is used for refreshing the screen.

Figure 26 Monitor &gt; Packet Statistics

Port	Status	TxPkts	RxPkts	Collisions	Tx B/s	Rx B/s	Up Time
WAN	Down	0	0	N/A	N/A	N/A	23:3:21
LAN	Down	15406	67359	0	0	0	23:3:21
WLAN	300M	25641	27635	0	27	0	23:3:21

System Up Time : 23:3:21

Poll Interval(s) :

The following table describes the labels in this screen.


Table 12 Monitor > Packet Statistics

LABEL	DESCRIPTION
Port	This is the Zyxel Device's interface type.
Status	For the LAN ports, this displays the port speed and duplex setting or <b>Down</b> when the line is disconnected.  For the WAN port, it displays <b>Up</b> when the mobile data connection is up, <b>Connecting</b> when the Zyxel Device is trying to bring the mobile data connection up, and displays <b>Down</b> when the 3G/4G connection is down or not activated.  For the WLAN, it displays the maximum transmission rate when the WLAN is enabled and <b>Down</b> when the WLAN is disabled.
TxPkts	This is the number of transmitted packets on this port.
RxPkts	This is the number of received packets on this port.
Collisions	This is the number of collisions on this port.
Tx B/s	This displays the transmission speed in bytes per second on this port.
Rx B/s	This displays the reception speed in bytes per second on this port.
Up Time	This is the total time the Zyxel Device has been for each session.
System Up Time	This is the total time the Zyxel Device has been on.
Poll Interval(s)	Enter the time interval in seconds for refreshing statistics in this field.
Set Interval	Click this button to apply the new poll interval you entered in the <b>Poll Interval(s)</b> field.
Stop	Click <b>Stop</b> to stop refreshing statistics.

## 5.7 WLAN Station Status Screen

Click **Monitor > WLAN Station Status** or the **WLAN Station Status (Details...)** hyperlink in the **Status** screen. View the wireless stations that are currently associated to the Zyxel Device's 2.4GHz wireless network in the **Association List**. Association means that a wireless client (for example, your network or computer with a wireless network card) has connected successfully to the AP (or wireless router) using the same SSID, channel and security settings.

Figure 27 Monitor > WLAN Station Status

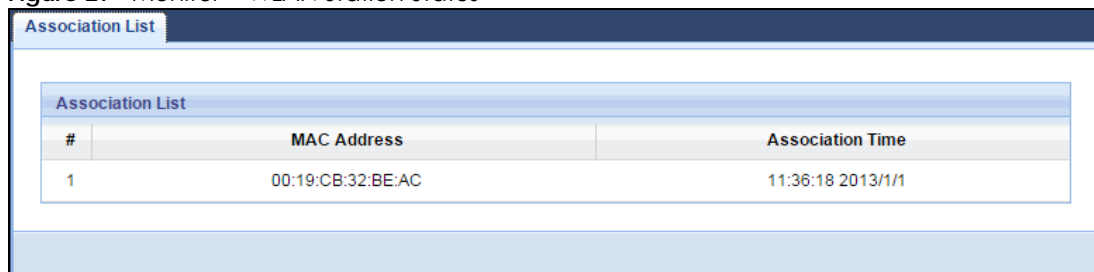

The screenshot shows a web interface titled "Association List". It contains a table with the following data:

#	MAC Address	Association Time
1	00:19:CB:32:BE:AC	11:36:18 2013/1/1

The following table describes the labels in this screen.

Table 13 Monitor > WLAN Station Status

LABEL	DESCRIPTION
#	This is the index number of an associated wireless station.

Table 13 Monitor &gt; WLAN Station Status (continued)

LABEL	DESCRIPTION
MAC Address	This field displays the MAC address of an associated wireless station.
Association Time	This field displays the time a wireless station first associated with the Zyxel Device's WLAN.

## 5.8 LTE Modem Status Screen

Click **Monitor > LTE Modem Status** or the **LTE Modem Status (Details...)** hyperlink in the **Status** screen. Use this screen to view the detailed information about the LTE module, cellular interface, and SIM card. You can also check the LTE connection status.

Figure 28 Monitor &gt; LTE Modem Status

Modem Information									
Physical Interface	Module Name	IMEI/MEID	HW Version	FW Version					
3G1	BM806U-E1	N/A	P520A_MB_V2.0	M1.0.0_E1.0.1_A1.2.2					
SIM Status									
SIM	PIN Code Status	PIN Code Remaining Times		PUK Code Remaining Times					
N/A	SIM card not insert	4294967293		4294967293					
Service Information									
Operator	Cell Broadcast	MCC	MNC	LAC	TAC	Cell ID	Service Type	Operation Band	RSSI
N/A	N/A	N/A	N/A	N/A	N/A	0	N/A	N/A	-
CS Register Status	Eclo	PS Register Status	PS Attached Status	Roaming Status	IMSI	SMSC	MSISDN		
Unregistered	-	Unregistered	Detached	Not Roaming	N/A	N/A	N/A		
RSRP	RSRQ	SINR	PLMN	MIMO	Support Band List				
N/A	N/A	N/A	N/A	1T2R	E-GSM 900/P-GSM 900/GSM 1800/WCDMA 2100/WCDMA 900/LTE 2100/LTE 1800+/LTE 2600/LTE 900 GSM/LTE 800 DD/LTE 700 APT/LTE TD 2600/LTE TD 2300				

The following table describes the labels in this screen.

Table 14 Monitor &gt; LTE Modem Status

LABEL	DESCRIPTION
Modem Information	
Physical Interface	This displays the interface used for the mobile data connection.
Module Name	This displays the name of the built-in LTE module.
IMEI/MEID	This displays the International Mobile Equipment Number (IMEI) or Mobile Equipment Identifier (MEID), which is the serial number of the built-in LTE module. It is a unique 15-digit number used to identify a mobile device.
HW Version	This displays the hardware version of the built-in LTE module.
FW Version	This displays the firmware version of the built-in LTE module.
SIM Status	
SIM	This displays the status of the inserted SIM card. <b>N/A</b> displays if there is no SIM card inserted.

Table 14 Monitor &gt; LTE Modem Status (continued)

LABEL	DESCRIPTION
PIN Code Status	This displays the status of PIN code authentication.
PIN Code Remaining Times	This displays how many times you can enter the PIN code.
PUK Code Remaining Times	This displays how many times you can enter the PUK code.
Service Information	
Operator	This displays the name of the service provider.
Cell Broadcast	This displays whether the one-to-many messaging service is available.
MCC	This displays the Mobile Country Code (MCC), which is used to identify the country of a mobile subscriber.
MNC	This displays the Mobile Network Code (MNC), which is used in combination with MCC to identify the public land mobile network (PLMN) of a mobile subscriber.
LAC	This displays the 2-octet Location Area Code (LAC), which is used to identify a location area within a PLMN.
TAC	This displays the Tracking Area Code (TAC), which is to identify a tracking area within a PLMN.
Cell ID	This displays the ID of a cell at the physical layer.
Service Type	This displays the type of the mobile network to which the Zyxel Device is connecting.
Operation Band	This displays the network type and the frequency band used by the mobile network to which the Zyxel Device is connecting.
RSSI	This displays the received signal strength indicator (RSSI), that is, the received signal strength in dBm.
CS Register Status	This displays the Circuit Switched network registration status.
Eclo	This displays the ratio (in dB) of the received energy per chip and the interference level.
PS Register Status	This displays the packet switched network registration status.
PS Attached Status	This displays the Packet switched Domain Attachment status.
Roaming Status	This displays whether the Zyxel Device is connected to another service provider's mobile network using roaming.
IMSI	This displays the International Mobile Subscriber Identity (IMSI) stored in the SIM (Subscriber Identity Module) card. The SIM card is installed in a mobile device and used for authenticating a customer to the carrier network. IMSI is a unique 15-digit number used to identify a user on a network.
SMSC	This displays the number for Short Message Service Center (SMSC), which stores, forwards and delivers SMS text message.
MSISDN	This displays the MSISDN (Mobile Subscriber ISDN) number, a phone number assigned to a mobile subscriber to call a mobile device.
RSRP	This displays the Reference Signal Receive Power (RSRP), which is the average received power of all Resource Elements (RE) that carry cell-specific Reference Signals (RS) within the specified bandwidth.
RSRQ	This displays the Reference Signal Received Quality (RSRQ), which is the ratio of RSRP to the E-UTRA carrier RSSI and indicates the quality of the received reference signal.
SINR	This displays the Signal to Interference plus Noise Ratio (SINR). A negative value means more noise than signal.
PLMN	This displays the Public Land Mobile Network (PLMN) code of the mobile network.
MIMO	This displays the MIMO (Multi-input Multi-output) technology supported by the Zyxel Device, such as 1T2R (1 Transmit and 2 Receive paths/antennas) or TM1-TM4 (Transmission Mode 4).
Support Band List	This displays the frequency bands that are supported by the Zyxel Device.

# CHAPTER 6

# WAN


## 6.1 Overview

This chapter discusses the Zyxel Device's **WAN** screens. Use these screens to configure your Zyxel Device for Internet access.

A WAN (Wide Area Network) connection is an outside connection to another network or the Internet. It connects your private networks such as a LAN (Local Area Network) and other networks, so that a computer in one location can communicate with computers in other locations.

3G and 4G standards for the sending and receiving of voice, video, and data in a mobile environment. You can insert a 4G SIM card and set the Zyxel Device to use this 3G/4G connection as your WAN.

**Figure 29** LAN/Wireless LAN and Wireless WAN

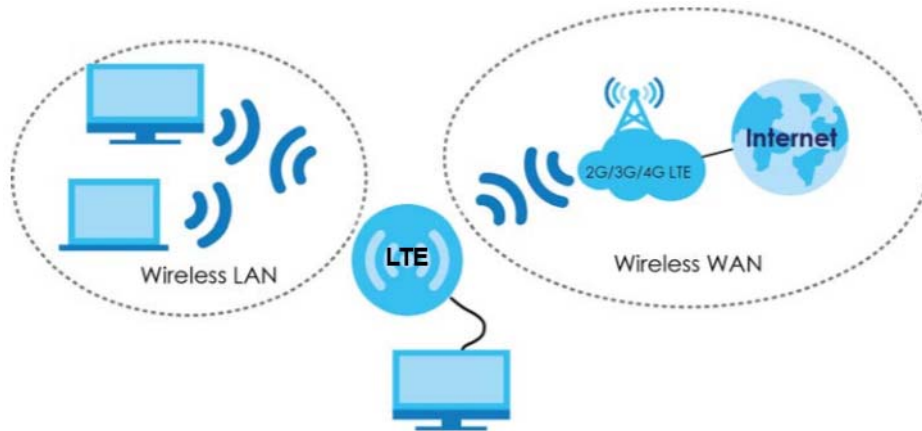

## 6.2 What You Can Do

- Use the **Management WAN** screen to configure 3G/4G WAN connection settings ([Section 6.4 on page 56](#)).
- Use the **Network Scan** screen to specify the type of the mobile network to which the Zyxel Device is connected and how you want the Zyxel Device to connect to an available mobile network ([Section 6.5 on page 59](#)).
- Use the **IPv6** screen to configure the Zyxel Device's IPv6 settings ([Section 6.6 on page 61](#)).
- Use the **PIN Management** screen to enable PIN authentication and configure the PIN code ([Section 6.7 on page 62](#)).

## 6.3 What You Need To Know

The information in this section can help you configure the screens for your WAN connection, as well as enable/disable some advanced features of your Zyxel Device.

### 3G

3G (Third Generation) is a digital, packet-switched wireless technology. Bandwidth usage is optimized as multiple users share the same channel and bandwidth is only allocated to users when they send data. It allows fast transfer of voice and non-voice data and provides broadband Internet access to mobile devices.

### 4G

4G is the fourth generation of the mobile telecommunications technology and a successor of 3G. Both the WiMAX and Long Term Evolution (LTE) standards are the 4G candidate systems. 4G only supports all-IP-based packet-switched telephony services and is required to offer gigabit speed access.

### DNS Server Address Assignment

Use Domain Name System (DNS) to map a domain name to its corresponding IP address and vice versa, for instance, the IP address of `www.zyxel.com` is `204.217.0.2`. The DNS server is extremely important because without it, you must know the IP address of a computer before you can access it.


The Zyxel Device can get the DNS server addresses in the following ways.

- 1 The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, manually enter them in the DNS server fields.
- 2 If your ISP dynamically assigns the DNS server IP addresses (along with the Zyxel Device's WAN IP address), set the DNS server fields to get the DNS server address from the ISP.

### Multicast

Traditionally, IP packets are transmitted in one of either two ways - Unicast (1 sender - 1 recipient) or Broadcast (1 sender - everybody on the network). Multicast delivers IP packets to a group of hosts on the network - not everybody and not just 1.

**Figure 30** Multicast Example

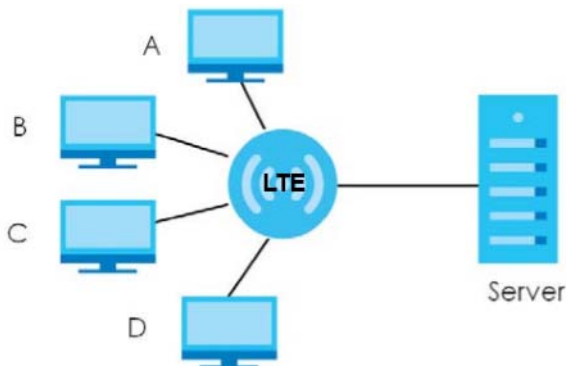

In the multicast example above, systems **A** and **D** comprise one multicast group. In multicasting, the server only needs to send one data stream and this is delivered to systems **A** and **D**.

IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a multicast group - it is not used to carry user data. The Zyxel Device supports both IGMP version 1 (**IGMP v1**), IGMP version 2 (**IGMP v2**) and IGMP version 3 (**IGMP v3**).

At start up, the Zyxel Device queries all directly connected networks to gather group membership. After that, the Zyxel Device periodically updates this information. IP multicasting can be enabled/disabled on the Zyxel Device WAN interface in the Web Configurator.

## IPv6 Introduction

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to  $3.4 \times 10^{38}$  IP addresses. The Zyxel Device can use IPv4/IPv6 dual stack to connect to IPv4 and IPv6 networks, and supports IPv6 rapid deployment (6RD).

## IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`, `2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

## IPv6 Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example,

```
2001:db8:1a2b:15::1a2f:0/32
```

means that the first 32 bits (`2001:db8`) is the subnet prefix.

## IPv6 Subnet Masking


Both an IPv6 address and IPv6 subnet mask compose of 128-bit binary digits, which are divided into eight 16-bit blocks and written in hexadecimal notation. Hexadecimal uses four bits for each character (1 ~ 10, A ~ F). Each block's 16 bits are then represented by four hexadecimal characters. For example, `FFFF:FFFF:FFFF:FFFF:FC00:0000:0000:0000`.

## IPv6 Rapid Deployment

Use IPv6 Rapid Deployment (6rd) when the local network uses IPv6 and the ISP has an IPv4 network. When the Zyxel Device has an IPv4 WAN address, you can enable 6rd to encapsulate IPv6 packets in IPv4 packets to cross the ISP's IPv4 network.

The Zyxel Device generates a global IPv6 prefix from its IPv4 WAN address and tunnels IPv6 traffic to the ISP's Border Relay router (BR in the figure) to connect to the native IPv6 Internet. The local network can also use IPv4 services. The Zyxel Device uses its configured IPv4 WAN IP to route IPv4 traffic to the IPv4 Internet.

Figure 31 IPv6 Rapid Deployment

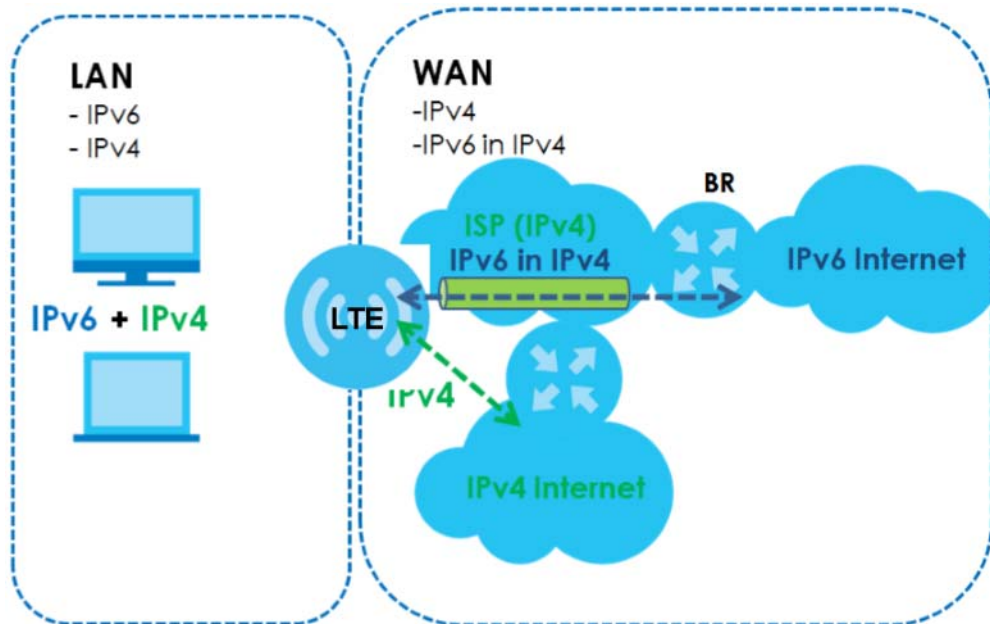

## 6.4 Management WAN Screen

The summary table shows you the WAN connection configured on the Zyxel Device. Click **Network > WAN > Management WAN** from the **Configuration** menu.

Figure 32 Network > WAN > Management WAN

Management WAN				
Management WAN Entries				
Interface	Type	IP Address	Status	Modify
WAN 1	3G/4G	IPv4: 0.0.0.0 IPv6:	IPv4 Disconnected IPv6 Disconnected	



The following table describes the labels in this screen.

Table 15 Network > WAN > Management WAN

LABEL	DESCRIPTION
Interface	This field displays the name of the WAN interface for this connection.
Type	This field displays the type of the WAN connection.
IP Address	This field displays the IPv4 and IPv6 addresses of the WAN connection.
Status	This field indicates whether the IPv4 and IPv6 connectivity is available.
Modify	Click the Edit icon to configure the WAN connection settings.

## 6.4.1 Management WAN Edit

Use this screen to change your Zyxel Device's 3G/4G WAN connection settings. Click the Edit icon in the **Network > WAN > Management WAN** screen.

Figure 33 Network > WAN > Management WAN Edit

The screenshot shows the 'Management WAN Edit' configuration page. At the top, there are tabs for 'Management WAN', 'Network Scan', 'IPv6', and 'PIN Management'. The main content area is titled 'ISP Parameters for Internet Access' and contains the following settings:

- Encapsulation:** 3G/4G
- 3G/4G Information:**
  - Dial-Up Profile:** Radio buttons for 'Auto-Detection' (selected) and 'Manual'.
  - Roaming:** 'Enable' checkbox.
  - Connection Control:** 'Auto Reconnect (always-on)' dropdown.
  - MTU:** Input field '0' with '(0 is auto)' text.
  - Network Monitoring:**
    - 'Enable' checkbox.
    - Radio buttons for 'DNS Query' and 'ICMP Checking' (selected).
    - 'Loading Check' checkbox.
    - Check Interval:** Input field '3' with '(seconds)' text.
    - Check Timeout:** Input field '3' with '(seconds)' text.
    - Latency Threshold:** Input field '3000' with '(ms)' text.
    - Fail Threshold:** Input field '10' with '(Times)' text.
    - Target1:** 'DNS1' dropdown.
    - Target2:** 'None' dropdown.
- Bridge:** 'Enable' checkbox.
- IGMP:** 'Disable' dropdown.
- IP Type:** 'IPv4' dropdown.

At the bottom of the form, there are three buttons: 'Apply', 'Cancel', and 'More'.

The following table describes the labels in this screen.

Table 16 Network > WAN > Management WAN Edit

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	This shows the WAN connection type.
3G/4G Information	

Table 16 Network &gt; WAN &gt; Management WAN Edit (continued)

LABEL	DESCRIPTION
Dial-Up Profile	<p>Select <b>Auto-Detection</b> to have the Zyxel Device use the inserted SIM card's default settings to connect to any available mobile network.</p> <p>Select <b>Manual</b> and enter the information provided by your service provider to connect to the service provider's mobile network.</p>
Country	Select the country in which you use the Zyxel Device.
Service Provider	<p>Select the name of your service provider. The options vary depending on the country you selected.</p> <p>If your service provider is not in the list, select <b>Others</b>.</p>
APN	<p>Connections with different APNs (Access Point Names) may provide different services (such as Internet access or MMS (Multi-Media Messaging Service)) and charge method.</p> <p>The corresponding APN automatically displays when you select a pre-defined service provider.</p> <p>If you select <b>Others</b> in the <b>Service Provider</b> field, manually enter the APN provided by your service provider. You can enter up to 32 ASCII printable characters. Spaces are allowed.</p>
Dialed Number	<p>This is the phone number (dial string) used to dial up a connection to your service provider's base station. Your service provider should provide the phone number. For example, *99# is the dial string to establish a GPRS or 3G/4G connection in Taiwan.</p> <p>The corresponding phone number automatically displays when you select a pre-defined service provider.</p> <p>If you select <b>Others</b> in the <b>Service Provider</b> field, manually enter the phone number provided by your service provider.</p>
Account	Type the user name (of up to 64 ASCII printable characters) given to you by your service provider.
Password	Type the password (of up to 64 ASCII printable characters) associated with the user name above.
Authentication	<p>The Zyxel Device supports PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol). CHAP is more secure than PAP; however, PAP is readily available on more platforms</p> <p>Select an authentication protocol (<b>PAP</b>, or <b>CHAP</b>) used by the service provider. Otherwise, select <b>Auto</b> to have the Zyxel Device accept either CHAP or PAP.</p>
Primary DNS	Enter the first DNS server address assigned by the service provider.
Secondary DNS	Enter the second DNS server address assigned by the service provider.
Roaming	3G/4G roaming is to use your mobile device in an area which is not covered by your service provider. Enable roaming to ensure that your Zyxel Device is kept connected to the Internet when you are traveling outside the geographical coverage area of the network to which you are registered.
Connection Control	<p>Select <b>Auto Reconnect (always-on)</b> if you do not want the connection to time out.</p> <p>Select <b>Connect-on-Demand</b> if you do not want the connection up all the time and specify an idle time-out in the <b>Maximum Idle Time</b> field.</p>
MTU	Enter the MTU (Maximum Transmission Unit) of each data packet, in bytes, that can move through the WAN connection.
Network Monitoring	Select this option to have the Zyxel Device test the WAN connection by periodically sending <b>DNS Query</b> to a DNS server or sending a ping ( <b>ICMP Checking</b> ) to either the default gateway or the addresses you specify in the <b>Target1</b> and <b>Target2</b> fields.
Loading Check	Select this option to check how many packets have been transmitted or received through the WAN connection within a time period specified in the <b>Check Interval</b> field.
Check Interval	Type a number of seconds (0 to 99999) to set the time interval between checks. Allow more time if your destination IP address handles lots of traffic.

Table 16 Network &gt; WAN &gt; Management WAN Edit (continued)

LABEL	DESCRIPTION
Check Timeout	Type the number of seconds (0 to 99999) for your Zyxel Device to wait for a response to the ping or DNS query before considering the check to have failed. This setting must be less than the <b>Check Interval</b> . Use a higher value in this field if your network is busy or congested.
Latency Threshold	Type a number of milliseconds (0 to 99999) for the latency threshold.  If the specified latency threshold is exceeded, the Zyxel Device considers the check to have failed and makes a new connection after (Latency Threshold * Fail Threshold) seconds.
Fail Threshold	Type how many WAN connection checks can fail (0 to 99999) before the connection is considered "down" (not connected). The Zyxel Device still checks a "down" connection to detect if it reconnects.
Target1/Target2	Select <b>DNS1</b> to have the Zyxel Device send a DNS query to the first DNS server address assigned by the service provider.  Select <b>DNS2</b> to have the Zyxel Device send a DNS query to the second DNS server address assigned by the service provider.  Select <b>Gateway</b> to have the Zyxel Device ping the WAN interface's default gateway IP address.  Select <b>Other Host</b> and enter a domain name or IP address of a reliable nearby computer to have the Zyxel Device ping that address.
LTE Band	This field shows when you click <b>More</b> .  Select the LTE band on which you want the LTE3311 to be. Select <b>Auto</b> if you want the LTE3311 to switch to a supported band automatically.
Bridge	Select this option to allow the computer connected to the first Ethernet LAN port to get an individual IP address from the ISP's DHCP server directly.
IGMP	Select <b>IGMP v1</b> , <b>IGMP v2</b> , <b>IGMP v3</b> or <b>Auto</b> to enable multicasting. This applies to traffic routed from the WAN to the LAN.  Select <b>Disable</b> to turn off this feature. This may cause incoming traffic to be dropped or sent to all connected network devices.
IP Type	Select whether your IP type is <b>IPv4</b> , <b>IPv6</b> or <b>IPv4/IPv6</b> .
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.
More	Click <b>More</b> to show <b>LTE Band</b> .

## 6.5 Network Scan Screen

Use this screen to set how you want the Zyxel Device to connect to an available mobile network. Click **Network > WAN > Network Scan** from the **Configuration** menu.

Figure 34 Network &gt; WAN &gt; Network Scan

The following table describes the labels in this screen.

Table 17 Network &gt; WAN &gt; Network Scan

LABEL	DESCRIPTION
Physical Interface	This shows the type of the interface used by the WAN connection.
Network Type	Select the type of the network ( <b>4G only</b> , <b>3G only</b> , or <b>3G/4G</b> ) to which you want the Zyxel Device to connect when there is a SIM card inserted.
Scan Approach	Select <b>Auto</b> to have the Zyxel Device connect to an available network using the default settings on the SIM card. If the currently registered mobile network is not available or the mobile network's signal strength is too low, the Zyxel Device switches to another available mobile network.  Select <b>Manually</b> to search for and select the mobile network(s) to which you want the Zyxel Device to connect.
Network Provider List	This table is available only when you set <b>Scan Approach</b> to <b>Manually</b> .  Click <b>Scan</b> to search for available mobile networks based on the network type you selected.  Click <b>Apply</b> to save your changes in the <b>Action</b> field.
Provider Name	This shows the name of the service provider.
Mobile System	This shows the mobile telecommunications standard supported by the mobile network.
Network Status	This shows whether the mobile network is available.
Action	Click <b>Select</b> to have the Zyxel Device establish a connection to the selected mobile network.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.
Refresh	Click <b>Refresh</b> to update this screen.

## 6.6 IPv6 Screen

Use this screen to configure the Zyxel Device's IPv6 settings. Click **Network > WAN > IPv6** from the **Configuration** menu.

**Figure 35** Network > WAN > IPv6

The following table describes the labels in this screen.

**Table 18** Network > WAN > IPv6

LABEL	DESCRIPTION
IPv6	Select <b>Enable</b> to allow the Zyxel Device to run IPv6. Otherwise, select <b>Disable</b> .
IPv6 Connection	Select <b>DHCPv6</b> if you want to obtain an IPv6 address from a DHCPv6 server.
DNS Setting	Select <b>Obtain DNS Server address Automatically</b> to have the Zyxel Device get the IPv6 DNS server addresses from the ISP automatically. Select <b>Use the following DNS address</b> to have the Zyxel Device use the IPv6 DNS server addresses you configure manually.
Primary DNS Address	Enter the first IPv6 DNS server address assigned by the ISP.
Secondary DNS Address	Enter the second IPv6 DNS server address assigned by the ISP.
LAN IPv6 Address	Enter the IPv6 address for the Zyxel Device LAN interface in this field.
LAN IPv6 Link-Local Address	This shows the IPv6 Link-local address in the LAN side. This is used by Zyxel Device when communicating with neighboring devices on the same link. It allows IPv6-capable devices to communicate with each other in the LAN side.
Autoconfigurator	Click <b>Enable</b> if you want the devices on your local area network to obtain network address that are not managed by a DHCPv6 server. Otherwise, select <b>Disable</b> .
Autoconfiguration Type	Select <b>Stateless</b> if you want the Zyxel Device interface to automatically generate a link-local address via stateless autoconfiguration. Select <b>Stateful (DHCPv6)</b> when the devices connected to your LAN needs to have their TCP/IP configuration set to DHCPv6 or obtain an IPv6 address automatically.

Table 18 Network &gt; WAN &gt; IPv6 (continued)

LABEL	DESCRIPTION
IPv6 Address Range(Start)	If you select <b>Stateful (DHCPv6)</b> , specify the range of IPv6 addresses from which the DHCPv6 server assigns to the clients. Enter the smallest value of the last block of the IPv6 addresses which are to be allocated.
IPv6 Address Range(End)	If you select <b>Stateful (DHCPv6)</b> , specify the range of IPv6 addresses from which the DHCPv6 server assigns to the clients. Enter the largest value of the last block of the IPv6 addresses which are to be allocated.
IPv6 Address Lifetime	If you select <b>Stateful (DHCPv6)</b> , specify how long (in minutes) the IPv6 addresses remain valid.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 6.7 PIN Management Screen

Use this screen to enable PIN authentication and configure the PIN code. Click **Network > WAN > PIN Management** from the **Configuration** menu.

Figure 36 Network &gt; WAN &gt; PIN Management

The following table describes the labels in this screen.

Table 19 Network &gt; WAN &gt; PIN Management

LABEL	DESCRIPTION
PIN Code Request function	Select <b>Enable</b> to turn on PIN code authentication. A PIN (Personal Identification Number) code is a key to a SIM card. Without the PIN code, you cannot use the SIM card.  Select <b>Disable</b> to turn off PIN code authentication.
SIM PIN Code	If you select <b>Enable</b> , enter the 4-digit PIN code (0000 for example) provided by your ISP for the inserted SIM card.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

# CHAPTER 7

## Wireless LAN


### 7.1 Overview

This chapter discusses how to configure the wireless network settings in your Zyxel Device.

See the appendices for more detailed information about wireless networks.

The following figure provides an example of a wireless network.

**Figure 37** Example of a Wireless Network

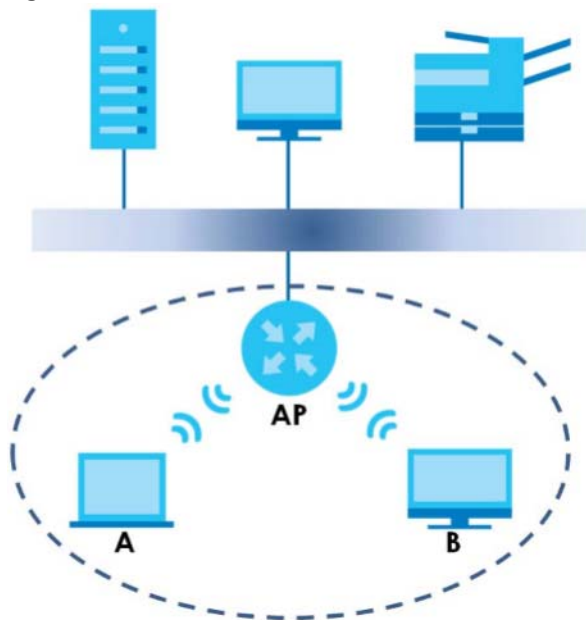

The wireless network is the part in the blue circle. In this wireless network, devices **A** and **B** are called wireless clients. The wireless clients use the access point (AP) to interact with other devices (such as the printer) or with the Internet. Your Zyxel Device is the AP.

#### 7.1.1 What You Can Do

- Use the **General** screen to turn the wireless connection on or off, set up wireless security between the Zyxel Device and the wireless clients, and make other basic configuration changes ([Section 7.2 on page 66](#)).
- Use the **More AP** screen to set up multiple wireless networks on your Zyxel Device ([Section 7.4 on page 70](#)).
- Use the **MAC Filter** screen to allow or deny wireless stations based on their MAC addresses from connecting to the Zyxel Device ([Section 7.5 on page 72](#)).

- Use the **Advanced** screen to allow intra-BSS networking and set the RTS/CTS Threshold ([Section 7.6 on page 74](#)).
- Use the **QoS** screen to ensure Quality of Service (QoS) in your wireless network ([Section 7.7 on page 75](#)).
- Use the **WPS** screen to quickly set up a wireless network with strong security, without having to configure security settings manually ([Section 7.8 on page 75](#)).
- Use the **WPS Station** screen to add a wireless station using WPS ([Section 7.9 on page 77](#)).
- Use the **Scheduling** screen to set the times your wireless LAN is turned on and off ([Section 7.10 on page 77](#)).
- Use the **WDS** screen to configure the Zyxel Device's WDS settings ([Section 7.11 on page 78](#)).

## 7.1.2 What You Should Know

Every wireless network must follow these basic guidelines.

- Every wireless client in the same wireless network must use the same SSID.  
The SSID is the name of the wireless network. It stands for Service Set IDentity.
- If two wireless networks overlap, they should use different channels.  
Like radio stations or television channels, each wireless network uses a specific channel, or frequency, to send and receive information.
- Every wireless client in the same wireless network must use security compatible with the AP.  
Security stops unauthorized devices from using the wireless network. It can also protect the information that is sent in the wireless network.

### Wireless Security Overview

The following sections introduce different types of wireless security you can set up in the wireless network.

#### SSID

Normally, the AP acts like a beacon and regularly broadcasts the SSID in the area. You can hide the SSID instead, in which case the AP does not broadcast the SSID. In addition, you should change the default SSID to something that is difficult to guess.

This type of security is fairly weak, however, because there are ways for unauthorized devices to get the SSID. In addition, unauthorized devices can still see the information that is sent in the wireless network.

#### MAC Address Filter

Every wireless client has a unique identification number, called a MAC address.<sup>1</sup> A MAC address is usually written using twelve hexadecimal characters<sup>2</sup>; for example, 00A0C5000002 or 00:A0:C5:00:00:02. To get the MAC address for each wireless client, see the appropriate User's Guide or other documentation.

---

1. Some wireless devices, such as scanners, can detect wireless networks but cannot use wireless networks. These kinds of wireless devices might not have MAC addresses.

2. Hexadecimal characters are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, and F.



You can use the MAC address filter to tell the AP which wireless clients are allowed or not allowed to use the wireless network. If a wireless client is allowed to use the wireless network, it still has to have the correct settings (SSID, channel, and security). If a wireless client is not allowed to use the wireless network, it does not matter if it has the correct settings.

This type of security does not protect the information that is sent in the wireless network. Furthermore, there are ways for unauthorized devices to get the MAC address of an authorized wireless client. Then, they can use that MAC address to use the wireless network.

## User Authentication

You can make every user log in to the wireless network before they can use it. This is called user authentication. However, every wireless client in the wireless network has to support IEEE 802.1x to do this.

For wireless networks, there are two typical places to store the user names and passwords for each user.

- In the AP: this feature is called a local user database or a local database.
- In a RADIUS server: this is a server used in businesses more than in homes.

If your AP does not provide a local user database and if you do not have a RADIUS server, you cannot set up user names and passwords for your users.

Unauthorized devices can still see the information that is sent in the wireless network, even if they cannot use the wireless network. Furthermore, there are ways for unauthorized wireless users to get a valid user name and password. Then, they can use that user name and password to use the wireless network.


Local user databases also have an additional limitation that is explained in the next section.

## Encryption

Wireless networks can use encryption to protect the information that is sent in the wireless network. Encryption is like a secret code. If you do not know the secret code, you cannot understand the message.

The types of encryption you can choose depend on the type of user authentication. (See [page 65](#) for information about this.)

Table 20 Types of Encryption for Each Type of Authentication

	NO AUTHENTICATION	RADIUS SERVER
Weakest  Strongest	No Security	WPA
	Static WEP	
	WPA-PSK	
	WPA2-PSK	WPA2

For example, if the wireless network has a RADIUS server, you can choose **WPA** or **WPA2**. If users do not log in to the wireless network, you can choose no encryption, **Static WEP**, **WPA-PSK**, or **WPA2-PSK**.

Usually, you should set up the strongest encryption that every wireless client in the wireless network supports. For example, suppose the AP does not have a local user database, and you do not have a RADIUS server. Therefore, there is no user authentication. Suppose the wireless network has two wireless

clients. Device A only supports WEP, and device B supports WEP and WPA. Therefore, you should set up **Static WEP** in the wireless network.

Note: It is recommended that wireless networks use **WPA-PSK, WPA**, or stronger encryption. IEEE 802.1x and WEP encryption are better than none at all, but it is still possible for unauthorized devices to figure out the original information pretty quickly.

Note: It is not possible to use **WPA-PSK, WPA** or stronger encryption with a local user database. In this case, it is better to set up stronger encryption with no authentication than to set up weaker encryption with the local user database.

When you select **WPA2** or **WPA2-PSK** in your Zyxel Device, you can also select an option (**WPA/WPA-PSK Compatible**) to support WPA/WPA-PSK as well. In this case, if some wireless clients support WPA and some support WPA2, you should set up **WPA2-PSK** or **WPA2** (depending on the type of wireless network login) and select the **WPA/WPA-PSK Compatible** option in the Zyxel Device.

Many types of encryption use a key to protect the information in the wireless network. The longer the key, the stronger the encryption. Every wireless client in the wireless network must have the same key.

## WPS

WiFi Protected Setup (WPS) is an industry standard specification, defined by the WiFi Alliance. WPS allows you to quickly set up a wireless network with strong security, without having to configure security settings manually. Depending on the devices in your network, you can either press a button (on the device itself, or in its configuration utility) or enter a PIN (Personal Identification Number) in the devices. Then, they connect and set up a secure network by themselves. See how to set up a secure wireless network using WPS in the [Section 4.2 on page 34](#).

## 7.2 General Wireless LAN Screen

Use this screen to configure the SSID and wireless security of the wireless LAN.

Note: If you are configuring the Zyxel Device from a computer connected to the wireless LAN and you change the Zyxel Device's SSID, channel or security settings, you will lose your wireless connection when you press **Apply** to confirm. You must then change the wireless settings of your computer to match the Zyxel Device's new settings.

Click **Network > Wireless LAN** to open the **General** screen.

Figure 38 Network &gt; Wireless LAN &gt; General

The following table describes the general wireless LAN labels in this screen.

Table 21 Network &gt; Wireless LAN &gt; General

LABEL	DESCRIPTION
Wireless LAN Status	Select <b>Enable</b> to activate the 2.4GHz wireless LAN. Select <b>Disable</b> to turn it off. You can also enable or disable the 2.4GHz wireless LANs by using the <b>WIFI</b> button located on the back panel of the Zyxel Device.
Name (SSID)	The SSID (Service Set IDentity) identifies the Service Set with which a wireless client is associated. Enter a descriptive name (up to 32 printable characters found on a typical English language keyboard) for the wireless LAN.
Hide SSID	Select this check box to hide the SSID in the outgoing beacon frame so a station cannot obtain the SSID through scanning using a site survey tool.
Channel Selection	Set the operating frequency/channel depending on your particular region. Select a channel from the drop-down list box. The options vary depending on the frequency band and the country you are in. Refer to the Connection Wizard chapter for more information on channels. This option is only available if <b>Auto Channel Selection</b> is disabled.
Auto Channel Selection	Select this check box for the Zyxel Device to automatically choose the channel with the least interference. Deselect this check box if you wish to manually select the channel using the <b>Channel Selection</b> field.
Operating Channel	This displays the channel the Zyxel Device is currently using.

Table 21 Network &gt; Wireless LAN &gt; General (continued)

LABEL	DESCRIPTION
Channel Width	<p>Select the wireless channel width used by Zyxel Device.</p> <p>A standard 20MHz channel offers transfer speeds of up to 144Mbps (2.4GHz) whereas a 40MHz channel uses two standard channels and offers speeds of up to 300Mbps (2.4GHz).</p> <p>Because not all devices support 40 MHz channels, select <b>Auto 20/40MHz</b> to allow the Zyxel Device to adjust the channel bandwidth automatically.</p> <p><b>40MHz</b> (channel bonding or dual channel) bonds two adjacent radio channels to increase throughput. The wireless clients must also support 40 MHz. It is often better to use the 20 MHz setting in a location where the environment hinders the wireless signal.</p> <p>Select <b>20MHz</b> if you want to lessen radio interference with other wireless devices in your neighborhood or the wireless clients do not support channel bonding.</p>
802.11 Mode	<p>You can select from the following:</p> <ul style="list-style-type: none"> <li>• <b>802.11b</b>: allows either IEEE 802.11b or IEEE 802.11g compliant WLAN devices to associate with the Zyxel Device. In this mode, all wireless devices can only transmit at the data rates supported by IEEE 802.11b.</li> <li>• <b>802.11g</b>: allows IEEE 802.11g compliant WLAN devices to associate with the Device. IEEE 802.11b compliant WLAN devices can associate with the Zyxel Device only when they use the short preamble type.</li> <li>• <b>802.11bg</b>: allows either IEEE 802.11b or IEEE 802.11g compliant WLAN devices to associate with the Zyxel Device. The Zyxel Device adjusts the transmission rate automatically according to the wireless standard supported by the wireless devices.</li> <li>• <b>802.11n</b>: allows IEEE 802.11n compliant WLAN devices to associate with the Zyxel Device. This can increase transmission rates, although IEEE 802.11b or IEEE 802.11g clients will not be able to connect to the Zyxel Device.</li> <li>• <b>802.11gn</b>: allows either IEEE 802.11g or IEEE 802.11n compliant WLAN devices to associate with the Zyxel Device. The transmission rate of your Zyxel Device might be reduced.</li> <li>• <b>802.11bgn</b>: allows IEEE802.11b, IEEE802.11g and IEEE802.11n compliant WLAN devices to associate with the Zyxel Device. The transmission rate of your Zyxel Device might be reduced.</li> </ul>
Security Mode	<p>Select <b>Static WEP</b>, <b>WPA-PSK</b>, <b>WPA</b>, <b>WPA2-PSK</b> or <b>WPA2</b> to add security on this wireless network. The wireless clients which want to associate to this network must have same wireless security settings as this device. After you select to use a security, additional options appears in this screen. See <a href="#">Section 7.3 on page 68</a> for detailed information on different security modes. Or you can select <b>No Security</b> to allow any client to associate this network without authentication.</p> <p>Note: If the WPS function is enabled (default), only <b>No Security</b> and <b>WPA2-PSK</b> are available in this field.</p>
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

See the rest of this chapter for information on the other labels in this screen.

## 7.3 Wireless Security

The screen varies depending on what you select in the **Security Mode** field.

### 7.3.1 No Security

Select **No Security** to allow wireless clients to communicate with the access points without any data encryption.

Note: If you do not enable any wireless security on your Zyxel Device, your network is accessible to any wireless networking device that is within range.

Figure 39 Network > Wireless LAN > General: No Security

The screenshot shows the 'General' tab of the wireless LAN configuration interface. Under 'Wireless Setup', 'Wireless LAN Status' is set to 'Enable'. The SSID is 'ZyXEL\_A2DD'. 'Channel Selection' is 'Channel-1 2412MHz' with 'Auto Channel Selection' checked. 'Operating Channel' is 'Auto', 'Channel Width' is 'Auto 20/40 MHz', and '802.11 Mode' is '802.11bgn'. Under 'Security', 'Security Mode' is set to 'No Security'. A note at the bottom states: 'Note: No Security and WPA2-PSK can be configured when WPS enabled.' 'Apply' and 'Cancel' buttons are at the bottom.

The following table describes the labels in this screen.

Table 22 Network > Wireless LAN > General: No Security

LABEL	DESCRIPTION
Security Mode	Choose <b>No Security</b> from the drop-down list box.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

### 7.3.2 WPA2-PSK

Select **WPA2-PSK** from the **Security Mode** list.

Figure 40 Network &gt; Wireless LAN &gt; General: WPA-PSK/WPA2-PSK

The following table describes the labels in this screen.

Table 23 Network &gt; Wireless LAN &gt; General: WPA-PSK/WPA2-PSK

LABEL	DESCRIPTION
Security Mode	Select <b>WPA-PSK</b> or <b>WPA2-PSK</b> to enable data encryption.
WPA-PSK Compatible	This field appears when you choose <b>WPA2-PSK</b> as the <b>Security Mode</b> . Check this field to allow wireless devices using <b>WPA-PSK</b> security mode to connect to your Zyxel Device.
Pre-Shared Key	<b>WPA-PSK/WPA2-PSK</b> uses a simple common password for authentication. Type a pre-shared key from 8 to 63 case-sensitive keyboard characters.
Group Key Update Timer	The <b>Group Key Update Timer</b> is the rate at which the AP sends a new group key out to all clients. The default is <b>3600</b> seconds (60 minutes).
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.4 More AP Screen

This screen allows you to enable and configure multiple wireless networks and guest wireless network settings on the Zyxel Device.

You can configure up to four SSIDs to enable multiple BSSs (Basic Service Sets) on the Zyxel Device. This allows you to use one access point to provide several BSSs simultaneously. You can then assign varying security types to different SSIDs. Wireless clients can use different SSIDs to associate with the same access point.

Click **Network > Wireless LAN > More AP**. The following screen displays.

**Figure 41** Network > Wireless LAN > More AP

#	Status	SSID	Security	Edit
1		ZyXEL_SSID1	No Security	
2		ZyXEL_SSID2	No Security	
3		ZyXEL_SSID3	No Security	

The following table describes the labels in this screen.

**Table 24** Network > Wireless LAN > More AP

LABEL	DESCRIPTION
#	This is the index number of each SSID profile.
Status	This shows whether the SSID profile is active (a yellow bulb) or not (a gray bulb).
SSID	An SSID profile is the set of parameters relating to one of the Zyxel Device's BSSs. The SSID (Service Set Identifier) identifies the Service Set with which a wireless device is associated.  This field displays the name of the wireless profile on the network. When a wireless client scans for an AP to associate with, this is the name that is broadcast and seen in the wireless client utility.
Security	This field indicates the security mode of the SSID profile.
Edit	Click the <b>Edit</b> icon to configure the SSID profile.

## 7.4.1 More AP Edit

Use this screen to edit an SSID profile. Click the **Edit** icon next to an SSID in the **More AP** screen. The following screen displays.

**Figure 42** Network > Wireless LAN > More AP: Edit

**Wireless Setup**

Active :

Name (SSID) :

Hide SSID

Intra-BSS Traffic

WMM QoS

---

**Security**

Security Mode :

---

No Security and WPA2-PSK can be configured when WPS enabled.

The following table describes the labels in this screen.

Table 25 Network > Wireless LAN > More AP: Edit

LABEL	DESCRIPTION
Active	Select this to activate the SSID profile.
Name (SSID)	The SSID (Service Set IDentity) identifies the Service Set with which a wireless client is associated. Enter a descriptive name (up to 32 printable characters found on a typical English language keyboard) for the wireless LAN.
Hide SSID	Select this check box to hide the SSID in the outgoing beacon frame so a station cannot obtain the SSID through scanning using a site survey tool.
Intra-BSS Traffic	A Basic Service Set (BSS) exists when all communications between wireless clients or between a wireless client and a wired network client go through one access point (AP).  Intra-BSS traffic is traffic between wireless clients in the BSS. When Intra-BSS is enabled, wireless clients can access the wired network and communicate with each other. When Intra-BSS is disabled, wireless clients can still access the wired network but cannot communicate with each other.
WMM QoS	Check this to have the Zyxel Device automatically give a service a priority level according to the ToS value in the IP header of packets it sends.  WMM QoS (Wifi MultiMedia Quality of Service) gives high priority to voice and video, which makes them run more smoothly.
Security Mode	Select <b>Static WEP</b> , <b>WPA-PSK</b> , <b>WPA</b> , <b>WPA2-PSK</b> or <b>WPA2</b> to add security on this wireless network. The wireless clients which want to associate to this network must have same wireless security settings as this device. After you select to use a security, additional options appears in this screen. See <a href="#">Section 7.3 on page 68</a> for detailed information on different security modes. Or you can select <b>No Security</b> to allow any client to associate this network without authentication.  Note: If the WPS function is enabled (default), only <b>No Security</b> and <b>WPA2-PSK</b> are available in this field.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.5 MAC Filter Screen

The MAC filter screen allows you to configure the Zyxel Device to give exclusive access to devices (**Allow**) or exclude devices from accessing the Zyxel Device (**Deny**). Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02. You need to know the MAC address of the devices to configure this screen.

To change your Zyxel Device's MAC filter settings, click **Network > Wireless LAN > MAC Filter**. The screen appears as shown.



Figure 43 Network &gt; Wireless LAN &gt; MAC Filter

MAC Address Filter :  Enable  Disable

Filter Action :  Allow  Deny

MAC Filter Summary			
Set	MAC Address	Set	MAC Address
1	<input type="text"/>	17	<input type="text"/>
2	<input type="text"/>	18	<input type="text"/>
3	<input type="text"/>	19	<input type="text"/>
4	<input type="text"/>	20	<input type="text"/>
5	<input type="text"/>	21	<input type="text"/>
6	<input type="text"/>	22	<input type="text"/>
7	<input type="text"/>	23	<input type="text"/>
8	<input type="text"/>	24	<input type="text"/>
9	<input type="text"/>	25	<input type="text"/>
10	<input type="text"/>	26	<input type="text"/>
11	<input type="text"/>	27	<input type="text"/>
12	<input type="text"/>	28	<input type="text"/>
13	<input type="text"/>	29	<input type="text"/>
14	<input type="text"/>	30	<input type="text"/>
15	<input type="text"/>	31	<input type="text"/>
16	<input type="text"/>	32	<input type="text"/>

Apply Cancel

The following table describes the labels in this menu.

Table 26 Network &gt; Wireless LAN &gt; MAC Filter

LABEL	DESCRIPTION
MAC Address Filter	Select to turn on ( <b>Enable</b> ) or off ( <b>Disable</b> ) MAC address filtering.
Filter Action	Define the filter action for the list of MAC addresses in the <b>MAC Filter Summary</b> table.  Select <b>Allow</b> to permit access to the Zyxel Device, MAC addresses not listed will be denied access to the Zyxel Device.  Select <b>Deny</b> to block access to the Zyxel Device, MAC addresses not listed will be allowed to access the Zyxel Device.
MAC Filter Summary	
Set	This is the index number of the MAC address.
MAC Address	Enter the MAC address of the wireless station that are allowed or denied access to the Zyxel Device.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.6 Wireless LAN Advanced Screen

Use this screen to allow wireless advanced features, such as the output power, RTS/CTS Threshold settings.

Click **Network > Wireless LAN > Advanced**. The screen appears as shown.

**Figure 44** Network > Wireless LAN > Advanced

The screenshot shows the 'Advanced' tab of the 'Wireless LAN' configuration page. The title is 'Wireless Advanced Setup'. There are several configuration fields: 'RTS/CTS Threshold' with a value of 2347 and a range of 1-2347; 'Fragmentation Threshold' with a value of 2346 and a range of 256-2346; 'Intra-BSS Traffic' with radio buttons for 'Enable' (selected) and 'Disable'; 'Green AP' with radio buttons for 'Enable' and 'Disable' (selected); 'Tx Power' with a dropdown menu set to '100%'; and 'Beacon Interval' with a value of 100 and a range of 100-1000 msec. At the bottom, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

**Table 27** Network > Wireless LAN > Advanced

LABEL	DESCRIPTION
RTS/CTS Threshold	Data with its frame size larger than this value will perform the RTS (Request To Send)/CTS (Clear To Send) handshake.  This field is not configurable and the Zyxel Device automatically changes to use the maximum value if you select <b>802.11n</b> , <b>802.11gn</b> or <b>802.11bgn</b> in the <b>Wireless LAN &gt; General</b> screen.
Fragmentation Threshold	The threshold (number of bytes) for the fragmentation boundary for directed messages. It is the maximum data fragment size that can be sent.  This field is not configurable and the Zyxel Device automatically changes to use the maximum value if you select <b>802.11n</b> , <b>802.11gn</b> or <b>802.11bgn</b> in the <b>Wireless LAN &gt; General</b> screen.
Intra-BSS Traffic	A Basic Service Set (BSS) exists when all communications between wireless clients or between a wireless client and a wired network client go through one access point (AP).  Intra-BSS traffic is traffic between wireless clients in the BSS. When Intra-BSS is enabled, wireless clients can access the wired network and communicate with each other. When Intra-BSS is disabled, wireless clients can still access the wired network but cannot communicate with each other.
Green AP	Select <b>Enable</b> to reduce the power consumption by adjusting the output power. The Zyxel Device reduces the output power of the transmitter from about 260mA to 188mA when there is no IEEE 802.11 wireless clients associated with the Zyxel Device wireless network.
Tx Power	Set the output power of the Zyxel Device in this field. If there is a high density of APs in an area, decrease the output power of the Zyxel Device to reduce interference with other APs. Select one of the following <b>100%</b> , <b>90%</b> , <b>75%</b> , <b>50%</b> , <b>25%</b> or <b>10%</b> .
Beacon Interval	When a wirelessly networked device sends a beacon, it includes with it a beacon interval. This specifies the time period before the device sends the beacon again. The interval tells receiving devices on the network how long they can wait in low-power mode before waking up to handle the beacon. A high value helps save current consumption of the access point.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.7 Quality of Service (QoS) Screen

The QoS screen allows you to automatically give a service (such as VoIP and video) a priority level.

Click **Network > Wireless LAN > QoS**. The following screen appears.

**Figure 45** Network > Wireless LAN > QoS

The screenshot shows a web interface for configuring QoS. At the top, there are several tabs: General, More AP, MAC Filter, Advanced, QoS (selected), WPS, WPS Station, Scheduling, and WDS. Below the tabs, the 'WMM QoS' section has two radio buttons: 'Enable' (which is selected) and 'Disable'. Below this is a 'Note' icon followed by the text: 'When the wireless mode contains N mode, wmm support will be enabled automatically.' At the bottom of the screen, there are two buttons: 'Apply' and 'Cancel'.

The following table describes the labels in this screen.

**Table 28** Network > Wireless LAN > QoS

LABEL	DESCRIPTION
WMM QoS	Select <b>Enable</b> to have the Zyxel Device automatically give a service a priority level according to the ToS value in the IP header of packets it sends. WMM QoS (Wifi MultiMedia Quality of Service) gives high priority to voice and video, which makes them run more smoothly.  This field is not configurable and the Zyxel Device automatically enables WMM QoS if you select <b>802.11n</b> , <b>802.11gn</b> or <b>802.11bgn</b> in the <b>Wireless LAN &gt; General</b> screen.
Apply	Click <b>Apply</b> to save your changes to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.8 WPS Screen

Use this screen to enable/disable WPS, view or generate a new PIN number and check current WPS status. To open this screen, click **Network > Wireless LAN > WPS**.

Note: With WPS, wireless clients can only connect to the wireless network using the first SSID on the Zyxel Device.

Figure 46 Network &gt; Wireless LAN &gt; WPS

The following table describes the labels in this screen.

Table 29 Network &gt; Wireless LAN &gt; WPS


LABEL	DESCRIPTION
WPS Setup	
WPS	Select <b>Enable</b> to turn on the WPS feature. Otherwise, select <b>Disable</b> .
PIN Code	Select <b>Enable</b> and click <b>Apply</b> to allow the PIN Configuration method. If you select <b>Disable</b> , you cannot create a new PIN number.
PIN Number	This is the WPS PIN (Personal Identification Number) of the Zyxel Device. Enter this PIN in the configuration utility of the device you want to connect to the Zyxel Device using WPS.  The PIN is not necessary when you use WPS push-button method.  Click <b>Generate</b> to generate a new PIN number.
WPS Status	
Status	This displays <b>Configured</b> when the Zyxel Device has connected to a wireless network using WPS or when <b>WPS Enable</b> is selected and wireless or wireless security settings have been changed. The current wireless and wireless security settings also appear in the screen.  This displays <b>Unconfigured</b> if WPS is disabled and there are no wireless or wireless security changes on the Zyxel Device or you click <b>Release Configuration</b> to remove the configured wireless and wireless security settings.
Release Configuration	This button is only available when the WPS status displays <b>Configured</b> .  Click this button to remove all configured wireless and wireless security settings for WPS connections on the Zyxel Device.
802.11 Mode	This is the 802.11 mode used. Only compliant WLAN devices can associate with the Zyxel Device.
SSID	This is the name of the wireless network (the Zyxel Device's first SSID).
Security	This is the type of wireless security employed by the network.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.9 WPS Station Screen

Use this screen when you want to add a wireless station using WPS. To open this screen, click **Network > Wireless LAN > WPS Station** tab.

Note: After you click **Push Button** on this screen, you have to press a similar button in the wireless station utility within 2 minutes. To add the second wireless station, you have to press these buttons on both device and the wireless station again after the first 2 minutes.

Figure 47 Network > Wireless LAN > WPS Station

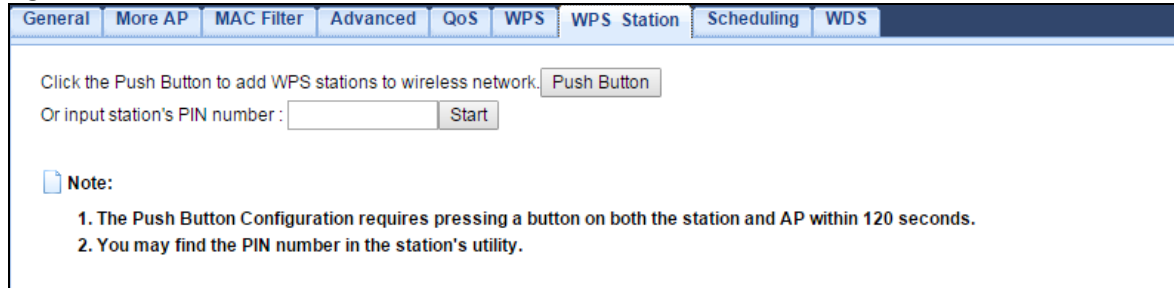

The following table describes the labels in this screen.

Table 30 Network > Wireless LAN > WPS Station

LABEL	DESCRIPTION
Push Button	Use this button when you use the PBC (Push Button Configuration) method to configure wireless station's wireless settings. Click this to start WPS-aware wireless station scanning and the wireless security information synchronization.
Or input station's PIN number	Use this button when you use the PIN Configuration method to configure wireless station's wireless settings. Type the same PIN number generated in the wireless station's utility. Then click <b>Start</b> to associate to each other and perform the wireless security information synchronization.

## 7.10 Scheduling Screen

Use this screen to set the times your wireless LAN is turned on and off. Wireless LAN scheduling is disabled by default. The wireless LAN can be scheduled to turn on or off on certain days and at certain times. To open this screen, click **Network > Wireless LAN > Scheduling** tab.

Figure 48 Network &gt; Wireless LAN &gt; Scheduling

Wireless LAN Scheduling :  Enable  Disable

Policy :  On  Off

Day	For the following times (24-Hour Format)
<input type="checkbox"/> EveryDay	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Mon	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Tue	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Wed	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Thu	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Fri	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Sat	00 (hour) 00 (min) ~ 00 (hour) 00 (min)
<input type="checkbox"/> Sun	00 (hour) 00 (min) ~ 00 (hour) 00 (min)

**Note:**  
Specify the same begin time and end time means the whole day schedule.

Apply Cancel

The following table describes the labels in this screen.

Table 31 Network &gt; Wireless LAN &gt; Scheduling

LABEL	DESCRIPTION
Wireless LAN Scheduling	Select <b>Enable</b> to activate the wireless LAN scheduling feature. Select <b>Disable</b> to turn it off.
Policy	Select <b>On</b> or <b>Off</b> to specify whether the Wireless LAN is turned on or off. This field works in conjunction with the <b>Day</b> and <b>For the following times</b> fields.
Scheduling	
Day	Select <b>Everyday</b> or the specific days to turn the Wireless LAN on or off. If you select <b>Everyday</b> you can not select any specific days. This field works in conjunction with the <b>For the following times</b> field.
For the following times (24-Hour Format)	Select a begin time using the first set of <b>hour</b> and minute ( <b>min</b> ) drop down boxes and select an end time using the second set of <b>hour</b> and minute ( <b>min</b> ) drop down boxes. If you have chosen <b>On</b> earlier for the WLAN Status the Wireless LAN will turn on between the two times you enter in these fields. If you have chosen <b>Off</b> earlier for the WLAN Status the Wireless LAN will turn off between the two times you enter in these fields.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

## 7.11 WDS Screen

A Wireless Distribution System (WDS) is a wireless connection between two or more APs. Use this screen to configure the Zyxel Device's WDS settings. To open this screen, click **Network > Wireless LAN > WDS** tab.

Figure 49 Network &gt; Wireless LAN &gt; WDS

The following table describes the labels in this screen.

Table 32 Network &gt; Wireless LAN &gt; WDS

LABEL	DESCRIPTION
WDS Setup	
Basic Setting	Select <b>Disable</b> to turn off the WDS function on the Zyxel Device. Select <b>AP+Bridge</b> to have the Zyxel Device function as a bridge and access point simultaneously. Select <b>Bridge Only</b> to have the Zyxel Device act as a wireless bridge only.
These fields only shows when you select <b>AP+Bridge</b> or <b>Bridge Only</b> in <b>Basic Setting</b> .	
Local MAC Address	This shows the MAC address of the Zyxel Device.
Remote MAC Address	Type the MAC address of the peer device in a valid MAC address format, that is, six hexadecimal character pairs, for example, 12:34:56:78:9a:bc.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Reset	Click <b>Reset</b> to reload the previous configuration for this screen.

# CHAPTER 8


# LAN

## 8.1 Overview

This chapter describes how to configure LAN settings.

A Local Area Network (LAN) is a shared communication system to which many computers are attached. A LAN is a computer network limited to the immediate area, usually the same building or floor of a building.

Figure 50 LAN Example

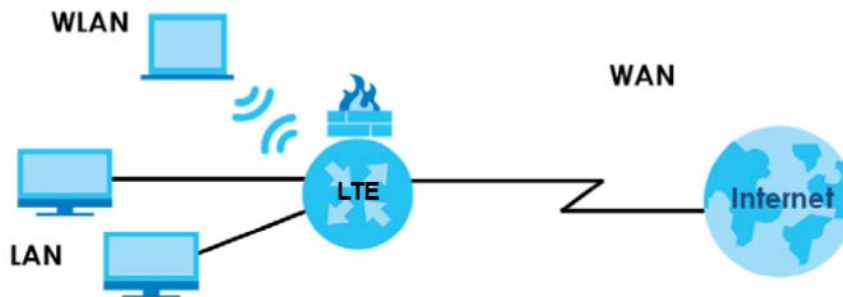

The LAN screens can help you configure a manage IP address, and partition your physical network into logical networks.

## 8.2 What You Can Do


- Use the IP screen to change the IP address for your Zyxel Device ([Section 8.4 on page 81](#)).

## 8.3 What You Need To Know

The actual physical connection determines whether the Zyxel Device ports are LAN or WAN ports. There are two separate IP networks, one inside the LAN network and the other outside the WAN network as shown next.



Figure 51 LAN and WAN IP Addresses

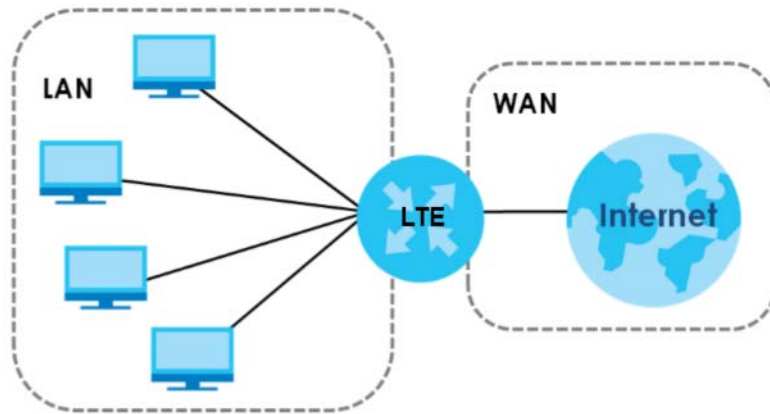

The LAN parameters of the Zyxel Device are preset in the factory with the following values:

- IP address of 192.168.1.1 with subnet mask of 255.255.255.0 (24 bits)
- DHCP server enabled with 32 client IP addresses starting from 192.168.1.33.

These parameters should work for the majority of installations. If your ISP gives you explicit DNS server address(es), read the embedded Web Configurator help regarding what fields need to be configured.

## 8.4 IP Screen

Use this screen to change the IP address for your Zyxel Device. Click **Network > LAN > IP**.

Figure 52 Network &gt; LAN &gt; IP

The following table describes the labels in this screen.

Table 33 Network &gt; LAN &gt; IP

LABEL	DESCRIPTION
IP Address	Type the IP address of your Zyxel Device in dotted decimal notation.
IP Subnet Mask	The subnet mask specifies the network number portion of an IP address. Your Zyxel Device will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the Zyxel Device.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

# CHAPTER 9

## DHCP Server

### 9.1 Overview

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a server. You can configure the Zyxel Device's LAN as a DHCP server or disable it. When configured as a server, the Zyxel Device provides the TCP/IP configuration for the clients. If DHCP service is disabled, you must have another DHCP server on your LAN, or else the computer must be manually configured.

#### 9.1.1 What You Can Do

- Use the **General** screen to enable the DHCP server ([Section 9.2 on page 82](#)).
- Use the **Advanced** screen to assign IP addresses on the LAN to specific individual computers based on their MAC Addresses ([Section 9.3 on page 84](#)).
- Use the **Client List** screen to view the current DHCP client information ([Section 9.4 on page 86](#)).

#### 9.1.2 What You Need To Know

The following terms and concepts may help as you read through this chapter.

##### MAC Addresses

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02. Find out the MAC addresses of your network devices if you intend to add them to the **DHCP Client List** screen.

##### IP Pool Setup

The Zyxel Device is pre-configured with a pool of 32 IP addresses starting from 192.168.1.33 to 192.168.1.64. This configuration leaves 31 IP addresses (excluding the Zyxel Device itself) in the lower range (192.168.1.2 to 192.168.1.32) for other server computers, for instance, servers for mail, FTP, TFTP, web, etc., that you may have.

### 9.2 General Screen

The Zyxel Device has built-in DHCP server capability that assigns IP addresses to systems that support DHCP client capability. Use this screen to enable the DHCP server. Click **Network > DHCP Server**. The following screen displays.

Figure 53 Network &gt; DHCP Server &gt; General

The screenshot shows the 'General' tab of the DHCP Server configuration. It is divided into four sections, each for a different DHCP server:

- DHCP 1 Server:** DHCP Server:  Enable  Disable; IP Pool Starting Address: 192.168.1.33; Pool Size: 32; DHCP Relay: ; DHCP Server IP: [empty]; Lease Time: 86400 seconds.
- VLAN DHCP 2 Server:** DHCP Server:  Enable  Disable; IP Pool Starting Address: 192.168.2.33; Pool Size: 32; First DNS Server: Obtained From ISP; Second DNS Server: Obtained From ISP.
- VLAN DHCP 3 Server:** DHCP Server:  Enable  Disable; IP Pool Starting Address: 192.168.3.33; Pool Size: 32; First DNS Server: Obtained From ISP; Second DNS Server: Obtained From ISP.
- VLAN DHCP 4 Server:** DHCP Server:  Enable  Disable; IP Pool Starting Address: 192.168.4.33; Pool Size: 32; First DNS Server: Obtained From ISP; Second DNS Server: Obtained From ISP.

At the bottom of the form are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 34 Network &gt; DHCP Server &gt; General

LABEL	DESCRIPTION
DHCP Server	Select <b>Enable</b> to activate DHCP for LAN.  DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients (computers) to obtain TCP/IP configuration at startup from a server. Enable the DHCP server unless your ISP instructs you to do otherwise. Select <b>Disable</b> to stop the Zyxel Device acting as a DHCP server. When configured as a server, the Zyxel Device provides TCP/IP configuration for the clients. If not, DHCP service is disabled and you must have another DHCP server on your LAN, or else the computers must be manually configured. When set as a server, fill in the following four fields.
IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool for LAN.
Pool Size	This field specifies the size, or count of the IP address pool for LAN.
DHCP Relay	Select this option to have the Zyxel Device forward DHCP requests to the DHCP server.
DHCP Server IP	This field is configurable only when you select <b>DHCP Relay</b> .  Enter the IP address of the actual remote DHCP server in this field.

Table 34 Network &gt; DHCP Server &gt; General (continued)

LABEL	DESCRIPTION
Lease Time	This is the period of time DHCP-assigned addresses is used. DHCP automatically assigns IP addresses to clients when they log in. DHCP centralizes IP address management on central computers that run the DHCP server program. DHCP leases addresses, for a period of time, which means that past addresses are "recycled" and made available for future reassignment to other systems.
VLAN DHCP x Server This section is configurable only when you create a corresponding VLAN group in the <b>Interface Group</b> screen.	
DHCP Server	Select <b>Enable</b> to activate DHCP for the VLAN group.
IP Pool Starting Address	Enter the LAN IP address you want to assign to your Zyxel Device in this VLAN group.
Pool Size	This field specifies the size, or count of the IP address pool for LAN.
First DNS Server Second DNS Server	Specify the IP addresses up to two DNS servers for the DHCP clients to use.  Select <b>Obtained From ISP</b> if your ISP dynamically assigns DNS server information (and the Zyxel Device's WAN IP address). The field to the right displays the (read-only) DNS server IP address that the ISP assigns.  Select <b>User-Defined</b> if you have the IP address of a DNS server. Enter the DNS server's IP address in the field to the right.  Select <b>DNS Relay</b> to have the Zyxel Device act as a DNS proxy. The Zyxel Device's LAN IP address displays in the field to the right (read-only). The Zyxel Device tells the DHCP clients on the LAN that the Zyxel Device itself is the DNS server. When a computer on the LAN sends a DNS query to the Zyxel Device, the Zyxel Device forwards the query to the Zyxel Device's system DNS server (configured in the <b>WAN</b> screen) and relays the response back to the computer.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 9.3 Advanced Screen

This screen allows you to assign IP addresses on the LAN to specific individual computers based on their MAC addresses. You can also use this screen to configure the DNS server information that the Zyxel Device sends to the DHCP clients.

To change your Zyxel Device's static DHCP settings, click **Network > DHCP Server > Advanced**. The following screen displays.

Figure 54 Network &gt; DHCP Server &gt; Advanced

The following table describes the labels in this screen.

Table 35 Network &gt; DHCP Server &gt; Advanced

LABEL	DESCRIPTION
Static DHCP Table	
#	This is the index number of the static IP table entry (row).
MAC Address	Type the MAC address (with colons) of a computer on your LAN.
IP Address	Type the LAN IP address of a computer on your LAN.
DNS Server	
DNS Servers Assigned by DHCP Server	The Zyxel Device passes a DNS (Domain Name System) server IP address (in the order you specify here) to the DHCP clients. The Zyxel Device only passes this information to the LAN DHCP clients when you enable <b>DHCP Server</b> in the <b>General</b> screen. When you disable <b>DHCP Server</b> , DHCP service is disabled and you must have another DHCP server on your LAN, or else the computers must have their DNS server addresses manually configured.
First DNS Server Second DNS Server	Select <b>Obtained From ISP</b> if your ISP dynamically assigns DNS server information (and the Zyxel Device's WAN IP address). The field to the right displays the (read-only) DNS server IP address that the ISP assigns.  Select <b>User-Defined</b> if you have the IP address of a DNS server. Enter the DNS server's IP address in the field to the right.  Select <b>DNS Relay</b> to have the Zyxel Device act as a DNS proxy. The Zyxel Device's LAN IP address displays in the field to the right (read-only). The Zyxel Device tells the DHCP clients on the LAN that the Zyxel Device itself is the DNS server. When a computer on the LAN sends a DNS query to the Zyxel Device, the Zyxel Device forwards the query to the Zyxel Device's system DNS server (configured in the <b>WAN</b> screen) and relays the response back to the computer.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 9.4 Client List Screen

The DHCP table shows current DHCP client information (including IP Address, Host Name and MAC Address) of network clients using the Zyxel Device's DHCP servers.

Configure this screen to always assign an IP address to a MAC address (and host name). Click **Network > DHCP Server > Client List**.

Note: You can also view a read-only client list by clicking **Monitor > DHCP Server**.

**Figure 55** Network > DHCP Server > Client List

The screenshot shows the 'Client List' tab of the DHCP configuration interface. It features a table titled 'DHCP Client Table' with the following data:

#	Status	Host Name	IP Address	MAC Address	Reserve
1		twpc	192.168.1.46	00:21:85:0c:44:4b	<input type="checkbox"/>

Below the table are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

**Table 36** Network > DHCP Server > Client List

LABEL	DESCRIPTION
#	This is the index number of the host computer.
Status	This field displays whether the connection to the host computer is up (a yellow bulb) or down (a gray bulb).
Host Name	This field displays the computer host name.
IP Address	This field displays the IP address relative to the # field listed above.
MAC Address	This field shows the MAC address of the computer with the name in the <b>Host Name</b> field. Every Ethernet device has a unique MAC (Media Access Control) address which uniquely identifies a device. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.
Reserve	Select this if you want to reserve the IP address for this specific MAC address.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to reload the previous configuration for this screen.

# CHAPTER 10

## NAT


### 10.1 Overview

NAT (Network Address Translation - NAT, RFC 1631) is the translation of the IP address of a host in a packet. For example, the source address of an outgoing packet, used within one network is changed to a different IP address known within another network.

The figure below is a simple illustration of a NAT network. You want to assign ports 21-25 to one FTP, Telnet, and SMTP server (**A** in the example), port 80 to another (**B** in the example) and assign a default server IP address of 192.168.1.35 to a third (**C** in the example).

You assign the LAN IP addresses to the devices (**A** to **D**) connected to your Zyxel Device. The ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet. All traffic coming from **A** to **D** going out to the Internet use the IP address of the Zyxel Device, which is 192.168.1.1.

Figure 56 NAT Example

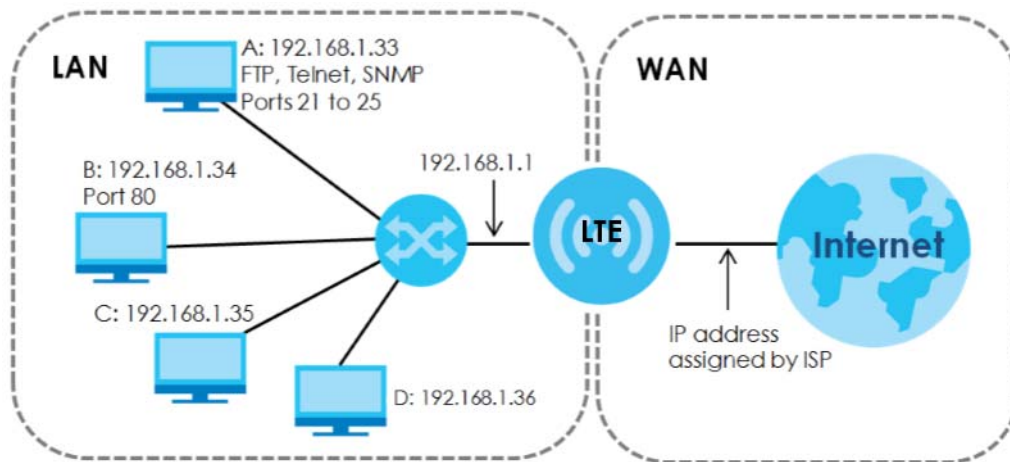

Note: You must create a firewall rule in addition to setting up NAT, to allow traffic from the WAN to be forwarded through the Zyxel Device.

#### 10.1.1 What You Can Do

- Use the **General** screen to enable NAT ([Section 10.2 on page 88](#)).
- Use the **Port Forwarding** screen to set a default server and change your Zyxel Device's port forwarding settings to forward incoming service requests to the server(s) on your local network ([Section 10.3 on page 88](#)).
- Use the **Port Trigger** screen to change your Zyxel Device's trigger port settings ([Section 10.4 on page 91](#)).
- Use the **ALG** screen to enable or disable SIP (VoIP) ALG (Application Layer Gateway) in the Zyxel Device ([Section 10.5 on page 92](#)).

## 10.2 General Screen

Use this screen to enable NAT and set a default server. Click **Network > NAT** to open the **General** screen.

**Figure 57** Network > NAT > General

The following table describes the labels in this screen.

**Table 37** Network > NAT > General

LABEL	DESCRIPTION
Network Address Translation (NAT)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet).  Select <b>Enable</b> to activate NAT. Select <b>Disable</b> to turn it off.
NAT Loopback	NAT loopback allows local users to use a domain name to access a server on the local network. A packet sent to the public (WAN) IP address is always forwarded to the default gateway (the Zyxel Device). With NAT loopback enabled, the Zyxel Device uses the WAN interface's IP address as the packet's source address and treats the packet as if it came from the WAN interface. The packet then can be forwarded to the local server according to the port forwarding rule.  Select <b>Enable</b> to activate NAT loopback. Select <b>Disable</b> to turn it off.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 10.3 Port Forwarding Screen

Use this screen to forward incoming service requests to the server(s) on your local network and set a default server. You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server. The port number identifies a service; for example, web service is on port 80 and FTP on port 21. In some cases, such as for unknown services or where one server can support more than one service (for example both FTP and web service), it might be better to specify a range of port numbers.

In addition to the servers for specified services, NAT supports a default server. A service request that does not have a server explicitly designated for it is forwarded to the default server. If the default is not defined, the service request is simply discarded.

**Note:** Many residential broadband ISP accounts do not allow you to run any server processes (such as a Web or FTP server) from your location. Your ISP may periodically check for servers and may suspend your account if it discovers any active services at your location. If you are unsure, refer to your ISP.



Port forwarding allows you to define the local servers to which the incoming services will be forwarded. To change your Zyxel Device's port forwarding settings, click **Network > NAT > Port Forwarding**. The screen appears as shown.

Note: If you do not assign a **Default Server**, the Zyxel Device discards all packets received for ports that are not specified in this screen or remote management.

Refer to [Appendix B on page 171](#) for port numbers commonly used for particular services.

**Figure 58** Network > NAT > Port Forwarding

The following table describes the labels in this screen.

**Table 38** Network > NAT > Port Forwarding

LABEL	DESCRIPTION
Default Server Setup	
Default Server	In addition to the servers for specified services, NAT supports a default server. A default server receives packets from ports that are not specified in the <b>Port Forwarding</b> screen. You can decide whether you want to use the default server or specify a server manually. Select this to use the default server.
Change to Server	Select this and manually enter the server's IP address.
Service Name	Select a pre-defined service from the drop-down list box. The pre-defined service port number(s) and protocol will be displayed in the port forwarding summary table. Otherwise, select <b>User define</b> to manually enter the service name and port number(s) and select the IP protocol.
Service Protocol	Select the transport layer protocol supported by this virtual server. Choices are <b>TCP</b> , <b>UDP</b> , or <b>TCP_UDP</b> . If you have chosen a pre-defined service in the <b>Service Name</b> field, the protocol will be configured automatically.
WAN Interface	Select the WAN interface on which the matched packets are received.

Table 38 Network &gt; NAT &gt; Port Forwarding (continued)

LABEL	DESCRIPTION
Port Range	Specify the first and last external port numbers that identify the service. If you have chosen a pre-defined service in the <b>Service Name</b> field, the port number(s) will be configured automatically.
Translation Port Range	Specify the first and last internal port numbers that identify the service. If you have chosen a pre-defined service in the <b>Service Name</b> field, the port number(s) will be configured automatically.
Server IP Address	Enter the inside IP address of the virtual server here and click <b>Add</b> to add it in the port forwarding summary table.
#	This is the number of an individual port forwarding server entry.
Status	This icon is turned on when the rule is enabled.
Name	This field displays a name to identify this rule.
Protocol	This is the transport layer protocol used for the service.
WAN Interface	This field displays the WAN interface on which the matched packets are received.
Port	This field displays the port number(s).
Port	This field displays the external port number(s) that identifies the service.
Translation Port	This field displays the internal port number(s) that identifies the service.
Server IP Address	This field displays the inside IP address of the server.
Modify	Click the <b>Edit</b> icon to open the edit screen where you can modify an existing rule. Click the <b>Delete</b> icon to remove a rule.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

### 10.3.1 Port Forwarding Edit Screen

This screen lets you edit a port forwarding rule. Click a rule's **Edit** icon in the **Port Forwarding** screen to open the following screen.

Figure 59 Network &gt; NAT &gt; Port Forwarding Edit

Port Forwarding :  Enable  Disable

Service Name :   ▼

Service Protocol :  ▼

WAN Interface :  ▼

Port Range :  -

Translation Port Range :  -

Server IP Address :

The following table describes the labels in this screen.

Table 39 Network > NAT > Port Forwarding Edit

LABEL	DESCRIPTION
Port Forwarding	Select <b>Enable</b> to turn on this rule and the requested service can be forwarded to the host with a specified internal IP address.  Select <b>Disable</b> to disallow forwarding of these ports to an inside server without having to delete the entry.
Service Name	Select <b>User define</b> and type a name (of up to 31 printable characters) to identify this rule in the first field next to <b>Service Name</b> . Otherwise, select a predefined service in the second field next to <b>Service Name</b> . The predefined service name and port number(s) will display in the <b>Service Name</b> and <b>Port Range</b> fields.
Service Protocol	Select the transport layer protocol supported by this virtual server. Choices are <b>TCP</b> , <b>UDP</b> , or <b>TCP_UDP</b> .  If you have chosen a pre-defined service in the <b>Service Name</b> field, the protocol will be configured automatically.
WAN Interface	Select the WAN interface on which the matched packets are received.
Port Range	Type a port number(s) to define the service to be forwarded to the specified server.  To specify a range of ports, enter the first number and the last number of the range.
Translation Port Range	Enter a port number to which you want the incoming ports translated.  For a range of ports, enter the first number and the last number of the range.
Server IP Address	Type the IP address of the server on your LAN that receives packets from the port(s) specified in the <b>Port Range</b> field.
Back	Click <b>Back</b> to return to the previous screen.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 10.4 Port Trigger Screen

To change your Zyxel Device's trigger port settings, click **Network > NAT > Port Trigger**. The screen appears as shown.

Note: Only one LAN computer can use a trigger port (range) at a time.

Figure 60 Network &gt; NAT &gt; Port Trigger

Application Rules Summary

#	Name	WAN Interface	Incoming Port		Trigger Port
			Start Port	End Port	
1		Default ▼			
2		Default ▼			
3		Default ▼			
4		Default ▼			
5		Default ▼			
6		Default ▼			
7		Default ▼			
8		Default ▼			
9		Default ▼			
10		Default ▼			
11		Default ▼			
12		Default ▼			

Apply Cancel

The following table describes the labels in this screen.

Table 40 Network &gt; NAT &gt; Port Trigger

LABEL	DESCRIPTION
#	This is the rule index number (read-only).
Name	Type a unique name (up to 15 characters) for identification purposes. All characters are permitted - including spaces.
WAN Interface	Select the WAN interface through which the matched packets are transmitted.
Incoming Port	Incoming Port is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The Zyxel Device forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service.
Start Port	Type a port number or the starting port number in a range of port numbers.
End Port	Type a port number or the ending port number in a range of port numbers.
Trigger Port	The trigger port is a port that causes (or triggers) the Zyxel Device to record the IP address of the LAN computer that sent the traffic to a server on the WAN.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 10.5 ALG Screen

Some NAT routers may include a SIP Application Layer Gateway (ALG). A SIP ALG allows SIP calls to pass through NAT by examining and translating IP addresses embedded in the data stream. When the Zyxel Device registers with the SIP register server, the SIP ALG translates the Zyxel Device's private IP address inside the SIP data stream to a public IP address. You do not need to use STUN or an outbound proxy if your Zyxel Device is behind a SIP ALG.

To enable and disable the SIP ALG in the Zyxel Device, click **Network > NAT > ALG**. The screen appears as shown.

**Figure 61** Network > NAT > ALG

The screenshot shows a web interface with four tabs: 'General', 'Port Forwarding', 'Port Trigger', and 'ALG'. The 'ALG' tab is active. Below the tabs, there is a section labeled 'ALG-SIP' with two radio buttons: 'Enable' (which is selected) and 'Disable'. At the bottom of the screen, there are two buttons: 'Apply' and 'Cancel'.

The following table describes the labels in this screen.

Table 41 Network > NAT > ALG

LABEL	DESCRIPTION
ALG-SIP	Select <b>Enable</b> to make sure SIP (VoIP) works correctly with port-forwarding and address-mapping rules. Otherwise, select <b>Disable</b> to turn off the SIP ALG.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 10.6 Technical Reference

The following section contains additional technical information about the Zyxel Device features described in this chapter.

### 10.6.1 NAT Port Forwarding: Services and Port Numbers

A port forwarding set is a list of inside (behind NAT on the LAN) servers, for example, web or FTP, that you can make accessible to the outside world even though NAT makes your whole inside network appear as a single machine to the outside world.

Use the **Port Forwarding** screen to forward incoming service requests to the server(s) on your local network. You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server. The port number identifies a service; for example, web service is on port 80 and FTP on port 21. In some cases, such as for unknown services or where one server can support more than one service (for example both FTP and web service), it might be better to specify a range of port numbers.


In addition to the servers for specified services, NAT supports a default server. A service request that does not have a server explicitly designated for it is forwarded to the default server. If the default is not defined, the service request is simply discarded.

**Note:** Many residential broadband ISP accounts do not allow you to run any server processes (such as a Web or FTP server) from your location. Your ISP may periodically check for servers and may suspend your account if it discovers any active services at your location. If you are unsure, refer to your ISP.

## 10.6.2 NAT Port Forwarding Example

Let's say you want to assign ports 21-25 to one FTP, Telnet and SMTP server (**A** in the example), port 80 to another (**B** in the example) and assign a default server IP address of 192.168.1.35 to a third (**C** in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

**Figure 62** Multiple Servers Behind NAT Example

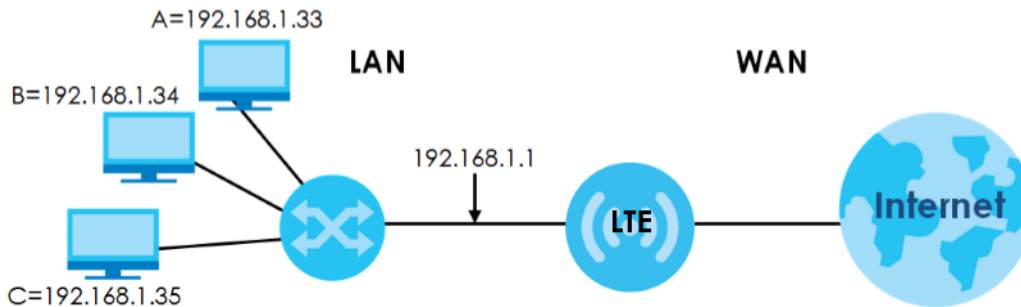


## 10.6.3 Trigger Port Forwarding

Some services use a dedicated range of ports on the client side and a dedicated range of ports on the server side. With regular port forwarding you set a forwarding port in NAT to forward a service (coming in from the server on the WAN) to the IP address of a computer on the client side (LAN). The problem is that port forwarding only forwards a service to a single LAN IP address. In order to use the same service on a different LAN computer, you have to manually replace the LAN computer's IP address in the forwarding port with another LAN computer's IP address.

Trigger port forwarding solves this problem by allowing computers on the LAN to dynamically take turns using the service. The Zyxel Device records the IP address of a LAN computer that sends traffic to the WAN to request a service with a specific port number and protocol (a "trigger" port). When the Zyxel Device's WAN port receives a response with a specific port number and protocol ("incoming" port), the Zyxel Device forwards the traffic to the LAN IP address of the computer that sent the request. After that computer's connection for that service closes, another computer on the LAN can use the service in the same manner. This way you do not need to configure a new IP address each time you want a different LAN computer to use the application.

## 10.6.4 Trigger Port Forwarding Example

The following is an example of trigger port forwarding.

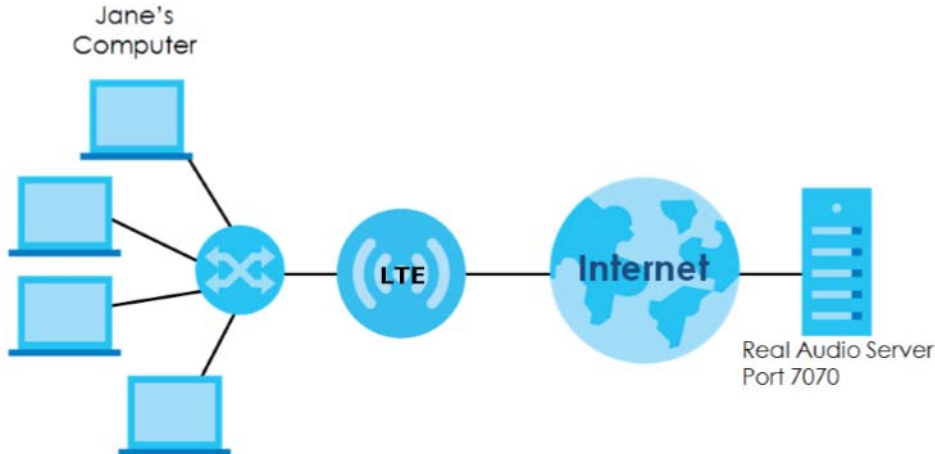**Figure 63** Trigger Port Forwarding Process: Example

- 1 Jane requests a file from the Real Audio server (port 7070).
- 2 Port 7070 is a "trigger" port and causes the Zyxel Device to record Jane's computer IP address. The Zyxel Device associates Jane's computer IP address with the "incoming" port range of 6970-7170.
- 3 The Real Audio server responds using a port number ranging between 6970-7170.
- 4 The Zyxel Device forwards the traffic to Jane's computer IP address.
- 5 Only Jane can connect to the Real Audio server until the connection is closed or times out. The Zyxel Device times out in three minutes with UDP (User Datagram Protocol), or two hours with TCP/IP (Transfer Control Protocol/Internet Protocol).

### 10.6.5 Two Points To Remember About Trigger Ports

- 1 Trigger events only happen on data that is coming from inside the Zyxel Device and going to the outside.
- 2 If an application needs a continuous data stream, that port (range) will be tied up so that another computer on the LAN can't trigger it.

# CHAPTER 11

## DDNS

### 11.1 Overview

Dynamic Domain Name Service (DDNS) services let you use a fixed domain name with a dynamic IP address. Users can always use the same domain name instead of a different dynamic IP address that changes each time to connect to the Zyxel Device or a server in your network.

Note: The Zyxel Device must have a public global IP address and you should have your registered DDNS account information on hand.

### 11.2 What You Can Do

- Use the **General** screen to change your Zyxel Device's DDNS ([Section 11.3 on page 96](#)).

### 11.3 General Screen

To change your Zyxel Device's DDNS, click **Network > DDNS**. The screen appears as shown.

**Figure 64** Dynamic DNS

The screenshot shows the 'Dynamic DNS' configuration page. It features two main sections: 'IPv4 Dynamic DNS Setup' and 'IPv6 Dynamic DNS Setup'. In the IPv4 section, the 'Dynamic DNS' toggle is set to 'Enable', the 'Service Provider' dropdown is set to 'No-IP.com', and there are three empty input fields for 'Host Name', 'Username', and 'Password'. In the IPv6 section, the 'Dynamic DNS' toggle is set to 'Disable', the 'Service Provider' dropdown is set to 'freedns.afraid.org', and there are two empty input fields for 'Host Name' and 'Token'. At the bottom of the page, there are 'Apply' and 'Cancel' buttons.



The following table describes the labels in this screen.

Table 42 Dynamic DNS

LABEL	DESCRIPTION
IPv4 Dynamic DNS Setup	
Dynamic DNS	Select <b>Enable</b> to use dynamic DNS. Select <b>Disable</b> to turn this feature off.
Service Provider	Select the name of your Dynamic DNS service provider.
Host Name	The host name is the domain name that the DDNS service will map to your dynamic global IP address. Type the host name fully qualified, for example, "yourhost.mydomain.net". You can specify up to two host names in the field separated by a comma (",").
Username	Enter your user name.
Password	Enter the password assigned to you.
IPv6 Dynamic DNS Setup	
Dynamic DNS	Select <b>Enable</b> to use dynamic DNS. Select <b>Disable</b> to turn this feature off.
Service Provider	Select the name of your Dynamic DNS service provider.
Host Name	The host name is the domain name that the DDNS service will map to your dynamic global IP address. Type the host name fully qualified, for example, "yourhost.mydomain.net". You can specify up to two host names in the field separated by a comma (",").
Token	This is the token authentication provided by the hosting provider (i.e. FreeDDNS). When the host name is registered, the hosting server provides the token identifier.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

# CHAPTER 12

## Routing


### 12.1 Overview

This chapter shows you how to configure static routes for your Zyxel Device.

The Zyxel Device usually uses the default gateway to route outbound traffic from computers on the LAN to the Internet. To have the Zyxel Device send data to devices not reachable through the default gateway, use static routes.

For example, the next figure shows a computer (**A**) connected to the Zyxel Device's LAN interface. The Zyxel Device routes most traffic from **A** to the Internet through the Zyxel Device's default gateway (**R1**). You create one static route to connect to services offered by your ISP behind router **R2**. You create another static route to communicate with a separate network behind a router **R3** connected to the LAN.

**Figure 65** Example of Static Routing Topology

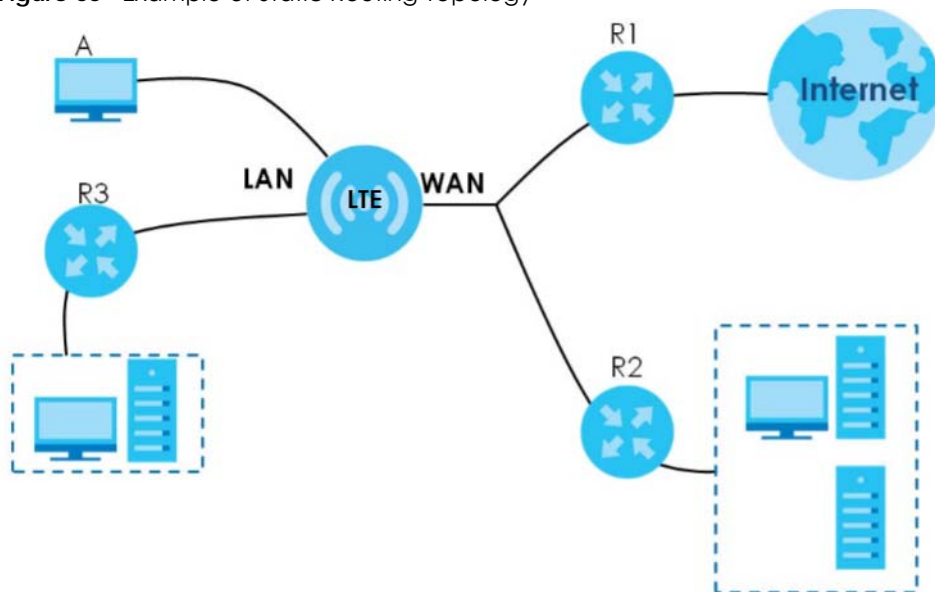

### 12.2 What You Can Do

- Use the **Static Route** screen to view or configure information for a static route ([Section 12.3 on page 99](#)).
- Use the **Dynamic Routing** screen to enable and configure RIP on the Zyxel Device ([Section 12.4 on page 100](#)).

## 12.3 Static Route Screen

Click **Network > Routing > Static Route** to open the **Static Route** screen.

**Figure 66** Network > Routing > Static Route

The screenshot shows the 'Static Route' tab selected. At the top left is an 'Add Static Route' button. Below it is a table titled 'Static Route Rules' with the following columns: #, Status, Destination, Subnet Mask, Gateway, and Modify.

#	Status	Destination	Subnet Mask	Gateway	Modify

The following table describes the labels in this screen.

**Table 43** Network > Routing > Static Route

LABEL	DESCRIPTION
Add Static Route	Click this to create a new rule.
#	This is the number of an individual static route.
Status	This field indicates whether the rule is active (yellow bulb) or not (gray bulb).
Destination	This parameter specifies the IP network address of the final destination. Routing is always based on network number.
Subnet Mask	This parameter specifies the IP network subnet mask of the final destination.
Gateway	This is the IP address of the gateway. The gateway is a router or switch on the same network segment as the device's LAN or WAN port. The gateway helps forward packets to their destinations.
Modify	Click the <b>Edit</b> icon to open a screen where you can modify an existing rule. Click the <b>Delete</b> icon to remove a rule from the Zyxel Device.

### 12.3.1 Add/Edit Static Route

Click the **Add Static Route** button or a rule's **Edit** icon in the **Static Route** screen. Use this screen to configure the required information for a static route.

**Figure 67** Network > Routing > Static Route: Add/Edit

The screenshot shows the 'Add/Edit Static Route' screen. It has two tabs: 'Static Route' (selected) and 'Dynamic Routing'. The 'Static Route' section includes a radio button group for 'Enable' and 'Disable', with 'Disable' selected. Below are three input fields for 'Destination IP Address', 'IP Subnet Mask', and 'Gateway IP Address'. At the bottom are 'Back', 'Apply', and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 44 Network > Routing > Static Route: Add/Edit

LABEL	DESCRIPTION
Static Route	Select to enable or disable this rule.
Destination IP Address	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the IP subnet mask here.
Gateway IP Address	Enter the IP address of the next-hop gateway. The gateway is a router or switch on the same segment as your Zyxel Device's interface(s). The gateway helps forward packets to their destinations.
Back	Click <b>Back</b> to return to the previous screen without saving.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to set every field in this screen to its last-saved value.

## 12.4 Dynamic Routing Screen

Use this screen to enable and configure RIP on the Zyxel Device. Click **Network > Routing > Dynamic Routing** to open the **Dynamic Routing** screen.

Figure 68 Network > Routing > Dynamic Routing

The following table describes the labels in this screen.

Table 45 Network > Routing > Dynamic Routing

LABEL	DESCRIPTION
Dynamic Routing	RIP (Routing Information Protocol) allows a router to exchange routing information with other routers. The RIP version controls the format and the broadcasting method of the RIP packets that the Zyxel Device sends (it recognizes both formats when receiving). RIP version 1 is universally supported but RIP version 2 carries more information. RIP version 1 is probably adequate for most networks, unless you have an unusual network topology. Select the RIP version from <b>RIPv1</b> and <b>RIPv2</b> . Otherwise, select <b>Disable</b> to turn it off.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

# CHAPTER 13

## Interface Group

### 13.1 Overview

By default, the four LAN interfaces on the Zyxel Device are in the same group and can communicate with each other. Creating a new interface will create a new LAN bridge interface (subnet) (for example, 192.168.2.0/24) that acts as a dependent LAN network, and is a different subnet from default LAN subnet (192.168.1.0/24).

### 13.2 What You Can Do

- Use the **Interface Group** screen to create a new interface group ([Section 13.3 on page 101](#)).


### 13.3 Interface Group Screen

You can manually add a LAN/WLAN interface to a new group.

Use the **DHCP** screen to configure the private IP addresses the DHCP server on the Zyxel Device assigns to the clients in the default and/or user-defined groups. See [Chapter 9 on page 82](#) for more information.

Use the **Interface Group** screen to create a new interface group, which is a new LAN bridge interface (subnet). Click **Network > Interface Group** to open the following screen.

**Figure 69** Network > Interface Group

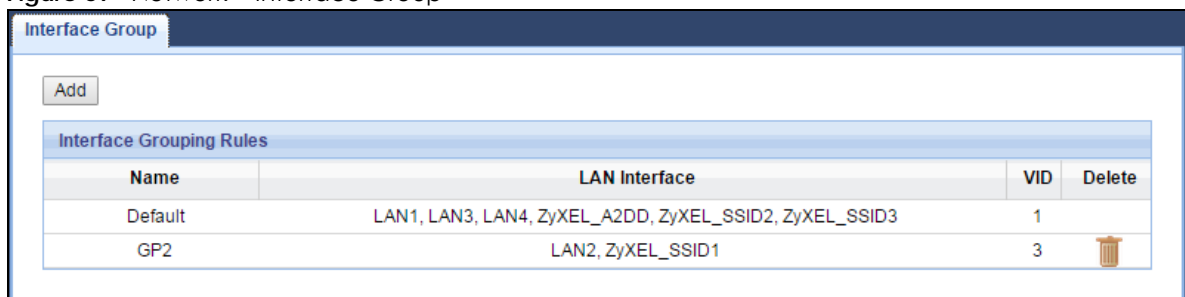

The screenshot shows the 'Interface Group' configuration screen. At the top left is an 'Add' button. Below it is a table titled 'Interface Grouping Rules' with columns for Name, LAN Interface, VID, and Delete. The table contains two rows: 'Default' with LAN interfaces LAN1, LAN3, LAN4, ZyXEL\_A2DD, ZyXEL\_SSID2, ZyXEL\_SSID3 and VID 1; and 'GP2' with LAN interfaces LAN2, ZyXEL\_SSID1 and VID 3. A trash icon is next to the 'Delete' column for the 'GP2' row.

Name	LAN Interface	VID	Delete
Default	LAN1, LAN3, LAN4, ZyXEL_A2DD, ZyXEL_SSID2, ZyXEL_SSID3	1	
GP2	LAN2, ZyXEL_SSID1	3	

The following table describes the fields in this screen.

**Table 46** Network > Interface Group

LABEL	DESCRIPTION
Add	Click this button to create a new interface group.
Name	This shows the descriptive name of the group.
LAN Interface	This shows the interface group.

Table 46 Network &gt; Interface Group (continued)

LABEL	DESCRIPTION
VID	This shows the VLAN ID number (from 0 to 4094) of the interface group.
Modify	Click the <b>Delete</b> icon to remove the user-defined group.

### 13.3.1 Interface Group > Add Screen

Click the **Add** button in the **Interface Group** screen to open the following screen. Use this screen to create a new interface group.

Note: An interface can belong to only one group at a time.

Figure 70 Network &gt; Interface Group &gt; Add

The following table describes the fields in this screen.

Table 47 Network &gt; Interface Group &gt; Add

LABEL	DESCRIPTION
Group Name	Enter a name to identify this group. You can enter up to 30 characters. You can use letters, numbers, hyphens (-) and underscores (_). Spaces are not allowed.
Enable Tx TAG	Click the check box to set the port to tag or not to tag all outgoing traffic with the VLAN ID.
VID	This shows the VLAN ID number (from 0 to 4094) for traffic through the interfaces in this group. This field is not configurable and the VLAN ID is assigned automatically by the system.
Grouped LAN Interfaces	This shows the LAN port(s) or WLAN interface(s) as a member of the VLAN interface group. Select any interfaces that you don't want and click the right arrow button to remove them from this group.

Table 47 Network &gt; Interface Group &gt; Add (continued)

LABEL	DESCRIPTION
Available LAN Interfaces	This shows the available LAN interface(s) (Ethernet LAN or Wireless LAN) that can be selected to form a VLAN interface group.  Select the interfaces that you want and click the left arrow button to add them to this group.
Back	Click <b>Back</b> to quit and return to the previous screen.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to exit this screen without saving.

# CHAPTER 14

## Firewall

### 14.1 Overview


Use these screens to enable and configure the firewall that protects your Zyxel Device and your LAN from unwanted or malicious traffic.

Enable the firewall to protect your LAN computers from attacks by hackers on the Internet and control access between the LAN and WAN. By default the firewall:

- allows traffic that originates from your LAN computers to go to all of the networks.
- blocks traffic that originates on the other networks from going to the LAN.

The following figure illustrates the default firewall action. User **A** can initiate an IM (Instant Messaging) session from the LAN to the WAN (1). Return traffic for this session is also allowed (2). However other traffic initiated from the WAN is blocked (3 and 4).

Figure 71 Default Firewall Action

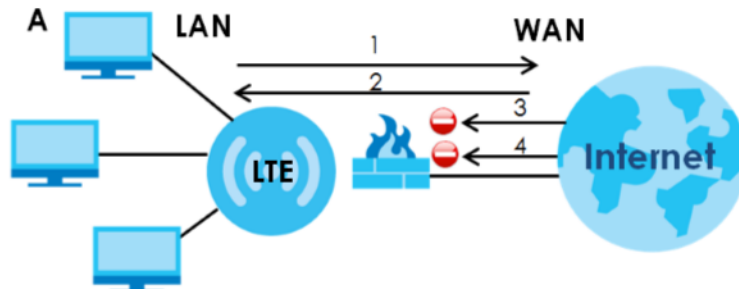

#### 14.1.1 What You Can Do

- Use the **General** screen to enable or disable the Zyxel Device's firewall ([Section 14.2 on page 105](#)).
- Use the **Services** screen enable service blocking, enter/delete/modify the services you want to block and the date/time you want to block them ([Section 14.3 on page 106](#)).

#### 14.1.2 What You Need To Know

The following terms and concepts may help as you read through this chapter.

##### About the Zyxel Device Firewall

The Zyxel Device's firewall feature physically separates the LAN and the WAN and acts as a secure gateway for all data passing between the networks.



It is a stateful inspection firewall and is designed to protect against Denial of Service attacks when activated (click the **General** tab under **Firewall** and then click the **Enable Firewall** check box). The Zyxel Device's purpose is to allow a private Local Area Network (LAN) to be securely connected to the Internet. The Zyxel Device can be used to prevent theft, destruction and modification of data, as well as log events, which may be important to the security of your network.

The Zyxel Device is installed between the LAN and a broadband modem connecting to the Internet. This allows it to act as a secure gateway for all data passing between the Internet and the LAN.

The Zyxel Device has one Ethernet WAN port and four Ethernet LAN ports, which are used to physically separate the network into two areas. The WAN (Wide Area Network) port attaches to the broadband (cable or DSL) modem to the Internet.

The LAN (Local Area Network) port attaches to a network of computers, which needs security from the outside world. These computers will have access to Internet services such as e-mail, FTP and the World Wide Web. However, "inbound access" is not allowed (by default) unless the remote host is authorized to use a specific service.


## Guidelines For Enhancing Security With Your Firewall

- 1 Change the default password via Web Configurator.
- 2 Think about access control before you connect to the network in any way, including attaching a modem to the port.
- 3 Limit who can access your router.
- 4 Don't enable any local service (such as NTP) that you don't use. Any enabled service could present a potential security risk. A determined hacker might be able to find creative ways to misuse the enabled services to access the firewall or the network.
- 5 For local services that are enabled, protect against misuse. Protect by configuring the services to communicate only with specific peers, and protect by configuring rules to block packets for the services at specific interfaces.
- 6 Protect against IP spoofing by making sure the firewall is active.
- 7 Keep the firewall in a secured (locked) room.

## 14.2 General Screen

Use this screen to enable or disable the Zyxel Device's firewall, and set up firewall logs. Click **Security > Firewall** to open the **General** screen.

Figure 72 Security > Firewall > General

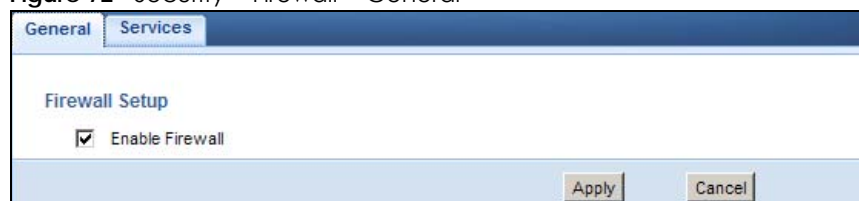

The following table describes the labels in this screen.

Table 48 Security > Firewall > General

LABEL	DESCRIPTION
Enable Firewall	Select this check box to activate the firewall. The Zyxel Device performs access control and protects against Denial of Service (DoS) attacks when the firewall is activated.
Apply	Click <b>Apply</b> to save the settings.
Cancel	Click <b>Cancel</b> to start configuring this screen afresh.

## 14.3 Services Screen

If an outside user attempts to probe an unsupported port on your Zyxel Device, an ICMP response packet is automatically returned. This allows the outside user to know the Zyxel Device exists. Use this screen to prevent the ICMP response packet from being sent. This keeps outsiders from discovering your Zyxel Device when unsupported ports are probed.

You can also use this screen to enable service blocking, enter/delete/modify the services you want to block and the date/time you want to block them.

Click **Security > Firewall > Services**. The screen appears as shown next.

Figure 73 Security > Firewall > Services

The screenshot shows the 'Services' configuration page. It includes sections for ICMP settings, WAN Stealth Mode, and Firewall Rule management. The Firewall Rule section contains a table with the following structure:

Firewall Rule									
#	ServiceName	MACAddress	DestIP	SourceIP	Protocol	DestPortRange	SourcePortRange	Action	Delete

The following table describes the labels in this screen.

Table 49 Security &gt; Firewall &gt; Services

LABEL	DESCRIPTION
ICMP	Internet Control Message Protocol is a message control and error-reporting protocol between a host server and a gateway to the Internet. ICMP uses Internet Protocol (IP) datagrams, but the messages are processed by the TCP/IP software and directly apparent to the application user.
Respond to Ping on	The Zyxel Device will not respond to any incoming Ping requests when <b>Disable</b> is selected. Select <b>LAN</b> to reply to incoming LAN Ping requests. Select <b>WAN</b> to reply to incoming WAN Ping requests. Otherwise select <b>LAN&amp;WAN</b> to reply to all incoming LAN and WAN Ping requests.
Apply	Click <b>Apply</b> to save the settings.
WAN Stealth Mode	
Enable WAN Stealth Mode	Select this check box to silently discard the matched packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender.
Apply	Click <b>Apply</b> to save the settings.
Enable Firewall Rule	
Enable Firewall Rule	Select this check box to activate the firewall rules that you define (see <b>Add Firewall Rule</b> below).
Apply	Click <b>Apply</b> to save the settings.
Add Firewall Rule	
Service Name	Enter a name that identifies or describes the firewall rule.
MAC Address	Enter the MAC address of the computer for which the firewall rule applies.
Dest IP Address	Enter the IP address of the computer to which traffic for the application or service is entering. The Zyxel Device applies the firewall rule to traffic initiating from this computer.
Source IP Address	Enter the IP address of the computer that initializes traffic for the application or service. The Zyxel Device applies the firewall rule to traffic initiating from this computer.
Protocol	Select the protocol ( <b>TCP</b> , <b>UDP</b> or <b>ICMP</b> ) used to transport the packets for which you want to apply the firewall rule.
Dest Port Range	Enter the port number/range of the destination that define the traffic type, for example TCP port 80 defines web traffic.
Source Port Range	Enter the port number/range of the source that define the traffic type, for example TCP port 80 defines web traffic.
Add Rule	Click <b>Add</b> to save the firewall rule.
Firewall Rule	
#	This is your firewall rule number. The ordering of your rules is important as rules are applied in turn.
Service Name	This is a name that identifies or describes the firewall rule.
MAC address	This is the MAC address of the computer for which the firewall rule applies.
Dest IP	This is the IP address of the computer to which traffic for the application or service is entering.
Source IP	This is the IP address of the computer from which traffic for the application or service is initialized.
Protocol	This is the protocol ( <b>TCP</b> , <b>UDP</b> or <b>ICMP</b> ) used to transport the packets for which you want to apply the firewall rule.
Dest Port Range	This is the port number/range of the destination that define the traffic type, for example TCP port 80 defines web traffic.
Source Port Range	This is the port number/range of the source that define the traffic type, for example TCP port 80 defines web traffic.

Table 49 Security &gt; Firewall &gt; Services (continued)

LABEL	DESCRIPTION
Action	<b>DROP</b> - Traffic matching the conditions of the firewall rule are stopped.
Delete	Click <b>Delete</b> to remove the firewall rule.
Cancel	Click <b>Cancel</b> to start configuring this screen afresh.

See [Appendix B on page 171](#) for commonly used services and port numbers.

# CHAPTER 15

# Content Filtering

## 15.1 Overview

This chapter shows you how to configure content filtering. Content filtering is the ability to block certain web features and specific URLs.

### Keyword Blocking URL Checking

The Zyxel Device checks the URL's domain name (or IP address) and file path separately when performing keyword blocking.

The URL's domain name or IP address is the characters that come before the first slash in the URL. For example, with the URL [www.zyxel.com.tw/news/pressroom.php](http://www.zyxel.com.tw/news/pressroom.php), the domain name is [www.zyxel.com.tw](http://www.zyxel.com.tw).

The file path is the characters that come after the first slash in the URL. For example, with the URL [www.zyxel.com.tw/news/pressroom.php](http://www.zyxel.com.tw/news/pressroom.php), the file path is [news/pressroom.php](http://news/pressroom.php).

Since the Zyxel Device checks the URL's domain name (or IP address) and file path separately, it will not find items that go across the two. For example, with the URL [www.zyxel.com.tw/news/pressroom.php](http://www.zyxel.com.tw/news/pressroom.php), the Zyxel Device would find "tw" in the domain name ([www.zyxel.com.tw](http://www.zyxel.com.tw)). It would also find "news" in the file path ([news/pressroom.php](http://news/pressroom.php)) but it would not find "tw/news".

## 15.2 What You Can Do

- Use the **Content Filter** screen to restrict web features, and designate a trusted computer ([Section 15.3 on page 109](#)).

## 15.3 Content Filter

Use this screen to restrict web features, and designate a trusted computer. You can also use this screen to configure URL filtering settings to block the users on your network from accessing certain web sites. Click **Security > Content Filter** to open the **Content Filter** screen.

Figure 74 Security &gt; Content Filter

The following table describes the labels in this screen.

Table 50 Security &gt; Content Filter

LABEL	DESCRIPTION
Trusted IP Setup	To enable this feature, type an IP address of any one of the computers in your network that you want to have as a trusted computer. This allows the trusted computer to have full access to all features that are configured to be blocked by content filtering.  Leave this field blank to have no trusted computers.
Restrict Web Features	Select the box(es) to restrict a feature. When you download a page containing a restricted feature, that part of the web page will appear blank or grayed out.
Enable URL Keyword Blocking	The Zyxel Device can block Web sites with URLs that contain certain keywords in the domain name or IP address. For example, if the keyword "bad" was enabled, all sites containing this keyword in the domain name or IP address will be blocked, e.g., URL http://www.website.com/bad.html would be blocked. Select this check box to enable this feature.
Keyword	Type a keyword in this field. You may use any character (up to 64 characters). Wildcards are not allowed. You can also enter a numerical IP address.
Keyword List	This list displays the keywords already added.
Add	Click <b>Add</b> after you have typed a keyword.  Repeat this procedure to add other keywords. Up to 64 keywords are allowed.  When you try to access a web page containing a keyword, you will get a message telling you that the content filter is blocking this request.
Delete	Highlight a keyword in the lower box and click <b>Delete</b> to remove it. The keyword disappears from the text box after you click <b>Apply</b> .
Clear All	Click this button to remove all of the listed keywords.
Apply	Click <b>Apply</b> to save your changes.
Reset	Click <b>Reset</b> to begin configuring this screen afresh

# CHAPTER 16

## IPv6 Firewall

### 16.1 Overview

This chapter shows you how to enable and create IPv6 firewall rules to block unwanted IPv6 traffic.

### 16.2 What You Can Do

- Use the **IPv6 Firewall** screen to enable and create IPv6 firewall rules to block unwanted IPv6 traffic ([Section 16.3 on page 111](#)).

### 16.3 IPv6 Firewall Screen

Click **Configuration > Security > IPv6 Firewall**. The **Service** screen appears as shown.

**Figure 75** Configuration > Security > IPv6 Firewall

#	ServiceName	MACAddress	DestIP	SourceIP	Protocol	DestPortRange	SourcePortRange	Action	Delete
---	-------------	------------	--------	----------	----------	---------------	-----------------	--------	--------

The following table describes the labels in this screen.

Table 51 Configuration > Security > IPv6 Firewall

LABEL	DESCRIPTION
Enable Firewall Rule	
Enable Firewall Rule	Select this check box to activate the firewall rules that you define (see <b>Add Firewall Rule</b> below).

Table 51 Configuration &gt; Security &gt; IPv6 Firewall (continued)

LABEL	DESCRIPTION
Apply	Click <b>Apply</b> to save the settings.
Add Firewall Rule	
Service Name	Enter a name that identifies or describes the firewall rule.
MAC Address	Enter the MAC address of the computer for which the firewall rule applies.
Dest IP Address	Enter the IPv6 address of the computer to which traffic for the application or service is entering.  The Zyxel Device applies the firewall rule to traffic destined for this computer.
Source IP Address	Enter the IPv6 address of the computer that initializes traffic for the application or service.  The Zyxel Device applies the firewall rule to traffic initiating from this computer.
Protocol	Select the protocol ( <b>TCP</b> , <b>UDP</b> or <b>ICMP</b> ) used to transport the packets for which you want to apply the firewall rule.
Dest Port Range	Enter the port number/range of the destination that defines the traffic type, for example TCP port 80 defines web traffic.
Source Port Range	Enter the port number/range of the source that defines the traffic type, for example TCP port 80 defines web traffic.
Add Rule	Click <b>Add Rule</b> to save the firewall rule.
Firewall Rule	
#	This is your firewall rule number. The ordering of your rules is important as rules are applied in turn.
ServiceName	This is a name that identifies or describes the firewall rule.
MACAddress	This is the MAC address of the computer for which the firewall rule applies.
DestIP	This is the IP address of the computer to which traffic for the application or service is entering.
SourceIP	This is the IP address of the computer to which traffic for the application or service is initialized.
Protocol	This is the protocol ( <b>TCP</b> , <b>UDP</b> or <b>ICMP</b> ) used to transport the packets for which you want to apply the firewall rule.
DestPortRange	This is the port number/range of the destination that defines the traffic type, for example TCP port 80 defines web traffic.
SourcePortRange	This is the port number/range of the source that defines the traffic type, for example TCP port 80 defines web traffic.
Action	<b>DROP</b> - Traffic matching the conditions of the firewall rule is stopped.
Delete	Click <b>Delete</b> to remove the firewall rule.
Cancel	Click <b>Cancel</b> to restore your previously saved settings.



# CHAPTER 17

## SMS

### 17.1 Overview

SMS (Short Message Service) allows you to send and view the text messages that the Zyxel Device received from mobile devices or the service provider.


### 17.2 What You Can Do

Use the **SMS** screen to send new messages and view messages received on the Zyxel Device (see [Section 17.3 on page 113](#)).

### 17.3 SMS Screen

Use this screen to send SMS text messages and view messages received. To access this screen, click **Configuration > Application > SMS**.

**Figure 76** Configuration > Application > SMS

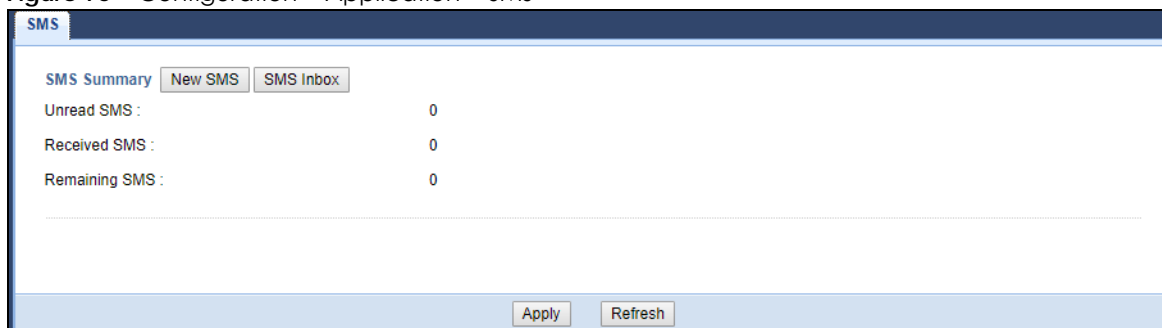

The following table describes the labels in this screen.

**Table 52** Configuration > Application > SMS

LABLE	DESCRIPTION
SMS Summary	Click <b>New SMS</b> to display the New SMS section. Click <b>SMS Inbox</b> to display only the SMS Inbox List.
Unread SMS	This shows the number of unread SMS text messages in the SMS inbox.
Received SMS	This shows the number of SMS text messages that the Zyxel Device received.
Remaining SMS	This shows the number of SMS text messages that are to be sent.

### 17.3.1 SMS > New SMS

Click the **New SMS** button in the **SMS** screen to open the following screen. Use this screen to create a new SMS text message.

**Figure 77** Configuration > Application > SMS > New SMS

The following table describes the labels in this screen.

**Table 53** Configuration > Application > SMS > New SMS

LABEL	DESCRIPTION
New SMS	
Send	Click this button to send the new message.
Receivers	Enter the phone number to which you want to send a SMS text message.
Text Message	Enter the message content. You can type up to 160 characters in one message. If the message exceeds 160 characters, more than one SMS will be sent. The maximum number of SMS that can be sent is 20 (1400 characters total).
Result	This shows whether the message is sent successfully.
Refresh	Click <b>Refresh</b> to update the screen.
Apply	Click <b>Apply</b> to save your changes.

### 17.3.2 SMS > SMS Inbox

Click the **SMS Inbox** button in the **SMS** screen to open the following screen. The number of messages your SMS inbox can store depends on the memory capacity of your SIM card. The SMS inbox will stop receiving messages if it reaches its storage limit.

Use this screen to see the log of the SMS text messages received.

**Figure 78** Configuration > Application > SMS > SMS Inbox

SMS Summary | New SMS | SMS Inbox

Unread SMS: 0  
Received SMS: 9  
Remaining SMS: 21

ID	From Phone Number	Timestamp	SMS Text Preview	Actions
1	0911510308	2018/09/26 09:18:14	中華電信通知：已收...	<input checked="" type="checkbox"/> Detail Reply Forward
2	0911510308	2018/09/26 09:36:18	中華電信通知：已收...	<input type="checkbox"/> Detail Reply Forward
3	0911510308	2018/09/26 09:37:21	中華電信通知：已收...	<input type="checkbox"/> Detail Reply Forward
4	0911513580	2018/08/17 14:05:07	中華電信通知：10...	<input type="checkbox"/> Detail Reply Forward
5	0911513580	2018/08/17 14:05:07	中華電信通知：10...	<input type="checkbox"/> Detail Reply Forward
6	0911513580	2018/09/16 15:14:19	中華電信通知：10...	<input type="checkbox"/> Detail Reply Forward
7	0911513580	2018/09/16 15:14:19	中華電信通知：10...	<input type="checkbox"/> Detail Reply Forward
8	0928000222	2018/09/17 00:18:21	親愛的中華客戶，本期...	<input type="checkbox"/> Detail Reply Forward
9	0928000222	2018/09/19 14:47:48	親愛的中華客戶，您的...	<input type="checkbox"/> Detail Reply Forward

Detail SMS Message  
Message: 中華電信通知：已收到0900617327號107年04月電信費 84元，若不需要本通知，請  
手撥直撥800，感謝您。

Apply Refresh

The following table describes the labels in this screen.

**Table 54** Configuration > Application > SMS > SMS Inbox

LABEL	DESCRIPTION
SMS Inbox List	
Refresh	Click <b>Refresh</b> to update the list.
Delete	Click <b>Delete</b> to delete an entry.
Close	Click <b>Close</b> to hide the SMS Inbox List.
ID	This field displays the index number of the message.
From Phone Number	This field displays the mobile phone number from which the message is sent.
Timestamp	This field displays the date and time the message was received.
SMS Text Preview	This field displays the content of the message.
Actions	This field displays the actions you can take with the messages you received.  Click <b>Detail</b> to see the complete message.  Click <b>Reply</b> to reply the message.  Click <b>Forward</b> to send the message you received to others.
Refresh	Click <b>Refresh</b> to update the screen.
Apply	Click <b>Apply</b> to save your changes to the Zyxel Device.

# CHAPTER 18

# Remote Management

## 18.1 Remote Management Overview

Use remote management to control through which interface(s), each service can access the Zyxel Device.

Note: The Zyxel Device is managed using the Web Configurator.

## 18.2 What You Can Do

- Use the **General** screen to change your Zyxel Device's remote management settings ([Section 18.3 on page 116](#)).
- Use the **Remote Management** screen to configure through which IP address can access the Zyxel Device ([Section 18.4 on page 118](#)).

## 18.3 WWW Screen

To change your Zyxel Device's remote management settings, click **Configuration > Management > Remote MGMT** to open the **WWW** screen.

Note: : You must enable the remote management service in the **Configuration > Management > Remote MGMT > Remote Management** screen for the settings in the **WWW** screen to take effect.

Figure 79 Configuration &gt; Management &gt; Remote MGMT &gt; WWW

**WWW Remote Management**

**HTTPS**

Port :

Access Status :

Secured Client IP Address :  All  Selected

---

**HTTP**

Port :

Access Status :

Secured Client IP Address :  All  Selected

**Note:**

1. For UPnP to function normally, the HTTP service must be available for LAN computers using UPnP.
2. You may also need to create a Firewall rule.

The following table describes the labels in this screen.

Table 55 Configuration &gt; Management &gt; Remote MGMT &gt; WWW

LABEL	DESCRIPTION
HTTPS	
Port	You may change the server port number for a HTTPS service if needed. However you must use the same port number in order to use that service for remote management.
Access Status	Select the interface(s) through which a computer may access the Zyxel Device using this HTTPS service.
Secured Client IP Address	Select <b>All</b> to allow all computers to access the Zyxel Device using the HTTPS service. Otherwise, check <b>Selected</b> and specify the IP address of the computer that can access the Zyxel Device
HTTP	
Port	You may change the server port number for a HTTP service if needed. However you must use the same port number in order to use that service for remote management.
Access Status	Select the interface(s) through which a computer may access the Zyxel Device using this HTTP service. If you activated UPnP, select WAN to allow the UPnP traffic to come in from the WAN side successfully.
Secured Client IP Address	Select <b>All</b> to allow all computers to access the Zyxel Device using this HTTP service. Otherwise, check <b>Selected</b> and specify the IP address of the computer that can access the Zyxel Device.
Cancel	Click <b>Cancel</b> to exit this screen without saving.
Apply	Click <b>Apply</b> to save your settings and exit this screen.

## 18.4 Remote Management Screen

Use this screen to configure through which IP address can access the Zyxel Device. You can also specify the port numbers the IP addresses must use to connect to the Zyxel Device. Click **Configuration > Management > Remote MGMT > Remote Management** to open the following screen.

Note: The firewall will be disabled when remote management is enabled. To activate the firewall, you'll need to create a new firewall rule to allow the remote management traffic to come in from the WAN side.

**Figure 80** Configuration > Management > Remote MGMT > Remote Management

The following table describes the fields in this screen.

**Table 56** Configuration > Management > Remote MGMT > Remote Management

LABEL	DESCRIPTION
Remote Management	Select the <b>Enable</b> check box to allow access to the Zyxel Device from the IP address and activate the settings you've made in the <b>WWW</b> screen.
IP Address	Select the Enable check box to allow access to the Zyxel Device from the IP address and activate the settings you've made in the WWW screen.
Netmask	Select the Enable check box to allow access to the Zyxel Device from the IP address and activate the settings you've made in the WWW screen.
Port	This is the port number that the computer must use to access the Zyxel Device. If the HTTP Port number was changed to 8080 in the <b>Configuration &gt; Management &gt; Remote MGMT &gt; WWW</b> screen, then this computer should use the same number. For example http://1.1.1.1:8080 where 1.1.1.1 is the IP address of the Zyxel Device.
Cancel	Click <b>Cancel</b> to restore your previously saved settings.
Apply	Click <b>Apply</b> to save your changes.

# CHAPTER 19

## Bandwidth Management


### 19.1 Overview

This chapter contains information about configuring bandwidth management and editing rules.

ZyXEL's Bandwidth Management allows you to specify bandwidth management rules based on an application.

In the figure below, uplink traffic goes from the LAN device (**A**) to the WAN device (**B**). Bandwidth management is applied before sending the packets out to the WAN. Downlink traffic comes back from the WAN device (**B**) to the LAN device (**A**). Bandwidth management is applied before sending the traffic out to LAN.

**Figure 81** Bandwidth Management Example

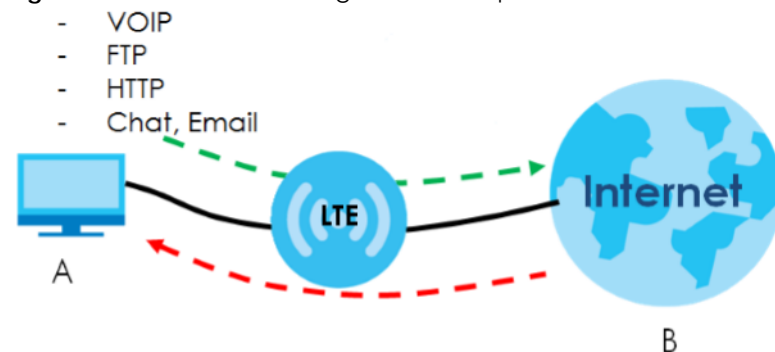

You can allocate specific amounts of bandwidth capacity (bandwidth budgets) to individual applications (like VoIP, Web, FTP, and E-mail for example).

### 19.2 What You Can Do

- Use the **General** screen to enable bandwidth management and assign bandwidth values ([Section 19.4 on page 120](#)).
- Use the **Advanced** screen to configure bandwidth managements rule for the services and applications ([Section 19.5 on page 120](#)).

### 19.3 What You Need To Know

The sum of the bandwidth allotments that apply to the WAN interface (LAN to WAN, WLAN to WAN) must be less than or equal to the upstream bandwidth that you configure in the **Bandwidth Management > General** screen ([Section 19.5 on page 120](#)).

The sum of the bandwidth allotments that apply to the LAN interface (WAN to LAN, WAN to WLAN) must be less than or equal to the downstream bandwidth that you configure in the **Bandwidth Management > General** screen [Section 19.5 on page 120](#).

## 19.4 General Screen

Use this screen to have the Zyxel Device apply bandwidth management.

Click **Management > Bandwidth MGMT** to open the bandwidth management **General** screen.

**Figure 82** Management > Bandwidth Management > General

The following table describes the labels in this screen.

**Table 57** Management > Bandwidth Management > General

LABEL	DESCRIPTION
Enable Bandwidth Management	This field allows you to have Zyxel Device apply bandwidth management. Enable bandwidth management to give traffic that matches a bandwidth rule priority over traffic that does not match a bandwidth rule. Enabling bandwidth management also allows you to control the maximum or minimum amounts of bandwidth that can be used by traffic that matches a bandwidth rule.
Bandwidth of Upstream	Specify the total amount of bandwidth that you want to dedicate to uplink traffic. The recommendation is to set this to match the actual upstream data rate. This is traffic from LAN/WLAN to WAN.
Bandwidth of Downstream	Specify the total amount of bandwidth that you want to dedicate to downlink traffic. The recommendation is to set this to match the actual downstream data rate. This is traffic from WAN to LAN/WLAN.
Flexible Bandwidth Management	Select <b>Enable</b> to use up to 100% of the configured bandwidth. If you select <b>Disable</b> , you can only use up to 33% of the configured bandwidth.
Apply	Click <b>Apply</b> to save your customized settings.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 19.5 Advanced Screen

Use this screen to configure bandwidth management rules for the pre-defined services or applications.



You can also use this screen to configure bandwidth management rule for other services or applications that are not on the pre-defined list of Zyxel Device. Additionally, you can define the IP addresses and port for a service or application.

Click **Management > Bandwidth MGMT > Advanced** to open the bandwidth management **Advanced** screen.

**Figure 83** Management > Bandwidth Management > Advanced

The following table describes the labels in this screen.

**Table 58** Management > Bandwidth Management > Advanced

LABEL	DESCRIPTION
Add New Rule	Click this to open a screen where you can create a new bandwidth management rule for a service or application.
Status	This field indicates whether the rule is active (yellow bulb) or not (gray bulb).
Grouping	This field displays the IP address or a range of IP addresses of the destination computer for whom this rule applies.
Service	This field displays the protocol and port used for the service.
Control	This field displays whether the maximum/minimum bandwidth allowed or a priority level is specified in the rule.
Reset QoS Rule	Click this button to remove all bandwidth management rules.

## 19.5.1 Add Bandwidth Management Rule

If you want to create a new bandwidth management rule for a service or application, click the **Add New Rule** icon in the **Advanced** screen. The following screen displays.

**Figure 84** Bandwidth Management: Add New Rule

The following table describes the labels in this screen.

Table 59 Bandwidth Management Rule Configuration: Application List

LABEL	DESCRIPTION
Protocol	If you set <b>Service</b> to <b>Service Port</b> , select the protocol ( <b>TCP</b> , or <b>UDP</b> ) used for the service.
Service Type	If you set <b>Service</b> to <b>Pre-defined Application profiles</b> , select the name of the service to which the Zyxel Device applies the bandwidth management rule.

See [Appendix B on page 171](#) for commonly used services and port numbers.

# CHAPTER 20

# Universal Plug-and-Play (UPnP)

## 20.1 Overview

This chapter introduces the UPnP feature in the web configurator.

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. A UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

## 20.2 What You Can Do

- Use the **UPnP** screen to enable UPnP on your Zyxel Device ([Section 20.4 on page 124](#)).

## 20.3 What You Need to Know

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

### 20.3.1 NAT Traversal

UPnP NAT traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses
- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT traversal and UPnP.

See the NAT chapter for more information on NAT.

## 20.3.2 Cautions with UPnP

The automated nature of NAT traversal applications in establishing their own services and opening firewall ports may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.

When a UPnP device joins a network, it announces its presence with a multicast message. For security reasons, the Zyxel Device allows multicast messages on the LAN only.


All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

## 20.4 UPnP Screen

Use this screen to enable UPnP on your Zyxel Device.

Click **Management > UPnP** to display the screen shown next.

**Figure 85** Management > UPnP

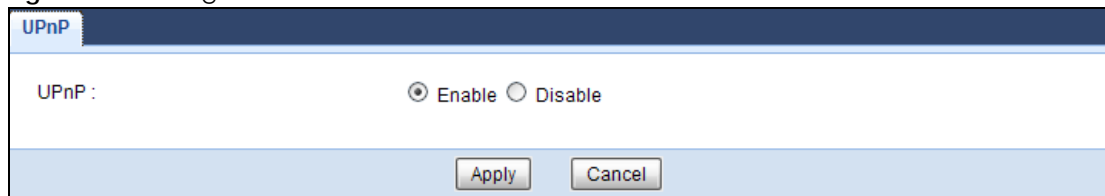

The following table describes the fields in this screen.

**Table 60** Management > UPnP

LABEL	DESCRIPTION
UPnP	Select <b>Enable</b> to activate UPnP. Be aware that anyone could use a UPnP application to open the web configurator's login screen without entering the Zyxel Device's IP address (although you must still enter the password to access the web configurator).
Apply	Click <b>Apply</b> to save the setting to the Zyxel Device.
Cancel	Click <b>Cancel</b> to return to the previously saved settings.

## 20.5 Technical Reference


The sections show examples of using UPnP.

### 20.5.1 Using UPnP in Windows 7 Example


This section shows you how to use the UPnP feature in Windows 7. UPnP server is installed in Windows 7. Activate UPnP on the LTE3301 in Settings > Internet > UPnP.

Make sure the computer is connected to a LAN port of the LTE3301. Turn on your computer and the LTE3301.


- 1 Click the start icon, **Control Panel** and then the **Network and Sharing Center**.

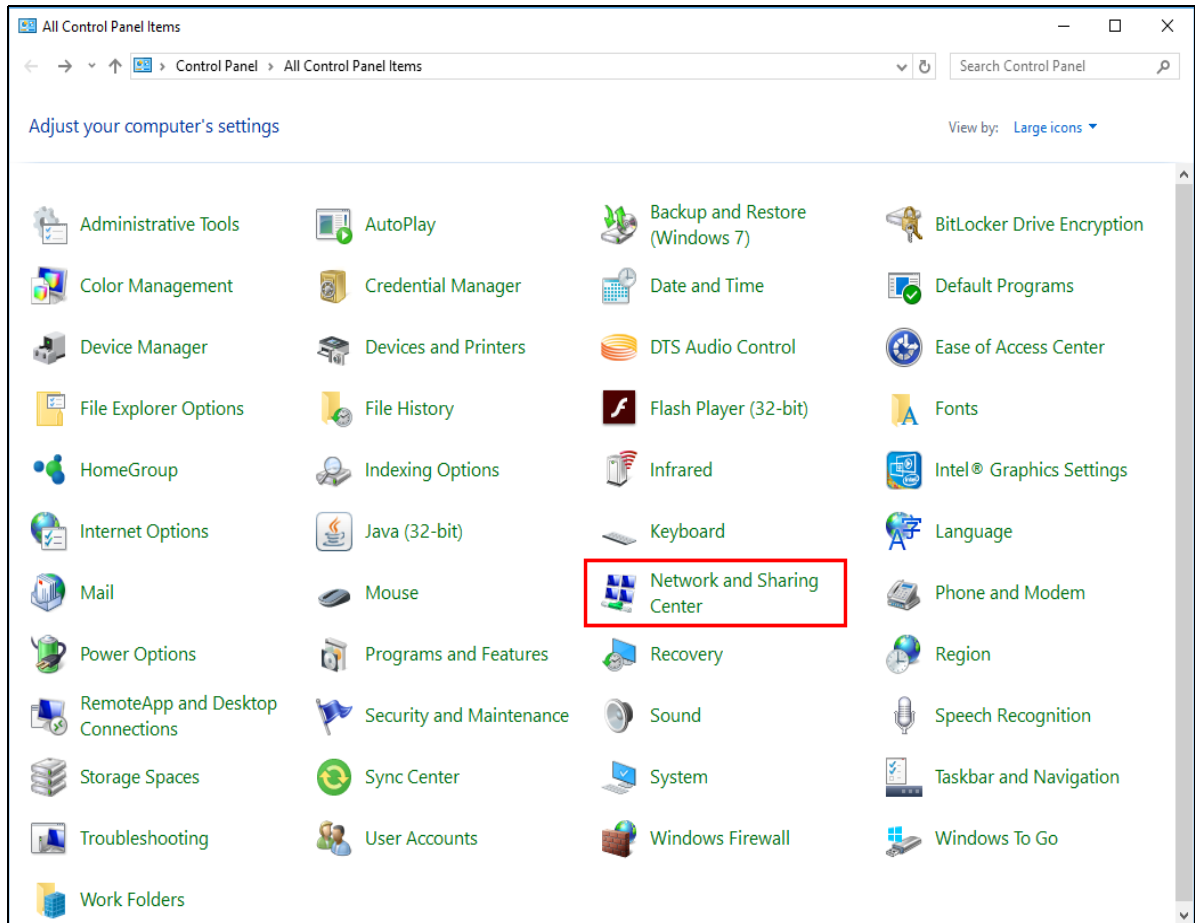

- 2 Click **Change Advanced Sharing Settings**.

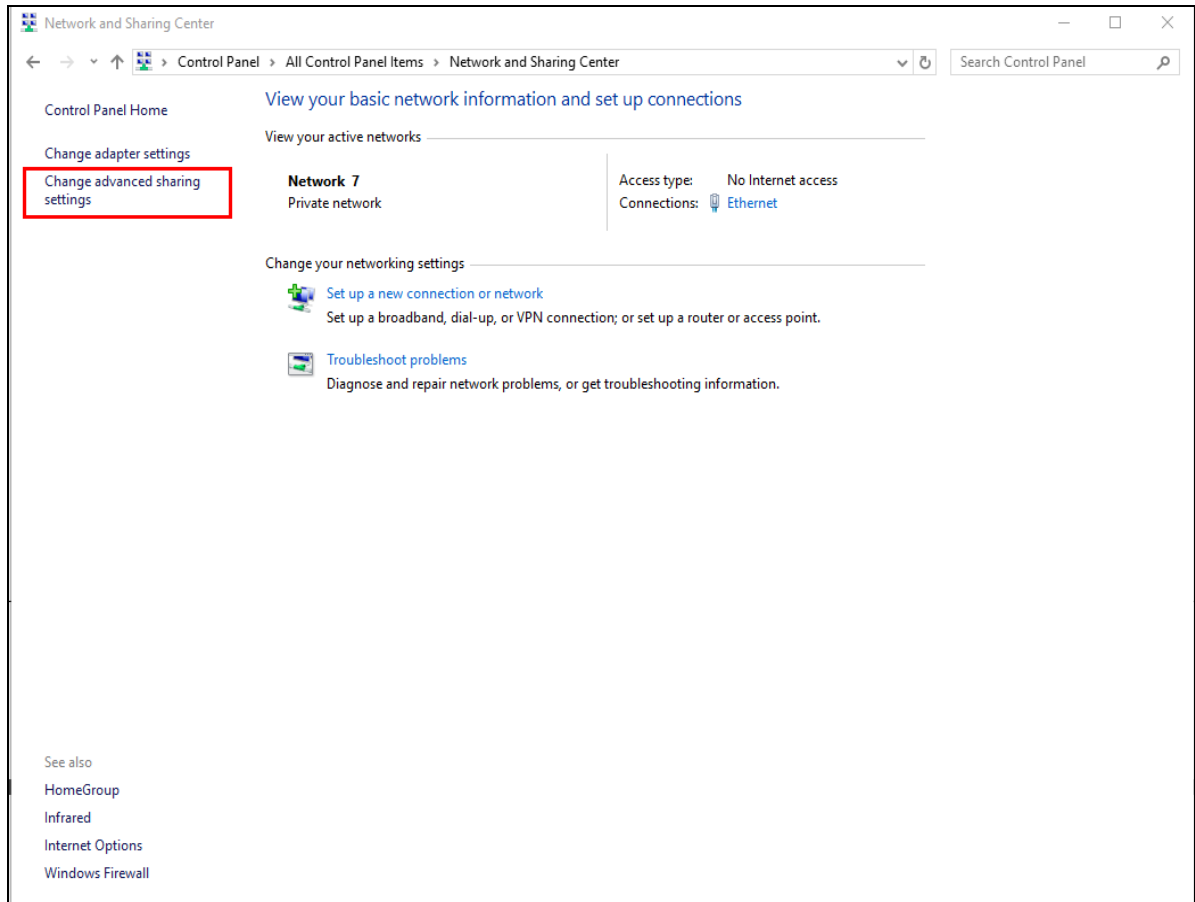

- 3 Select **Turn on network discovery** and click **Save Changes**. Network discovery allows your computer to find other computers and devices on the network and other computers on the network to find your computer. This makes it easier to share files and printers.

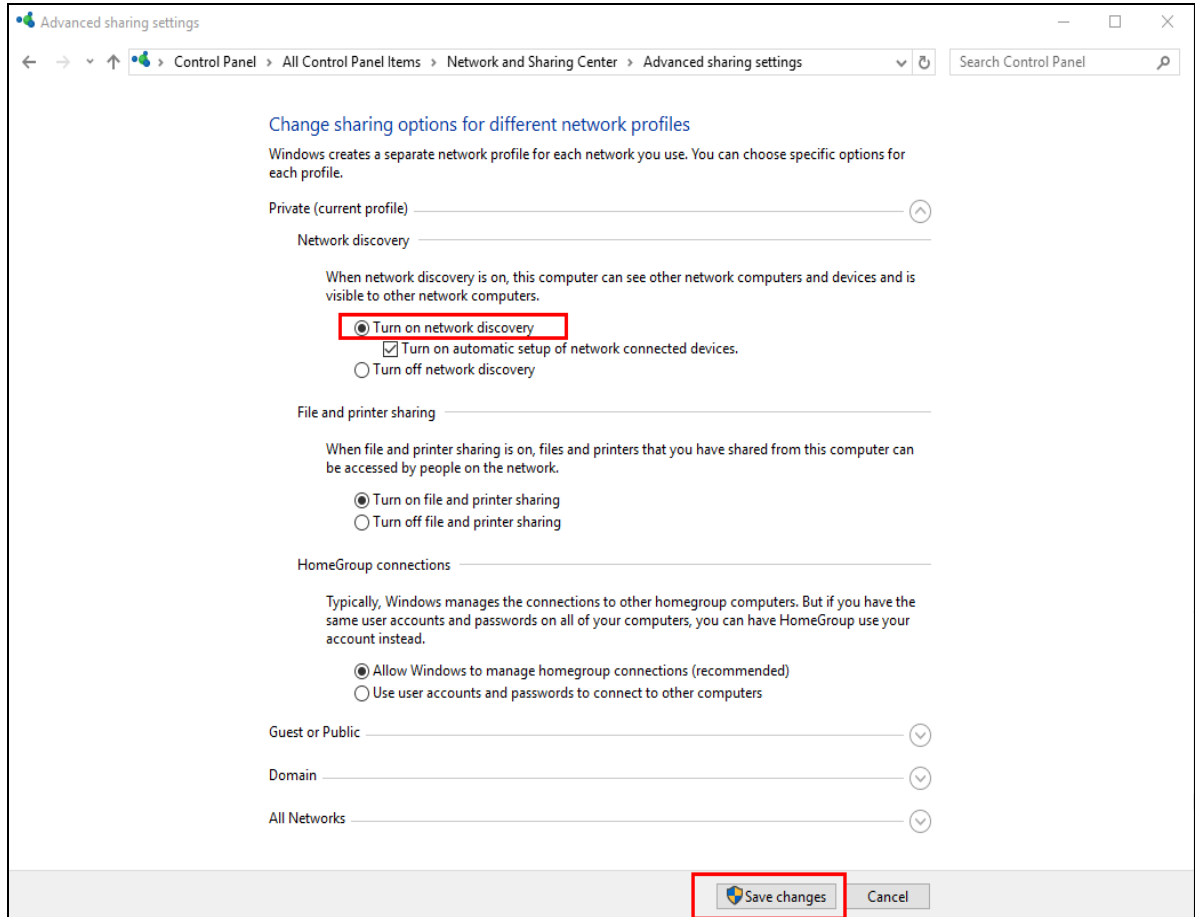


## 20.5.2 Turning on UPnP in Windows 10 Example


This section shows you how to use the UPnP feature in Windows 10. UPnP server is installed in Windows 10. Activate UPnP on the LTE3301 in **Settings > Internet > UPnP**.

Make sure the computer is connected to the LAN port of the LTE3301. Turn on your computer and the LTE3301.

- 1 Click the start icon, **Settings** and then **Network & Internet**.

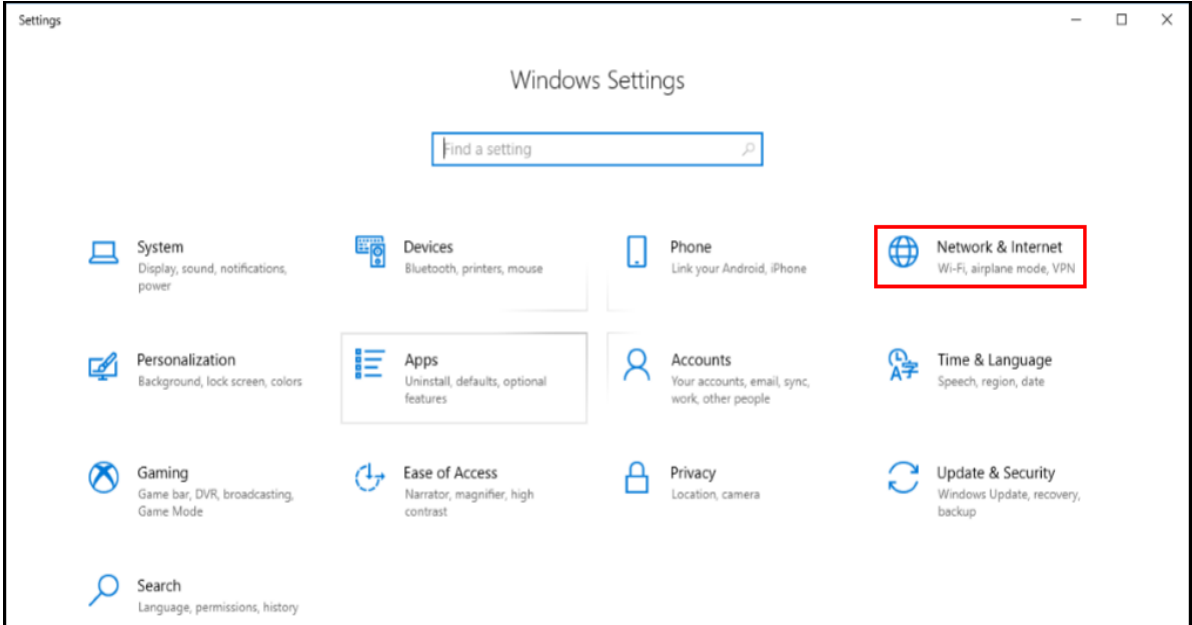


2 Click Network and Sharing Center.

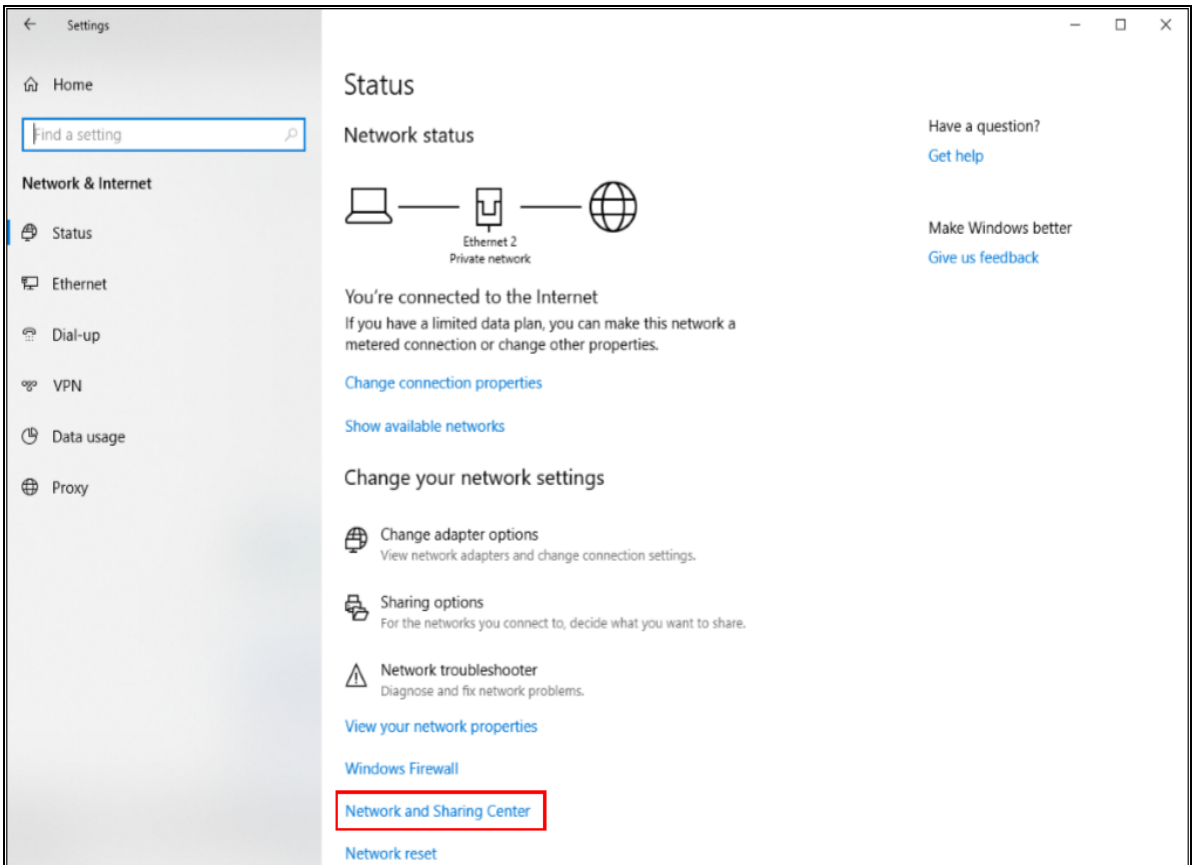


3 Click Change advanced sharing settings.



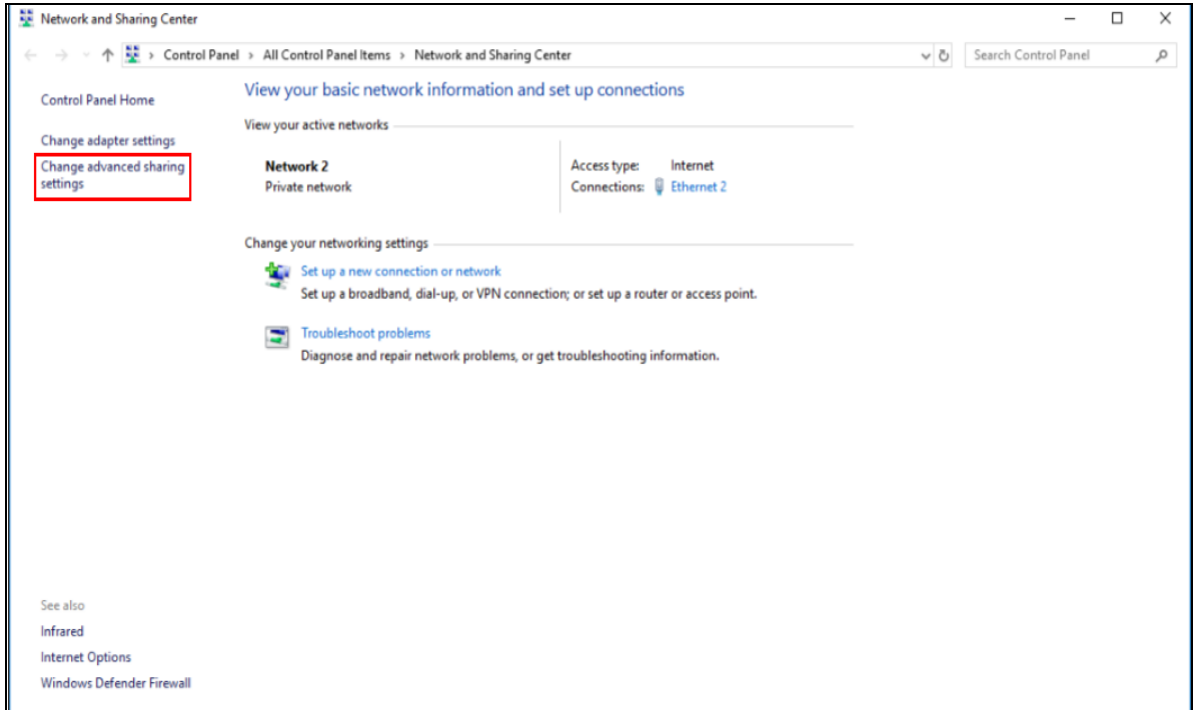

- 4 Under **Domain**, select **Turn on network discovery** and click **Save Changes**. Network discovery allows your computer to find other computers and devices on the network and other computers on the network to find your computer. This makes it easier to share files and printers

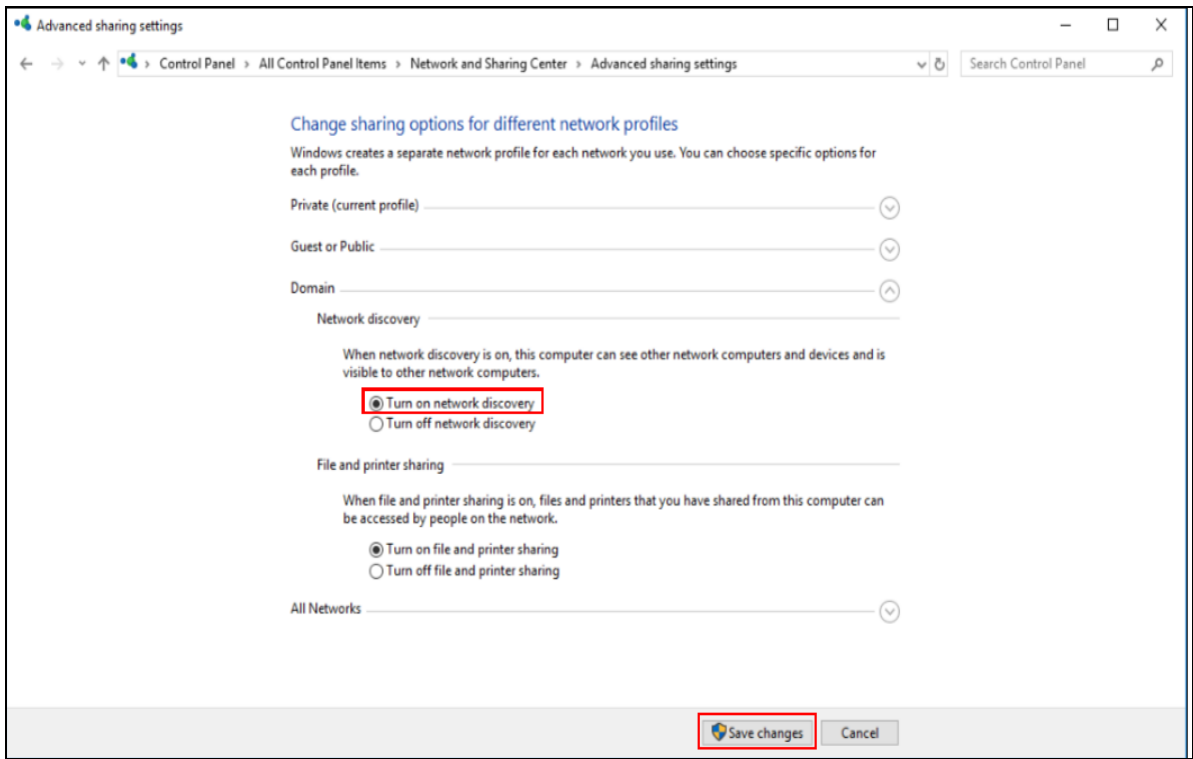

# CHAPTER 21

## TR-069

### 21.1 Overview

This chapter explains how to configure the Zyxel Device's TR-069 auto-configuration settings.

### 21.2 What You Can Do

- Use the **TR-069** screen to configure your Zyxel Device to be managed by an ACS ([Section 21.3 on page 130](#)).

### 21.3 TR-069 Screen

TR-069 defines how Customer Premise Equipment (CPE), for example your Zyxel Device, can be managed over the WAN by an Auto Configuration Server (ACS). TR-069 is based on sending Remote Procedure Calls (RPCs) between an ACS and a client device. RPCs are sent in Extensible Markup Language (XML) format over HTTP or HTTPS.

An administrator can use an ACS to remotely set up the Zyxel Device, modify settings, perform firmware upgrades as well as monitor and diagnose the Zyxel Device. You have to enable the device to be managed by the ACS and specify the ACS IP address or domain name and username and password.

Click **Management > TR-069** to open the following screen. Use this screen to configure your Zyxel Device to be managed by an ACS.

**Figure 86** Management > TR-069

TR069 :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Inform :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Inform Interval :	<input type="text" value="86400"/>
ACS URL :	<input type="text"/>
ACS Username :	<input type="text" value="admin"/>
ACS Password :	<input type="password" value="*****"/>
ConnectionRequest Port :	<input type="text" value="51005"/>
Connection Request Username :	<input type="text"/>
Connection Request Password :	<input type="password"/>
Interface :	<input type="text" value="3G/4G"/>

Apply Cancel

The following table describes the fields in this screen.

Table 61 Maintenance &gt; TR-069 Client

LABEL	DESCRIPTION
TR069	Select <b>Enable</b> to allow the LTE3311 to be managed remotely by an ACS via TR-069. Otherwise, select <b>Disable</b> .
Inform	Select <b>Enable</b> for the Zyxel Device to send periodic inform via TR-069 on the WAN. Otherwise, select <b>Disable</b> .
Inform Interval	Enter the time interval (in seconds) at which the Zyxel Device sends information to the auto-configuration server.
ACS URL	Enter the URL or IP address of the auto-configuration server.
ACS User Name	Enter the TR-069 user name for authentication with the auto-configuration server.
ACS Password	Enter the TR-069 password for authentication with the auto-configuration server.
Connection Request Port	Enter the port number for TR-069 connection requests.
Connection Request User Name	Enter the connection request user name. When the ACS makes a connection request to the Zyxel Device, this user name is used to authenticate the ACS.
Connection Request Password	Enter the connection request password. When the ACS makes a connection request to the Zyxel Device, this password is used to authenticate the ACS.
Interface	Select a WAN interface through which the TR-069 traffic passes.
Apply	Click <b>Apply</b> to save your changes.
Cancel	Click <b>Cancel</b> to exit this screen without saving.

# CHAPTER 22

# Maintenance

## 22.1 Overview

This chapter provides information on the **Maintenance** screens.


## 22.2 What You Can Do

- Use the **General** screen to set the timeout period of the management session ([Section 22.3 on page 132](#)).
- Use the **Account** screen to change your Zyxel Device's system password ([Section 22.4 on page 133](#)).
- Use the **Time** screen to change your Zyxel Device's time and date ([Section 22.5 on page 134](#)).
- Use the **Firmware Upgrade** screen to upload firmware to your Zyxel Device ([Section 22.6 on page 136](#)).
- Use the **Backup/Restore** screen to view information related to factory defaults, backup configuration, and restoring configuration ([Section 22.7 on page 137](#)).
- Use the **Restart** screen to reboot the Zyxel Device without turning the power off ([Section 22.8 on page 139](#)).

## 22.3 General Screen

Use this screen to set the management session timeout period. Click **Maintenance > General**. The following screen displays.

**Figure 87** Maintenance > General

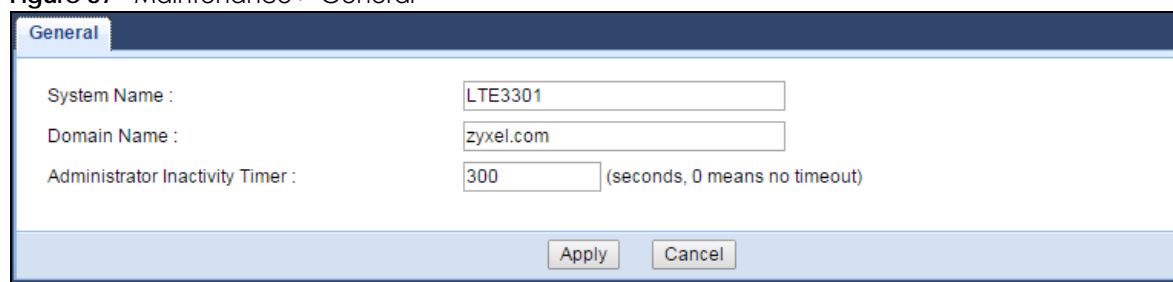

The screenshot shows a web interface for the 'General' settings under 'Maintenance'. It features a blue header with the word 'General' in white. Below the header, there are three rows of configuration options, each with a label on the left and an input field on the right. The first row is 'System Name' with the value 'LTE3301'. The second row is 'Domain Name' with the value 'zyxel.com'. The third row is 'Administrator Inactivity Timer' with the value '300' and a note '(seconds, 0 means no timeout)'. At the bottom of the form, there are two buttons: 'Apply' and 'Cancel'.

The following table describes the labels in this screen.

Table 62 Maintenance &gt; General

LABEL	DESCRIPTION
System Name	System Name is a unique name to identify the Zyxel Device in an Ethernet network.
Domain Name	Enter the domain name you want to give to the Zyxel Device.
Administrator Inactivity Timer	Type how many minutes a management session can be left idle before the session times out. The default is 300 seconds. After it times out you have to log in with your password again. Very long idle timeouts may have security risks. A value of "0" means a management session never times out, no matter how long it has been left idle (not recommended).
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 22.4 User Account Screen

It is strongly recommended that you change your Zyxel Device's system password.

If you forget your Zyxel Device's password (or IP address), you will need to reset the device. See [Section 22.8 on page 139](#) for details.

Click **Account > Account**. The screen appears as shown.

Figure 88 Maintenance &gt; Account

User Account Entries			
#	User Name	Group	Modify
1	admin	User	

The following table describes the labels in this screen.

Table 63 Maintenance &gt; Account

LABEL	DESCRIPTION
#	This is the index number of the entry.
User Name	This field displays the name of the user.
Group	This field displays the login account type of the user.
Modify	Click the <b>Edit</b> icon to edit this user account.

### 22.4.1 Edit a User Account

Use this screen to edit a users account. Click the **Edit** icon next to the user account you want to configure. The screen shown next appears.

Figure 89 Maintenance &gt; Account &gt; Edit

The following table describes the labels in this screen.

Table 64 Maintenance &gt; Account &gt; Edit

LABEL	DESCRIPTION
Username	Enter a descriptive name for the user account. The user name can be up to 15 alphanumeric characters (0-9, A-Z, a-z, -, _ with no spaces).
Old Password	Type the default password or the existing password you use to access the system in this field.
New Password	Type your new system password (up to 30 characters). Note that as you type a password, the screen displays an asterisk (*) for each character you type.
Retype to Confirm	Type the new password again in this field.
Group	This shows the type of login account.
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 22.5 Time Setting Screen

Use this screen to configure the Zyxel Device's time based on your local time zone. To change your Zyxel Device's time and date, click **Maintenance > Time**. The screen appears as shown.

Figure 90 Maintenance &gt; Time

The following table describes the labels in this screen.

Table 65 Maintenance &gt; Time

LABEL	DESCRIPTION
Current Time and Date	
Current Time	This field displays the time of your Zyxel Device. Each time you reload this page, the Zyxel Device synchronizes the time with the time server.
Current Date	This field displays the date of your Zyxel Device. Each time you reload this page, the Zyxel Device synchronizes the date with the time server.
Current Time and Date	
Manual	Select this radio button to enter the time and date manually. If you configure a new time and date, Time Zone and Daylight Saving at the same time, the new time and date you entered has priority and the Time Zone and Daylight Saving settings do not affect it.
New Time (hh:mm:ss)	This field displays the last updated time from the time server or the last time configured manually. When you select <b>Manual</b> , enter the new time in this field and then click <b>Apply</b> .
New Date (yyyy/mm/dd)	This field displays the last updated date from the time server or the last date configured manually. When you select <b>Manual</b> , enter the new date in this field and then click <b>Apply</b> .
Get from Time Server	Select this radio button to have the Zyxel Device get the time and date from the time server you specified below.
User Defined Time Server Address	Select <b>User Defined Time Server Address</b> and enter the IP address or URL (up to 20 extended ASCII characters in length) of your time server. Check with your ISP/network administrator if you are unsure of this information.

Table 65 Maintenance &gt; Time (continued)


LABEL	DESCRIPTION
Time Zone Setup	
Time Zone	Choose the time zone of your location. This will set the time difference between your time zone and Greenwich Mean Time (GMT).
Daylight Savings	Daylight saving is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daytime light in the evening.  Select this option if you use Daylight Saving Time.
Start Date	Configure the day and time when Daylight Saving Time starts if you selected <b>Daylight Savings</b> . The <b>at</b> field uses the 24 hour format. Here are a couple of examples:  Daylight Saving Time starts in most parts of the United States on the second Sunday of March. Each time zone in the United States starts using Daylight Saving Time at 2 A.M. local time. So in the United States you would select <b>Second, Sunday, March</b> and select <b>2</b> in the <b>at</b> field.  Daylight Saving Time starts in the European Union on the last Sunday of March. All of the time zones in the European Union start using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select <b>Last, Sunday, March</b> . The time you select in the <b>at</b> field depends on your time zone. In Germany for instance, you would select <b>2</b> because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
End Date	Configure the day and time when Daylight Saving Time ends if you selected <b>Daylight Savings</b> . The <b>at</b> field uses the 24 hour format. Here are a couple of examples:  Daylight Saving Time ends in the United States on the first Sunday of November. Each time zone in the United States stops using Daylight Saving Time at 2 A.M. local time. So in the United States you would select <b>First, Sunday, November</b> and select <b>2</b> in the <b>at</b> field.  Daylight Saving Time ends in the European Union on the last Sunday of October. All of the time zones in the European Union stop using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select <b>Last, Sunday, October</b> . The time you select in the <b>at</b> field depends on your time zone. In Germany for instance, you would select <b>2</b> because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
Apply	Click <b>Apply</b> to save your changes back to the Zyxel Device.
Cancel	Click <b>Cancel</b> to begin configuring this screen afresh.

## 22.6 Firmware Upgrade Screen

Find firmware at [www.zyxel.com](http://www.zyxel.com) in a file that uses the version number and project code with a "\*.bin" extension, e.g., "V1.00(AAYE.0).bin". The upload process uses HTTP (Hypertext Transfer Protocol) and may take up to two minutes. After a successful upload, the system will reboot.

Click **Maintenance > Firmware Upgrade**. Follow the instructions in this screen to upload firmware to your Zyxel Device.

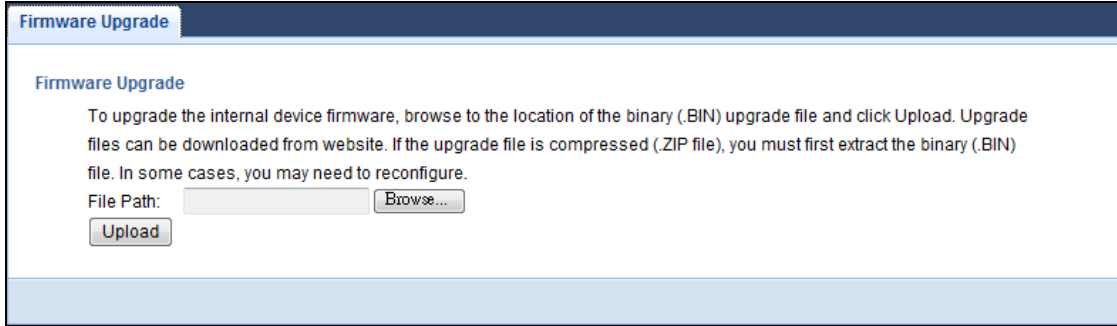

**Figure 91** Maintenance > Firmware Upgrade

The following table describes the labels in this screen.


**Table 66** Maintenance > Firmware Upgrade

LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click <b>Browse...</b> to find it.
Browse...	Click <b>Browse...</b> to find the .bin file you want to upload. Remember that you must decompress compressed (.zip) files before you can upload them.
Upload	Click <b>Upload</b> to begin the upload process. This process may take up to two minutes.

**Note:** Do not turn off the Zyxel Device while firmware upload is in progress!

After you see the **Firmware Upload In Process** screen, wait two minutes before logging into the Zyxel Device again.

The Zyxel Device automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.

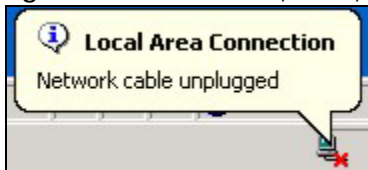**Figure 92** Network Temporarily Disconnected

After two minutes, log in again and check your new firmware version in the **Status** screen.

If the upload was not successful, an error message appears. Click **Return** to go back to the **Firmware Upgrade** screen.

## 22.7 Backup/Restore Screen

Backup configuration allows you to back up (save) the Zyxel Device's current configuration to a file on your computer. Once your Zyxel Device is configured and functioning properly, it is highly recommended that you back up your configuration file before making configuration changes. The backup configuration file will be useful in case you need to return to your previous settings.

Restore configuration allows you to upload a new or previously saved configuration file from your computer to your Zyxel Device.

Click **Maintenance > Backup/Restore**. Information related to factory defaults, backup configuration, and restoring configuration appears as shown next.

**Figure 93** Maintenance > Backup/Restore

**Backup/Restore**

**Backup Configuration**  
Click Backup to save the current configuration of your system to your computer. **Backup**

---

**Restore Configuration**  
To restore a previously saved configuration file to your system, browse to the location of the configuration file and click Upload.  
File Path :  **Browse...** **Upload**

---

**Back to Factory Defaults**  
Click Reset to clear all user-entered configuration information and return to factory defaults. After resetting, the

- User will be admin
- Password will be 1234
- LAN IP address will be 192.168.1.1
- DHCP will be reset to server

**Reset**

The following table describes the labels in this screen.

**Table 67** Maintenance > Backup/Restore

LABEL	DESCRIPTION
Backup	Click <b>Backup</b> to save the Zyxel Device's current configuration to your computer.
File Path	Type in the location of the file you want to upload in this field or click <b>Browse...</b> to find it.
Browse...	Click <b>Browse...</b> to find the file you want to upload. Remember that you must decompress compressed (.ZIP) files before you can upload them.
Upload	Click <b>Upload</b> to begin the upload process.  Note: Do not turn off the Zyxel Device while configuration file upload is in progress.  After you see a "configuration upload successful" screen, you must then wait one minute before logging into the Zyxel Device again. The Zyxel Device automatically restarts in this time causing a temporary network disconnect.  If you see an error screen, click Back to return to the Backup/Restore screen.
Reset	Pressing the <b>Reset</b> button in this section clears all user-entered configuration information and returns the Zyxel Device to its factory defaults.  You can also press the <b>RESET</b> button on the rear panel to reset the factory defaults of your Zyxel Device. Refer to the chapter about introducing the Web Configurator for more information on the <b>RESET</b> button.

Note: If you uploaded the default configuration file you may need to change the IP address of your computer to be in the same subnet as that of the default Zyxel Device IP address (192.168.1.1). See [Appendix A on page 145](#) for details on how to set up your computer's IP address.


## 22.8 System Restart Screen

**System Restart** allows you to reboot the Zyxel Device without turning the power off.

Click **Maintenance > Restart** to open the following screen.

Click **Restart** to have the Zyxel Device reboot. This does not affect the Zyxel Device's configuration.

**Figure 94** Maintenance > Restart

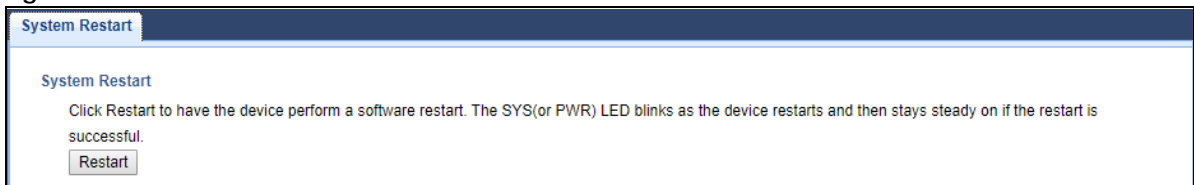


Configure the **Schedule Reboot** to set the date and time to reboot the Zyxel Device remotely. It works by the assigned Date and Time which synchronize with a NTP server.

Note: **Periodic Reboot** setting can only be activated when NTP service is not available.

Click **Maintenance > Restart** to open the following screen.

**Figure 95** Maintenance > Restart (Schedule Reboot)

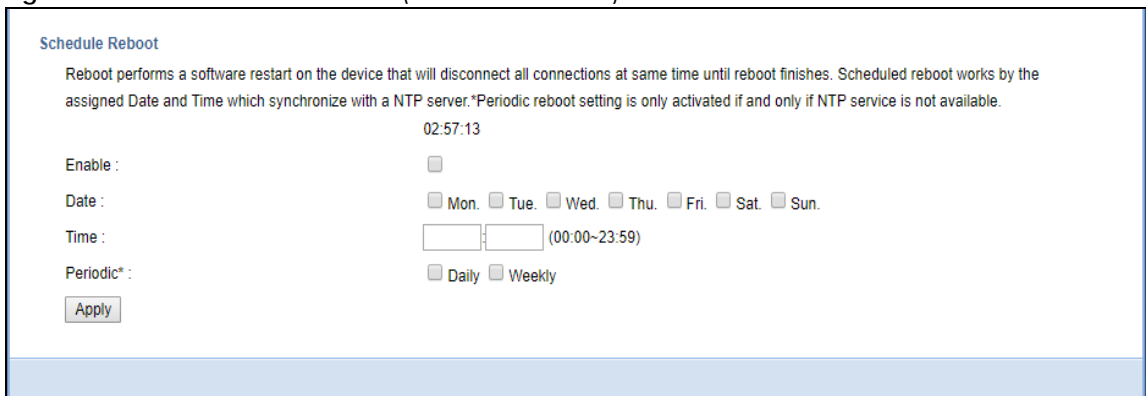

**Table 68** Maintenance > Restart (Schedule Reboot)

LABEL	DESCRIPTION
Enable	Select this check box to enable <b>Schedule Reboot</b> . The Zyxel device will reboot according to the schedule you configure.
Date	Select the date you want the Zyxel Device to perform schedule reboot.
Time	Enter the time period you want the Zyxel Device to perform schedule reboot.
Periodic	Use <b>Periodic Reboot</b> if your NTP service is not available. The Zyxel Device will reboot according to the system uptime. Select <b>Daily</b> to have your Zyxel Device reboot every 24 hours. Select <b>Weekly</b> to have your Zyxel Device reboot every 168 hours.
Apply	Click <b>Apply</b> to save your settings.

# CHAPTER 23

## Troubleshooting

### 23.1 Overview

This chapter offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- [Power, Hardware Connections, and LEDs](#)
- [Zyxel Device Access and Login](#)
- [Internet Access](#)
- [Wireless Connections](#)

### 23.2 Power, Hardware Connections, and LEDs

---

[The Zyxel Device does not turn on. None of the LEDs turn on.](#)

---

- 1 Make sure you are using the power adapter or cord included with the Zyxel Device.
- 2 Make sure the power adapter or cord is connected to the Zyxel Device and plugged in to an appropriate power source. Make sure the power source is turned on.
- 3 Disconnect and re-connect the power adapter or cord to the Zyxel Device.
- 4 If the problem continues, contact the vendor.

---

[One of the LEDs does not behave as expected.](#)

---

- 1 Make sure you understand the normal behavior of the LED. See [Section 1.7.2 on page 15](#).
- 2 Check the hardware connections. See the Quick Start Guide.
- 3 Inspect your cables for damage. Contact the vendor to replace any damaged cables.
- 4 Disconnect and re-connect the power adaptor to the Zyxel Device.
- 5 If the problem continues, contact the vendor.

## 23.3 Zyxel Device Access and Login

---

### I don't know the IP address of my Zyxel Device.

---

- 1 The default IP address of the Zyxel Device is **192.168.1.1**.
- 2 If you changed the IP address and have forgotten it, you might get the IP address of the Zyxel Device by looking up the IP address of the default gateway for your computer. To do this in most Windows computers, click **Start > Run**, enter **cmd**, and then enter **ipconfig**. The IP address of the **Default Gateway** might be the IP address of the Zyxel Device (it depends on the network), so enter this IP address in your Internet browser.
- 3 Reset your Zyxel Device to change all settings back to their default. This means your current settings are lost. See [Section 1.5 on page 13](#) for information on resetting your Zyxel Device.

### I forgot the password.

---

- 1 The default password is **1234**.
- 2 If this does not work, you have to reset the device to its factory defaults. See [Section 1.5 on page 13](#).

### I cannot see or access the **Login** screen in the Web Configurator.

---

- 1 Make sure you are using the correct IP address.
  - The default IP address of the Zyxel Device is **192.168.1.1**.
  - If you changed the IP address ([Section 8.4 on page 81](#)), use the new IP address.
  - If you changed the IP address and have forgotten it, see the troubleshooting suggestions for [I don't know the IP address of my Zyxel Device](#).
- 2 Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide.
- 3 Make sure your Internet browser does not block pop-up windows and has JavaScript and Java enabled. See [Appendix A on page 139](#).
- 4 Make sure your computer is in the same subnet as the Zyxel Device. (If you know that there are routers between your computer and the Zyxel Device, skip this step.)
  - If there is a DHCP server on your network, make sure your computer is using a dynamic IP address. See [Section 8.4 on page 81](#).
  - If there is no DHCP server on your network, make sure your computer's IP address is in the same subnet as the Zyxel Device. See [Section 8.4 on page 81](#).

- 5 Reset the device to its factory defaults, and try to access the Zyxel Device with the default IP address. See [Section 1.5 on page 13](#).
- 6 If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

#### Advanced Suggestions

- Try to access the Zyxel Device using another service, such as Telnet. If you can access the Zyxel Device, check the firewall rules to find out why the Zyxel Device does not respond to HTTP.
- If your computer is connected to the **WAN** port or is connected wirelessly, use a computer that is connected to a **LAN/ETHERNET** port.

---

[I can see the Login screen, but I cannot log in to the Zyxel Device.](#)

---

- 1 Make sure you have entered the user name and password correctly. The default user name is **admin** and the default password is **1234**. This field is case-sensitive, so make sure [Caps Lock] is not on.
- 2 This can happen when you fail to log out properly from your last session. Try logging in again after 5 minutes.
- 3 Disconnect and re-connect the power adaptor or cord to the Zyxel Device.
- 4 If this does not work, you have to reset the device to its factory defaults. See [Section 1.5 on page 13](#).

## 23.4 Internet Access

---

[I cannot access the Internet.](#)

---

- 1 Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide.
- 2 Make sure your mobile access information (such as APN) is entered correctly in the wizard or the WAN screen. These fields are case-sensitive, so make sure [Caps Lock] is not on.
- 3 Make sure your SIM card's account is valid and has an active data plan. Check your service contract or contact your service provider directly.
- 4 If the problem continues, contact your ISP.

---

[I cannot access the Internet anymore. I had access to the Internet \(with the Zyxel Device\), but my Internet connection is not available anymore.](#)

---

- 1 Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide and [Section 1.7.2 on page 15](#).
- 2 Reboot the Zyxel Device.
- 3 If the problem continues, contact your ISP.

---

### The Internet connection is slow or intermittent.

---

- 1 There might be a lot of traffic on the network. Look at the LEDs, and check [Section 1.7.2 on page 15](#). If the Zyxel Device is sending or receiving a lot of information, try closing some programs that use the Internet, especially peer-to-peer applications.
- 2 Check the signal strength. If the signal strength is low, try moving the Zyxel Device closer to the ISP's base station if possible, and look around to see if there are any devices that might be interfering with the wireless network (for example, microwaves, other wireless networks, and so on).
- 3 Reboot the Zyxel Device.
- 4 If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

#### Advanced Suggestion

- Check the settings for QoS. If it is disabled, you might consider activating it.

## 23.5 Wireless Connections

---

### I cannot access the Zyxel Device or ping any computer from the WLAN.

---

- 1 Make sure the wireless LAN is enabled on the Zyxel Device.
- 2 Make sure the wireless adapter on your computer is working properly.
- 3 Make sure the wireless adapter installed on your computer is IEEE 802.11 compatible and supports the same wireless standard as the Zyxel Device.
- 4 Make sure your computer (with a wireless adapter installed) is within the transmission range of the Zyxel Device.
- 5 Check that both the Zyxel Device and the wireless adapter on your computer are using the same wireless and wireless security settings.

---

I set up URL keyword blocking, but I can still access a website that should be blocked.

---

Make sure that the keywords that you type are listed in the rule's **Keyword List**.

---

What factors may cause intermittent or unstabled wireless connection? How can I solve this problem?

---

The following factors may cause interference:

- Obstacles: walls, ceilings, furniture, and so on.
- Building Materials: metal doors, aluminum studs.
- Electrical devices: microwaves, monitors, electric motors, cordless phones, and other wireless devices.

To optimize the speed and quality of your wireless connection, you can:

- Move your wireless device closer to the AP if the signal strength is low.
- Reduce wireless interference that may be caused by other wireless networks or surrounding wireless electronics such as cordless phones.
- Place the AP where there are minimum obstacles (such as walls and ceilings) between the AP and the wireless client.
- Reduce the number of wireless clients connecting to the same AP simultaneously, or add additional APs if necessary.
- Try closing some programs that use the Internet, especially peer-to-peer applications. If the wireless client is sending or receiving a lot of information, it may have too many programs open that use the Internet.
- Position the antennas for best reception. If the AP is placed on a table or floor, point the antennas upwards. If the AP is placed at a high position, point the antennas downwards. Try pointing the antennas in different directions and check which provides the strongest signal to the wireless clients.



# APPENDIX A

## Setting Up Your Computer's IP Address

Note: Your specific Zyxel Device may not support all of the operating systems described in this appendix. See the product specifications for more information about which operating systems are supported.

This appendix shows you how to configure the IP settings on your computer in order for it to be able to communicate with the other devices on your network. Windows Vista/XP/2000, Mac OS 9/OS X, and all versions of UNIX/LINUX include the software components you need to use TCP/IP on your computer.

If you manually assign IP information instead of using a dynamic IP, make sure that your network's computers have IP addresses that place them in the same subnet.


In this appendix, you can set up an IP address for:

- [Windows XP/NT/2000 on page 145](#)
- [Windows Vista on page 148](#)
- [Windows 7 on page 151](#)
- [Mac OS X: 10.3 and 10.4 on page 155](#)
- [Mac OS X: 10.5 and 10.6 on page 158](#)
- [Linux: Ubuntu 8 \(GNOME\) on page 161](#)
- [Linux: openSUSE 10.3 \(KDE\) on page 165](#)

### Windows XP/NT/2000

The following example uses the default Windows XP display theme but can also apply to Windows 2000 and Windows NT.


- 1 Click **Start > Control Panel**.

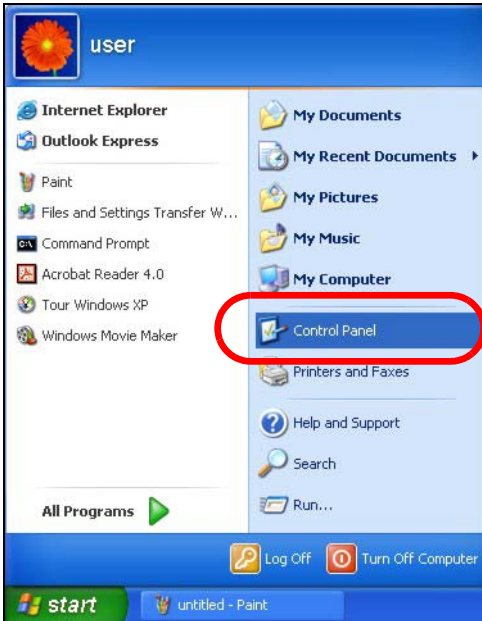


- 2 In the **Control Panel**, click the **Network Connections** icon.




- 3 Right-click **Local Area Connection** and then select **Properties**.

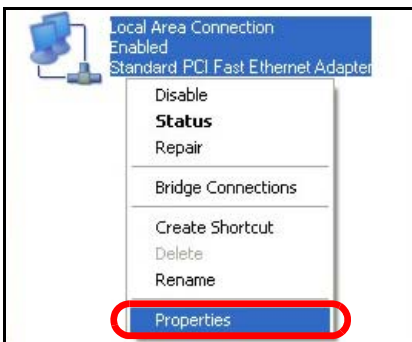

- 4 On the **General** tab, select **Internet Protocol (TCP/IP)** and then click **Properties**.

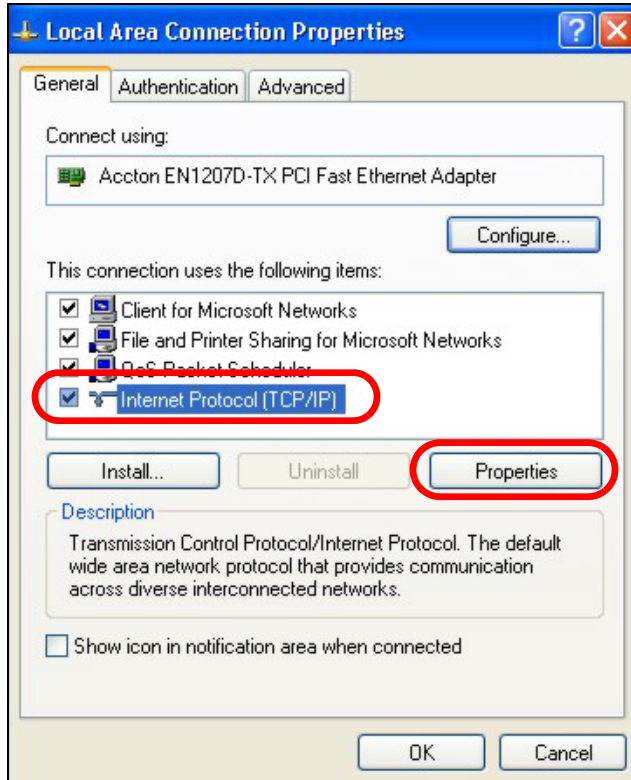

- 5 The Internet Protocol TCP/IP Properties window opens.

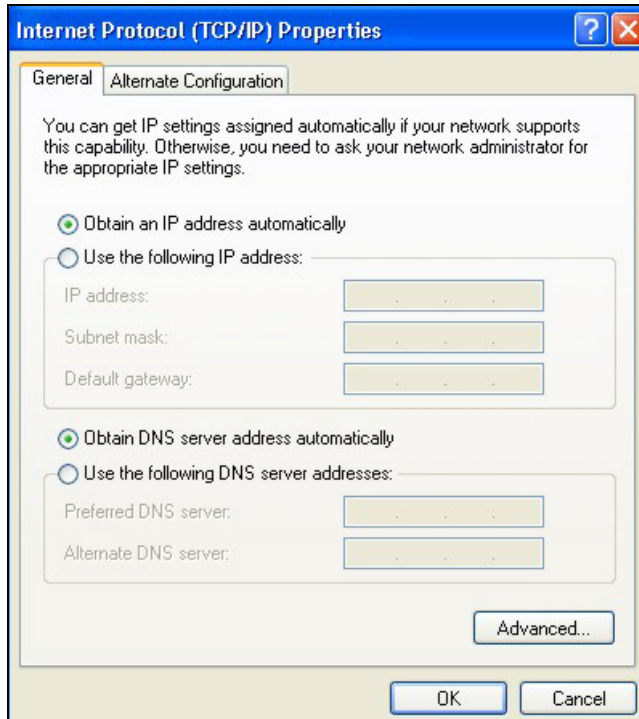

- 6 Select **Obtain an IP address automatically** if your network administrator or ISP assigns your IP address dynamically.  
Select **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields if you have a static IP address that was assigned to you by your network administrator or ISP. You may also have to enter a **Preferred DNS server** and an **Alternate DNS server**, if that information was provided.
- 7 Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.
- 8 Click **OK** to close the **Local Area Connection Properties** window.


## Verifying Settings

- 1 Click **Start > All Programs > Accessories > Command Prompt**.
- 2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER].  
You can also go to **Start > Control Panel > Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab to view your IP address and connection information.


## Windows Vista

This section shows screens from Windows Vista Professional.


- 1 Click **Start > Control Panel**.

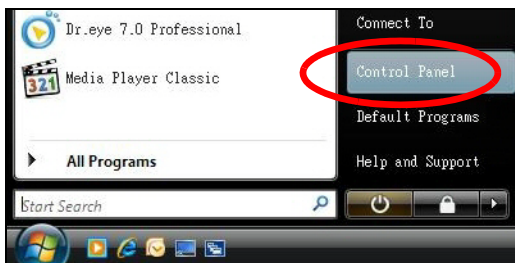


- 2 In the **Control Panel**, click the **Network and Internet** icon.

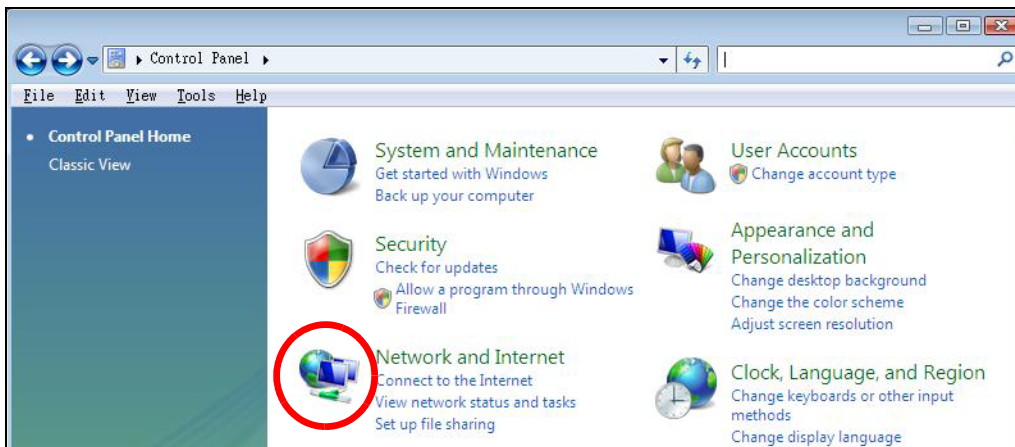


- 3 Click the **Network and Sharing Center** icon.

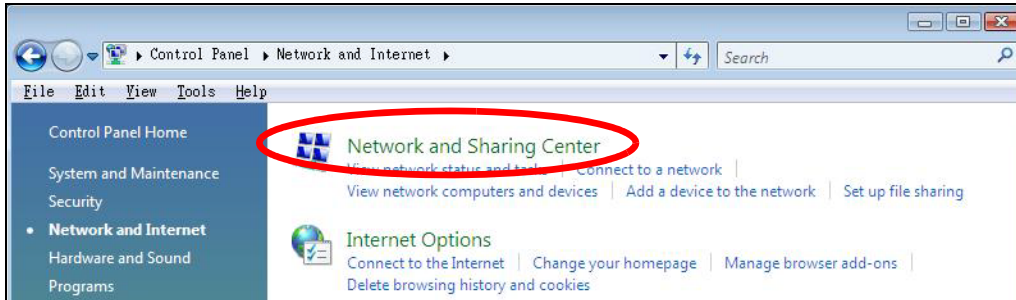

- 4 Click **Manage network connections**.

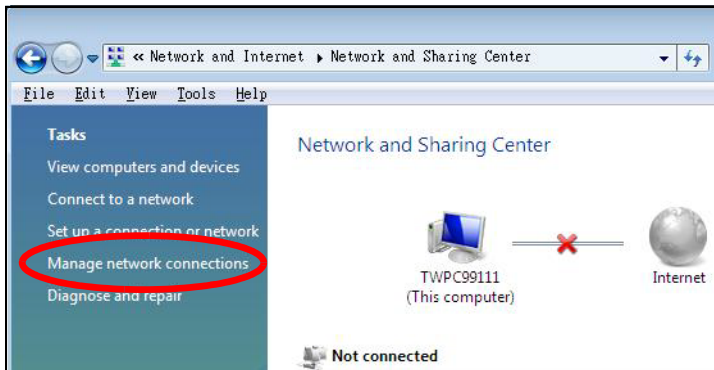


- 5 Right-click **Local Area Connection** and then select **Properties**.

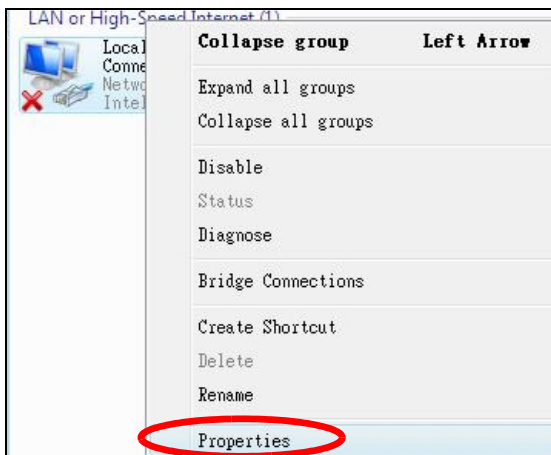


Note: During this procedure, click **Continue** whenever Windows displays a screen saying that it needs your permission to continue.

- 6 Select **Internet Protocol Version 4 (TCP/IPv4)** and then select **Properties**.

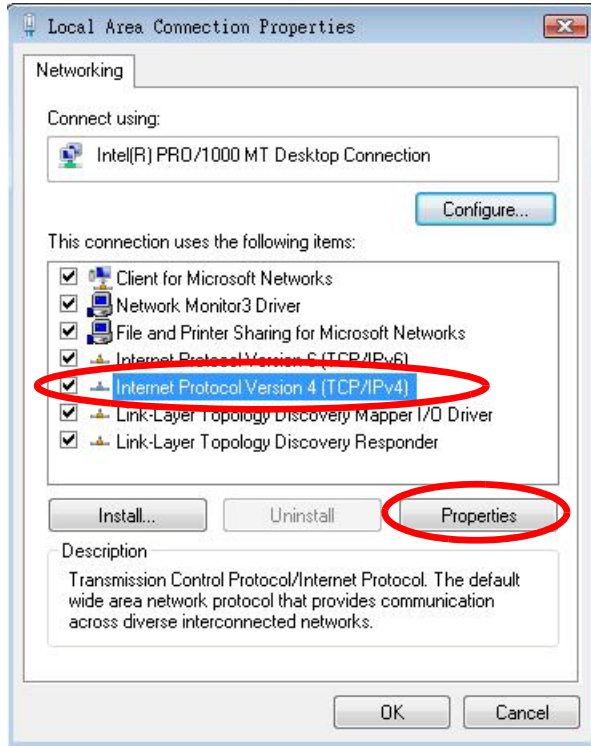

7 The Internet Protocol Version 4 (TCP/IPv4) Properties window opens.

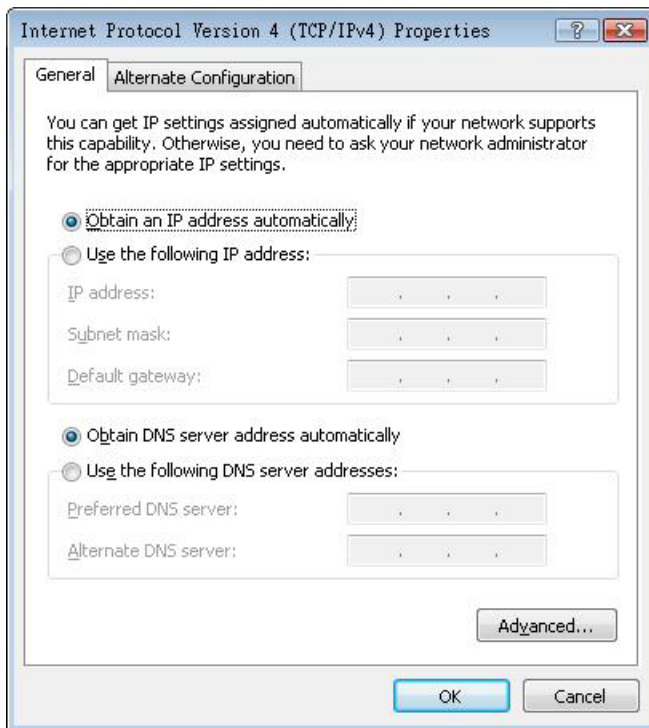

- 8 Select **Obtain an IP address automatically** if your network administrator or ISP assigns your IP address dynamically.

Select **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields if you have a static IP address that was assigned to you by your network administrator or ISP. You may also have to enter a **Preferred DNS server** and an **Alternate DNS server**, if that information was provided. Click **Advanced**.

- 9 Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.
- 10 Click **OK** to close the **Local Area Connection Properties** window.


## Verifying Settings

- 1 Click **Start > All Programs > Accessories > Command Prompt**.
- 2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER].  
You can also go to **Start > Control Panel > Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab to view your IP address and connection information.

## Windows 7

This section shows screens from Windows 7 Enterprise.


- 1 Click **Start > Control Panel**.

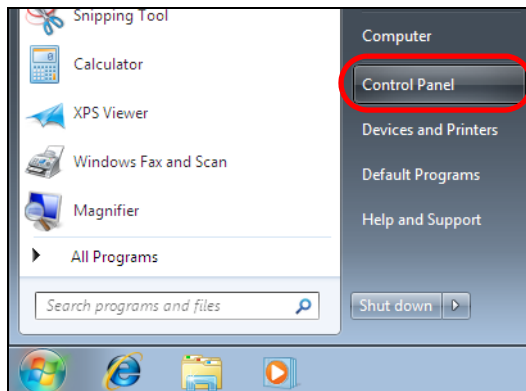


- 2 In the **Control Panel**, click **View network status and tasks** under the **Network and Internet** category.



3 Click **Change adapter settings**.

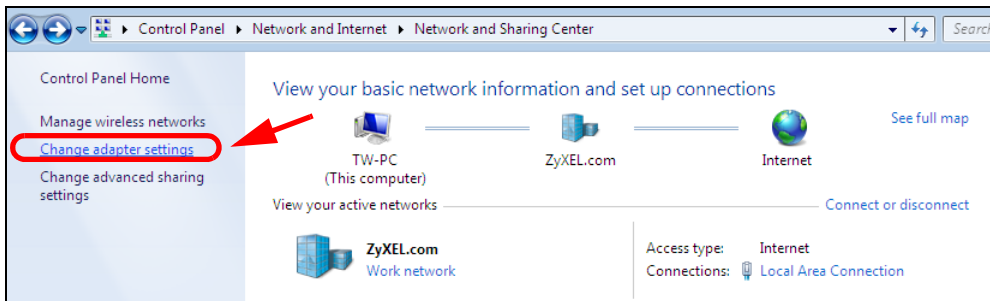


4 Double click **Local Area Connection** and then select **Properties**.

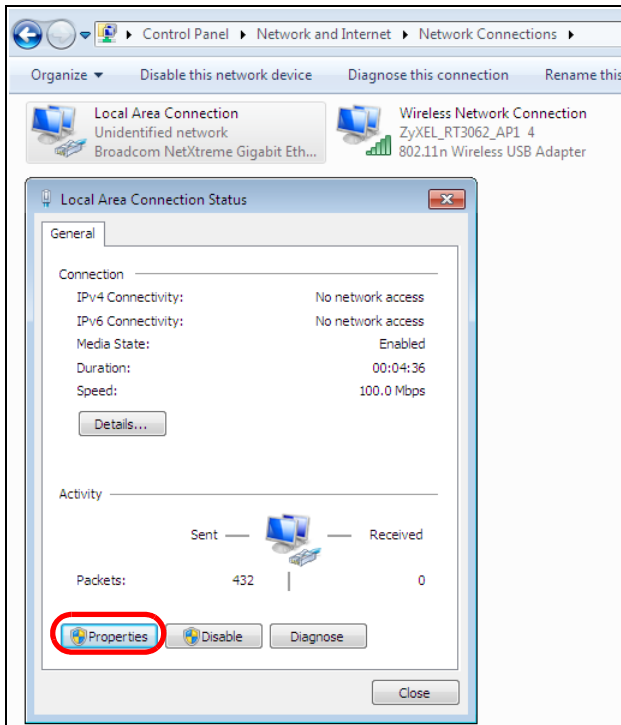




Note: During this procedure, click **Continue** whenever Windows displays a screen saying that it needs your permission to continue.

- 5 Select **Internet Protocol Version 4 (TCP/IPv4)** and then select **Properties**.

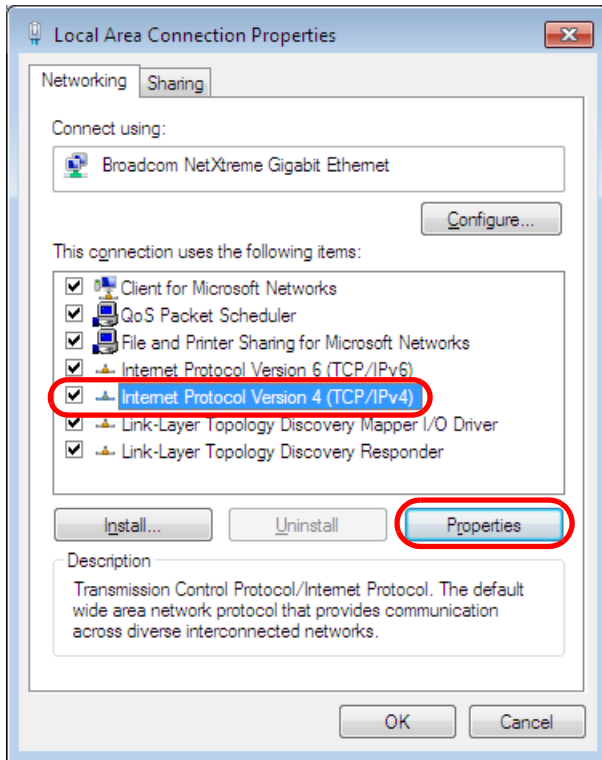

- 6 The **Internet Protocol Version 4 (TCP/IPv4) Properties** window opens.

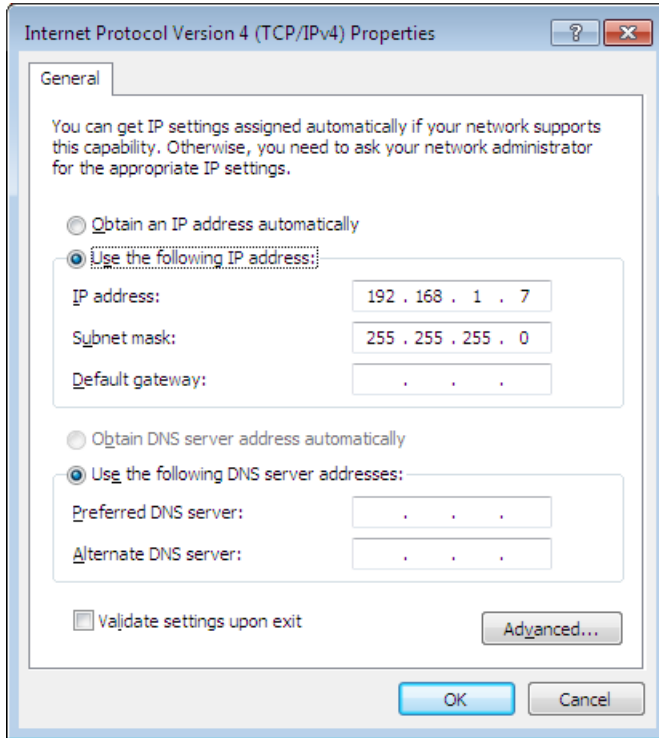


- 7 Select **Obtain an IP address automatically** if your network administrator or ISP assigns your IP address dynamically.

Select **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields if you have a static IP address that was assigned to you by your network administrator or ISP. You may also have to enter a **Preferred DNS server** and an **Alternate DNS server**, if that information was provided. Click **Advanced** if you want to configure advanced settings for IP, DNS and WINS.

- 8 Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.
- 9 Click **OK** to close the **Local Area Connection Properties** window.

## Verifying Settings

- 1 Click **Start > All Programs > Accessories > Command Prompt**.
- 2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER].
- 3 The IP settings are displayed as follows.

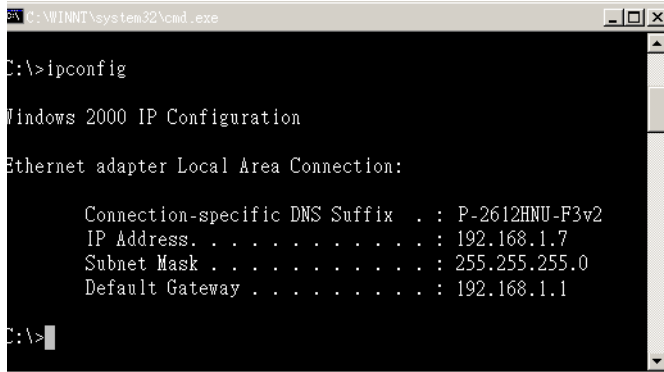

```
C:\WINNT\system32\cmd.exe
C:\>ipconfig

Windows 2000 IP Configuration

Ethernet adapter Local Area Connection:


    Connection-specific DNS Suffix  . : P-2612HNU-F3v2
    IP Address. . . . . : 192.168.1.7
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1

C:\>
```

## Mac OS X: 10.3 and 10.4

The screens in this section are from Mac OS X 10.4 but can also apply to 10.3.


- 1 Click **Apple > System Preferences**.

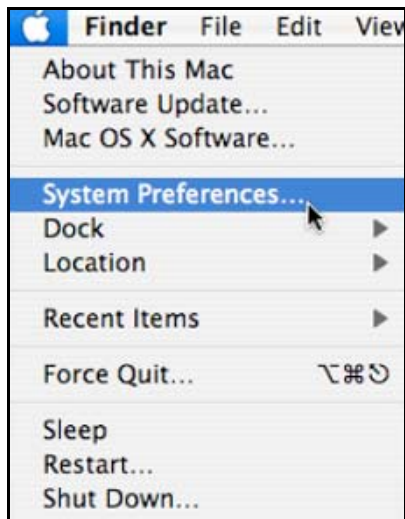


- 2 In the **System Preferences** window, click the **Network** icon.




- 3 When the **Network** preferences pane opens, select **Built-in Ethernet** from the network connection type list, and then click **Configure**.

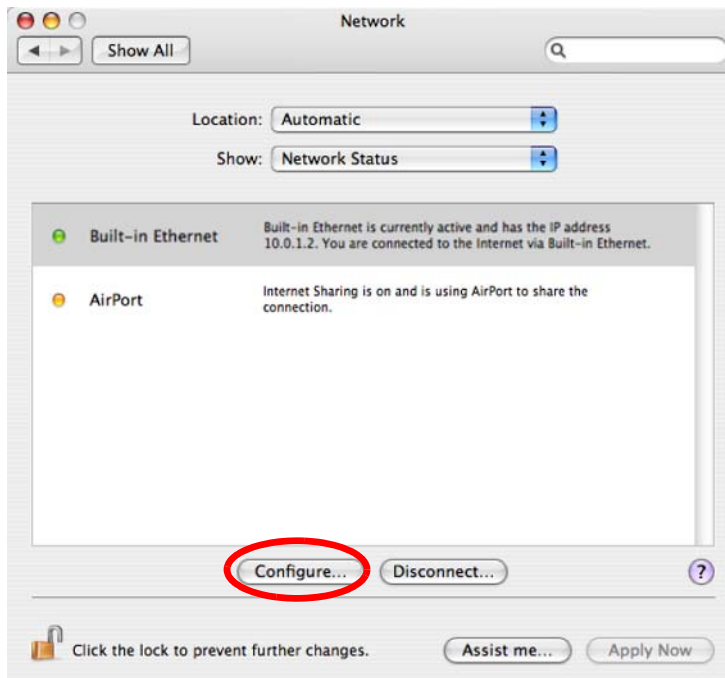

- 4 For dynamically assigned settings, select **Using DHCP** from the **Configure IPv4** list in the **TCP/IP** tab.

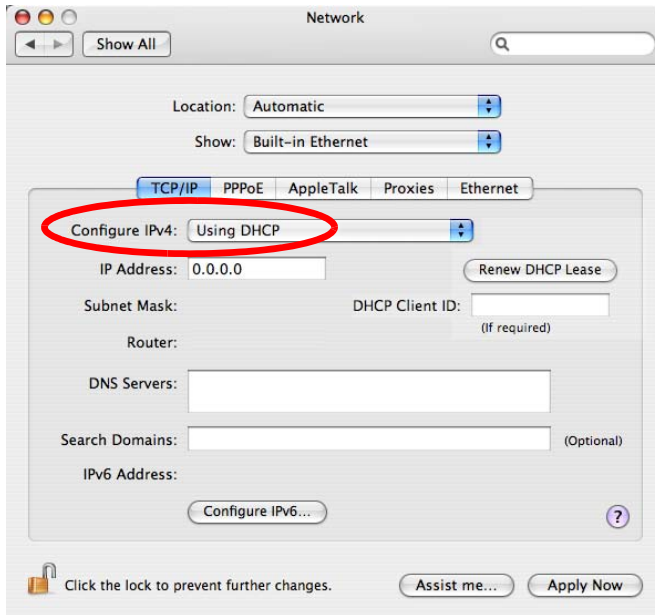

- 5 For statically assigned settings, do the following:
- From the **Configure IPv4** list, select **Manually**.
  - In the **IP Address** field, type your IP address.
  - In the **Subnet Mask** field, type your subnet mask.
  - In the **Router** field, type the IP address of your device.

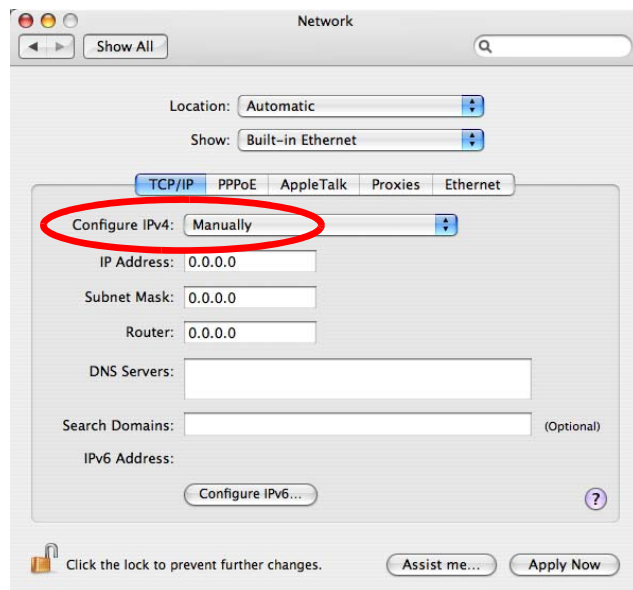


- 6 Click **Apply Now** and close the window.

## Verifying Settings

Check your TCP/IP properties by clicking **Applications > Utilities > Network Utilities**, and then selecting the appropriate **Network Interface** from the **Info** tab.


Figure 96 Mac OS X 10.4: Network Utility

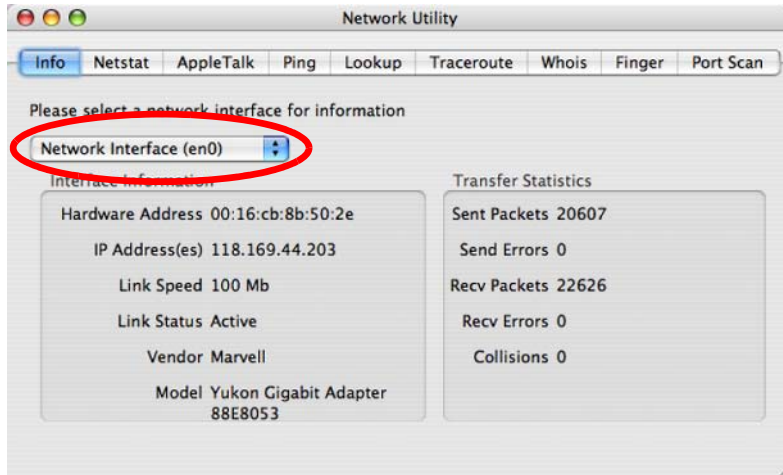

## Mac OS X: 10.5 and 10.6

The screens in this section are from Mac OS X 10.5 but can also apply to 10.6.


- 1 Click **Apple > System Preferences**.

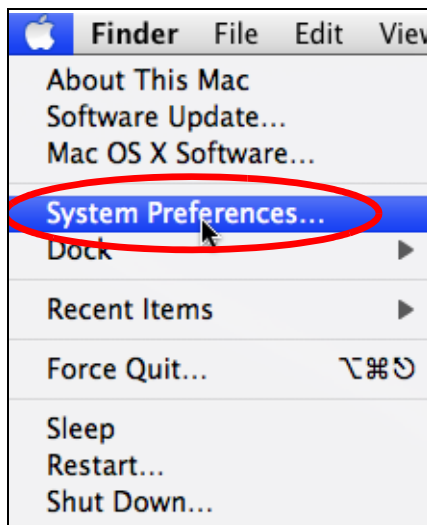

- 2 In System Preferences, click the **Network** icon.




- 3 When the **Network** preferences pane opens, select **Ethernet** from the list of available connection types.

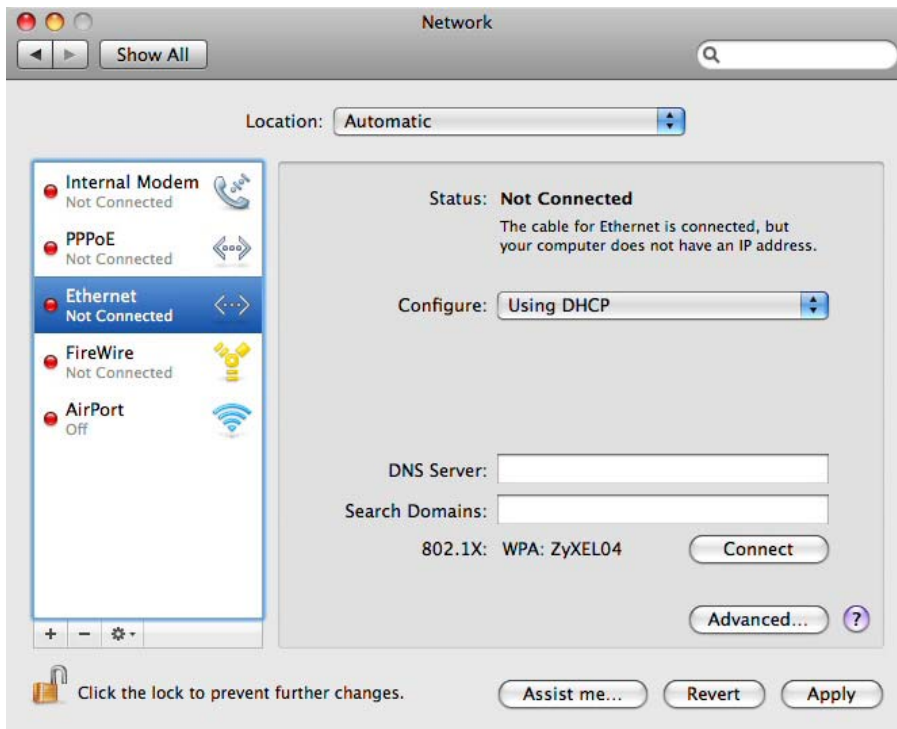

- 4 From the **Configure** list, select **Using DHCP** for dynamically assigned settings.

- 5 For statically assigned settings, do the following:
  - From the **Configure** list, select **Manually**.
  - In the **IP Address** field, enter your IP address.
  - In the **Subnet Mask** field, enter your subnet mask.
  - In the **Router** field, enter the IP address of your Zyxel Device.

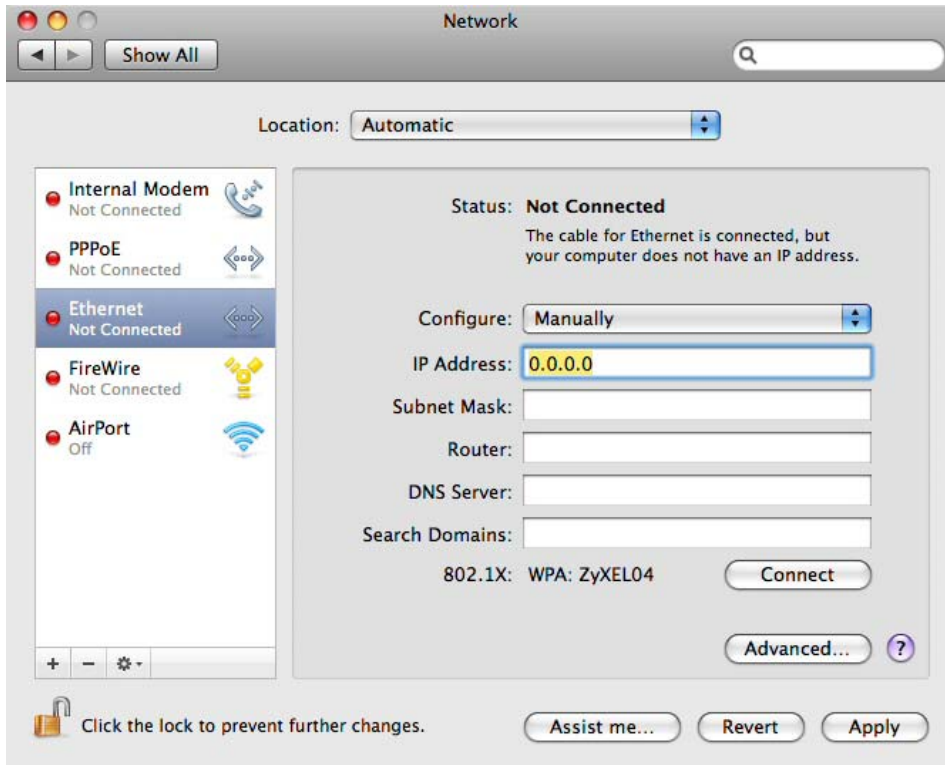


- 6 Click **Apply** and close the window.

## Verifying Settings

Check your TCP/IP properties by clicking **Applications > Utilities > Network Utilities**, and then selecting the appropriate **Network interface** from the **Info** tab.



Figure 97 Mac OS X 10.5: Network Utility

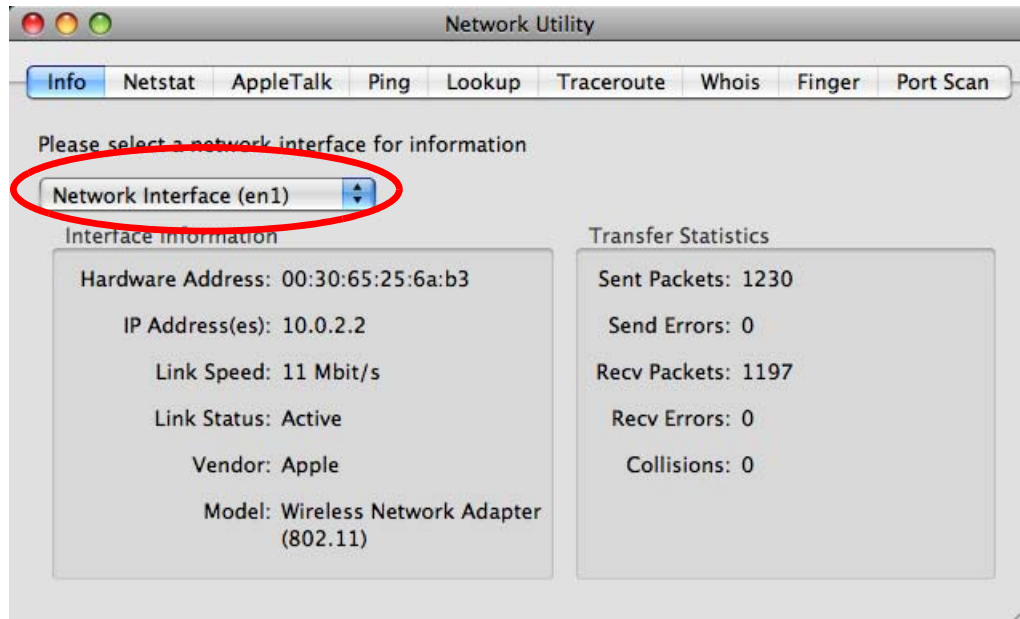


## Linux: Ubuntu 8 (GNOME)

This section shows you how to configure your computer's TCP/IP settings in the GNU Object Model Environment (GNOME) using the Ubuntu 8 Linux distribution. The procedure, screens and file locations may vary depending on your specific distribution, release version, and individual configuration. The following screens use the default Ubuntu 8 installation.


Note: Make sure you are logged in as the root administrator.

Follow the steps below to configure your computer IP address in GNOME:

- 1 Click **System > Administration > Network**.

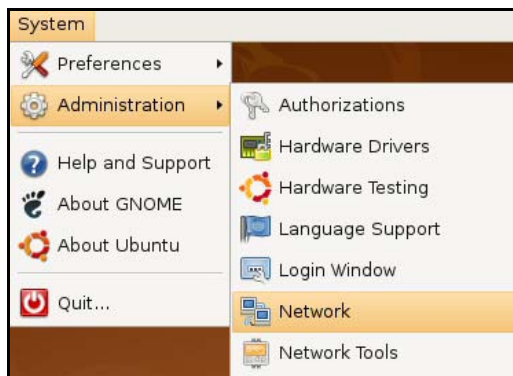


- 2 When the **Network Settings** window opens, click **Unlock** to open the **Authenticate** window. (By default, the **Unlock** button is greyed out until clicked.) You cannot make changes to your configuration unless you first enter your admin password.

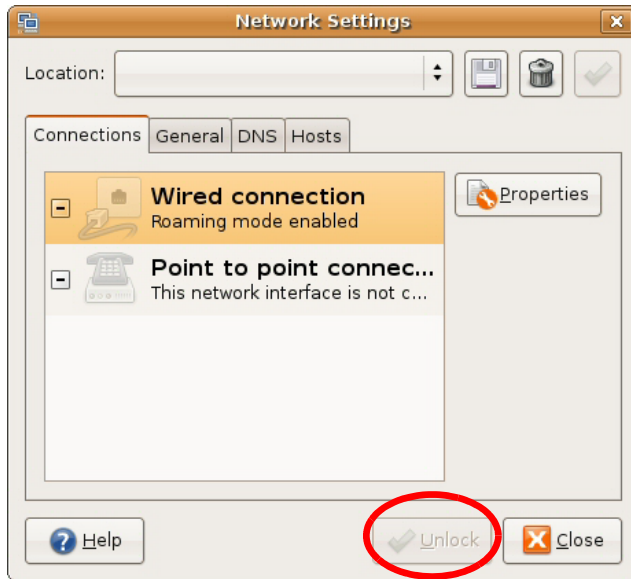


- 3 In the **Authenticate** window, enter your admin account name and password then click the **Authenticate** button.



- 4 In the **Network Settings** window, select the connection that you want to configure, then click **Properties**.

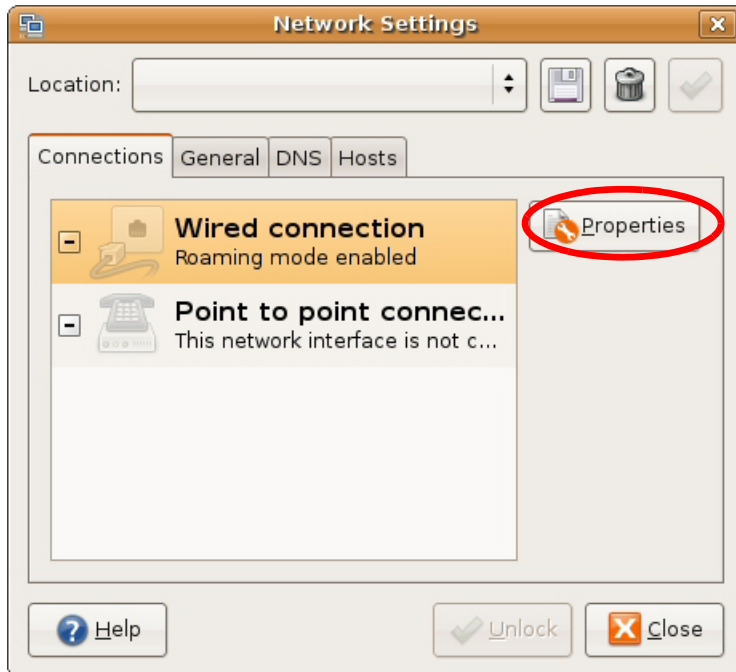

- 5 The **Properties** dialog box opens.

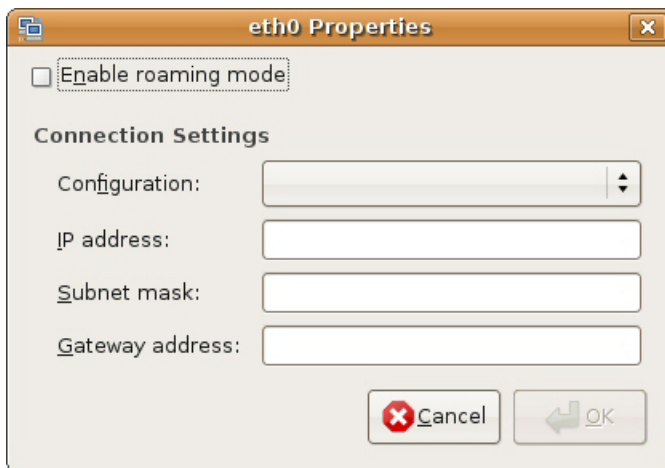

- In the **Configuration** list, select **Automatic Configuration (DHCP)** if you have a dynamic IP address.
  - In the **Configuration** list, select **Static IP address** if you have a static IP address. Fill in the **IP address**, **Subnet mask**, and **Gateway address** fields.
- 6 Click **OK** to save the changes and close the **Properties** dialog box and return to the **Network Settings** screen.
  - 7 If you know your DNS server IP address(es), click the **DNS** tab in the **Network Settings** window and then enter the DNS server information in the fields provided.




- 8 Click the **Close** button to apply the changes.

## Verifying Settings

Check your TCP/IP properties by clicking **System > Administration > Network Tools**, and then selecting the appropriate **Network device** from the **Devices** tab. The **Interface Statistics** column shows data if your connection is working properly.

Figure 98 Ubuntu 8: Network Tools

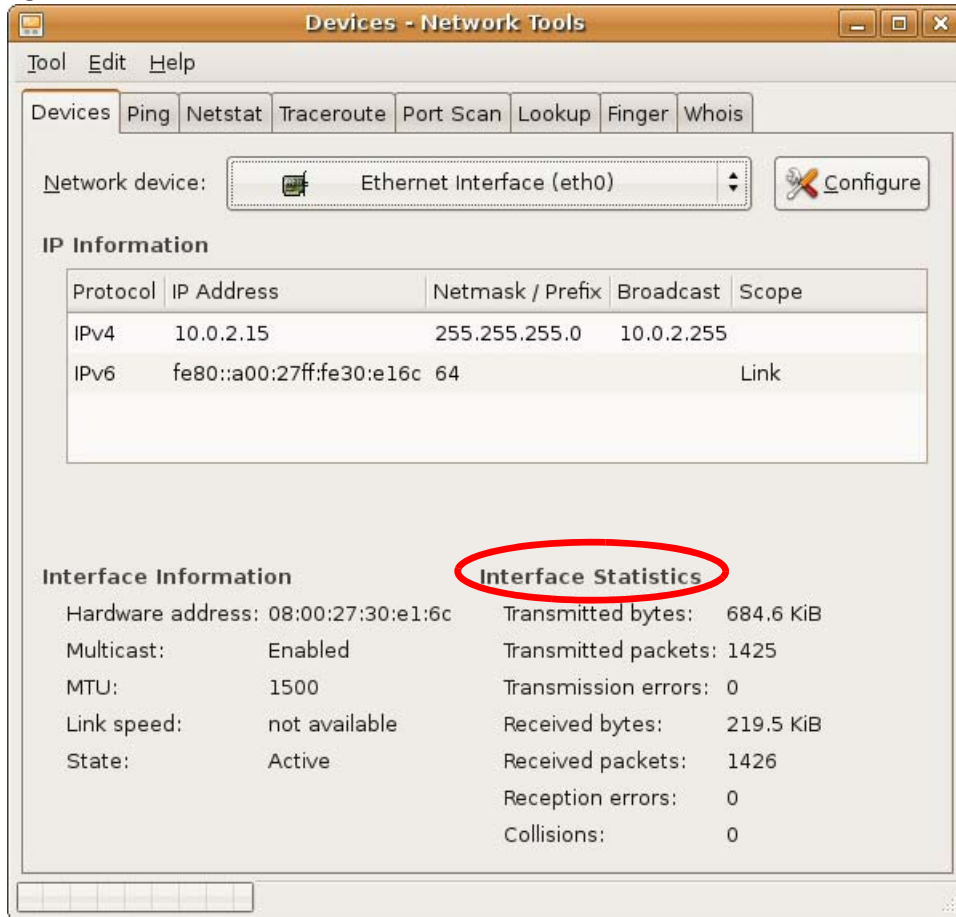


## Linux: openSUSE 10.3 (KDE)

This section shows you how to configure your computer's TCP/IP settings in the K Desktop Environment (KDE) using the openSUSE 10.3 Linux distribution. The procedure, screens and file locations may vary depending on your specific distribution, release version, and individual configuration. The following screens use the default openSUSE 10.3 installation.

Note: Make sure you are logged in as the root administrator.

Follow the steps below to configure your computer IP address in the KDE:


- 1 Click **K Menu > Computer > Administrator Settings (YaST)**.

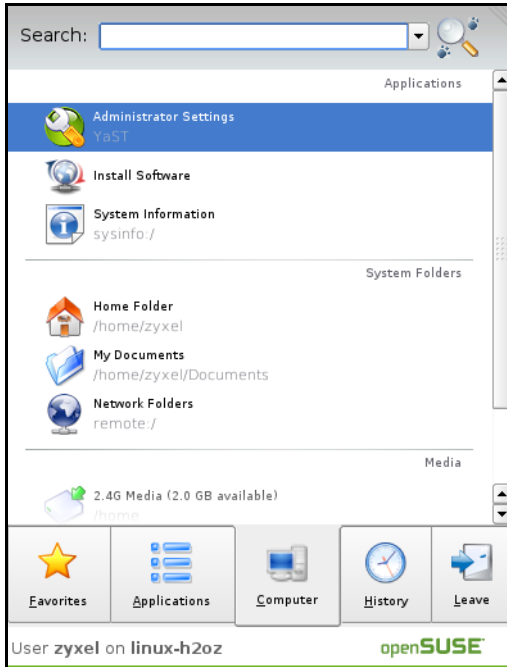


- 2 When the **Run as Root - KDE su** dialog opens, enter the admin password and click **OK**.



- 3 When the **YaST Control Center** window opens, select **Network Devices** and then click the **Network Card** icon.

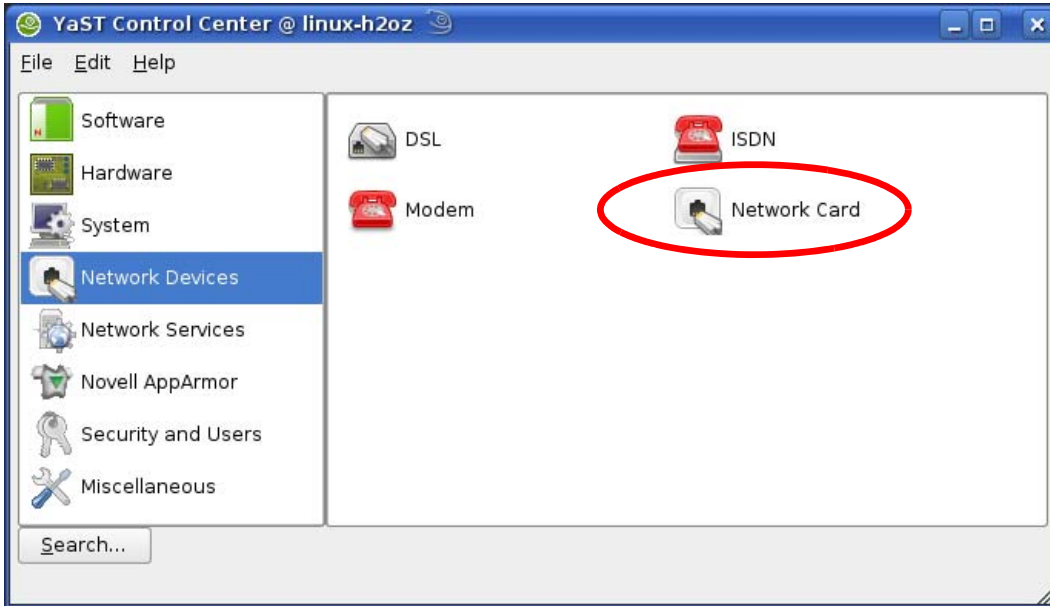


- 4 When the **Network Settings** window opens, click the **Overview** tab, select the appropriate connection **Name** from the list, and then click the **Configure** button.

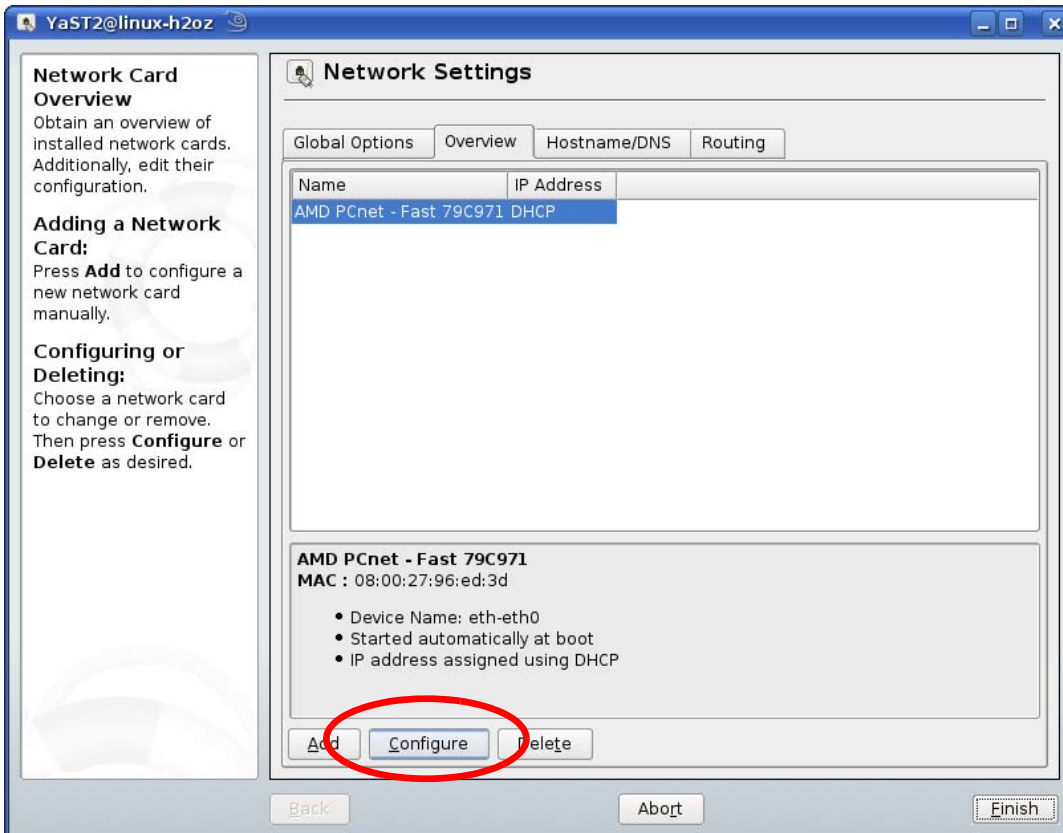


- 5 When the **Network Card Setup** window opens, click the **Address** tab

Figure 99 openSUSE 10.3: Network Card Setup

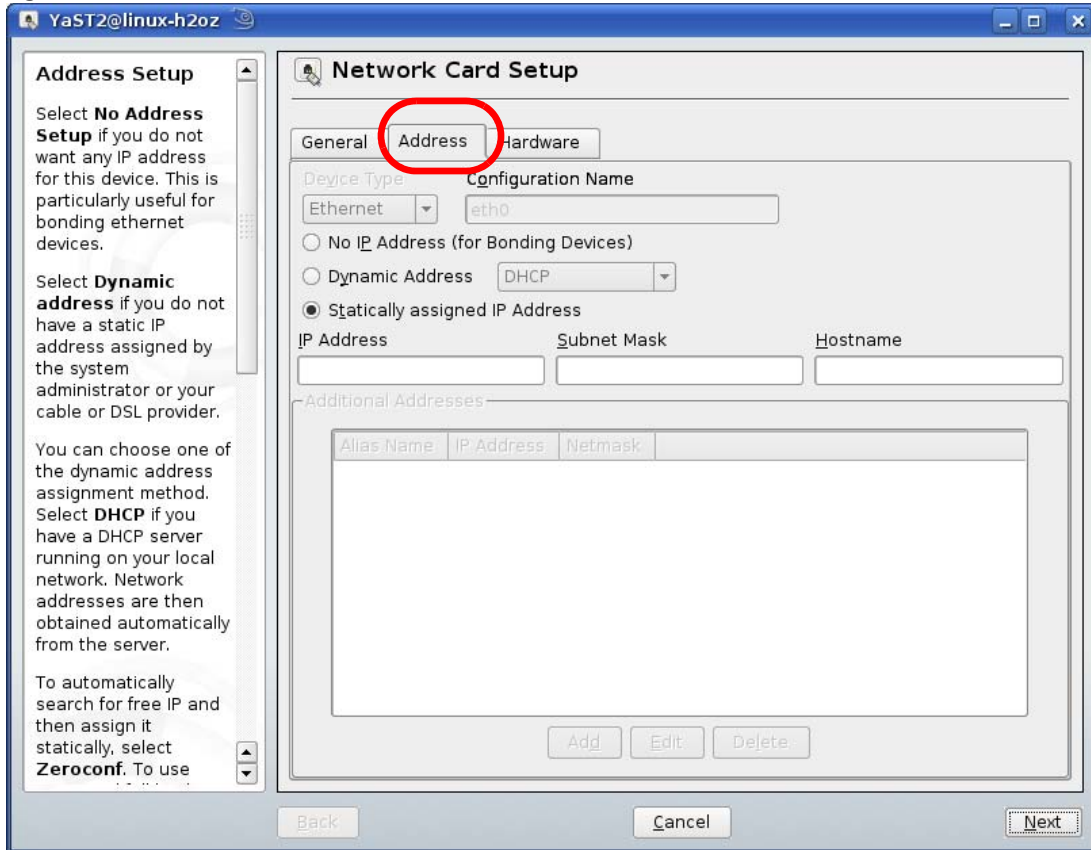

- 6 Select **Dynamic Address (DHCP)** if you have a dynamic IP address.  
Select **Statically assigned IP Address** if you have a static IP address. Fill in the **IP address**, **Subnet mask**, and **Hostname** fields.
- 7 Click **Next** to save the changes and close the **Network Card Setup** window.
- 8 If you know your DNS server IP address(es), click the **Hostname/DNS** tab in **Network Settings** and then enter the DNS server information in the fields provided.



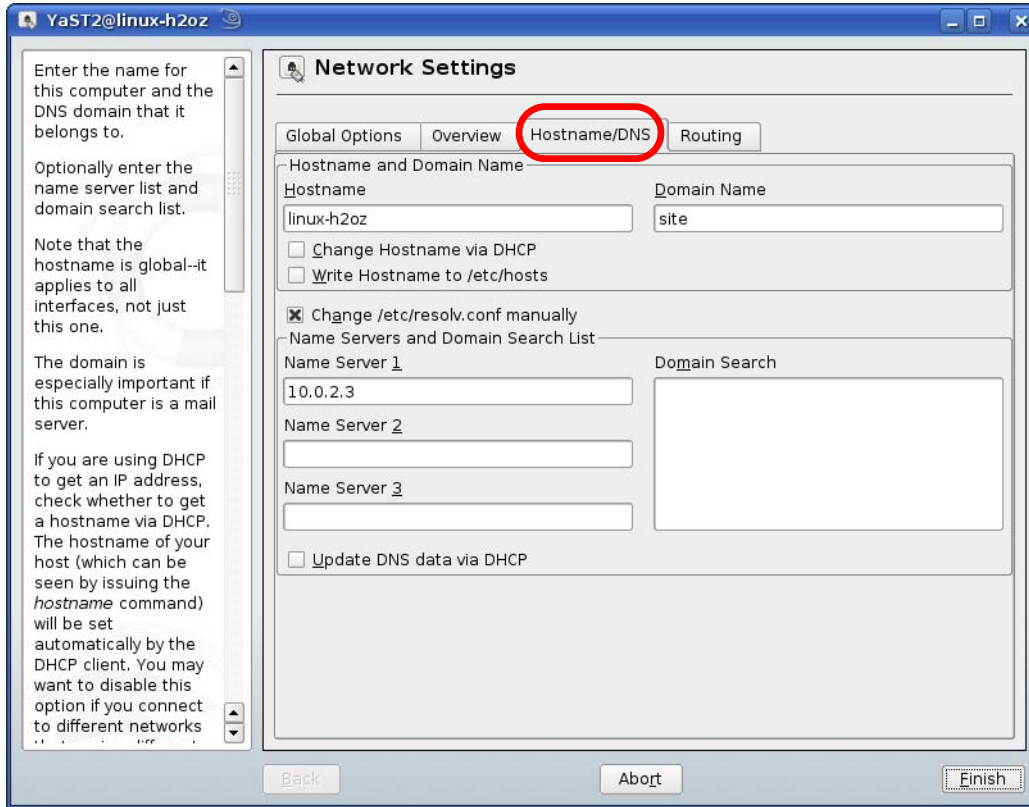


- 9 Click **Finish** to save your settings and close the window.

## Verifying Settings


Click the **KNetwork Manager** icon on the **Task bar** to check your TCP/IP properties. From the **Options** sub-menu, select **Show Connection Information**.

**Figure 100** openSUSE 10.3: KNetwork Manager

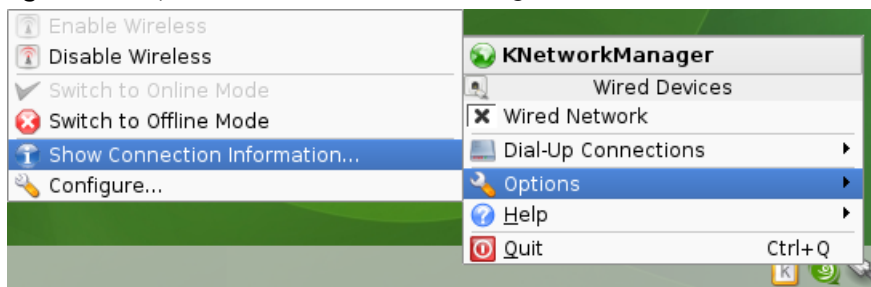

When the **Connection Status - KNetwork Manager** window opens, click the **Statistics** tab to see if your connection is working properly.

Figure 101 openSUSE: Connection Status - KNetwork Manager

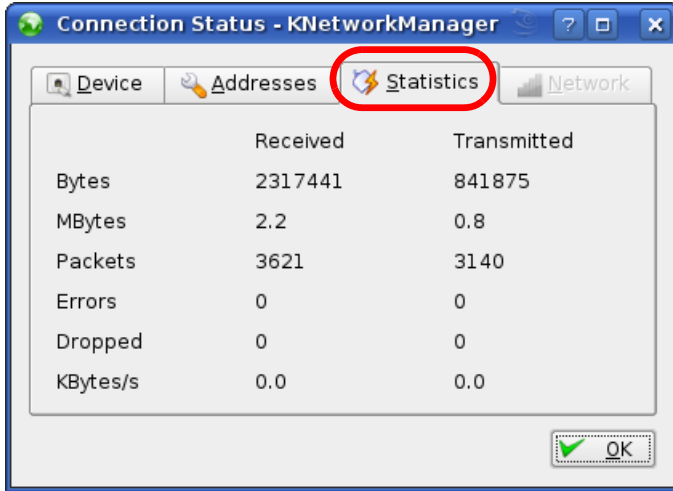

# APPENDIX B

## Common Services

The following table lists some commonly-used services and their associated protocols and port numbers. For a comprehensive list of port numbers, ICMP type/code numbers and services, visit the IANA (Internet Assigned Number Authority) web site.

- **Name:** This is a short, descriptive name for the service. You can use this one or create a different one, if you like.
- **Protocol:** This is the type of IP protocol used by the service. If this is **TCP/UDP**, then the service uses the same port number with TCP and UDP. If this is **USER-DEFINED**, the **Port(s)** is the IP protocol number, not the port number.
- **Port(s):** This value depends on the **Protocol**. Please refer to RFC 1700 for further information about port numbers.
  - If the **Protocol** is **TCP, UDP, or TCP/UDP**, this is the IP port number.
  - If the **Protocol** is **USER**, this is the IP protocol number.
- **Description:** This is a brief explanation of the applications that use this service or the situations in which this service is used.

Table 69 Commonly Used Services

NAME	PROTOCOL	PORT(S)	DESCRIPTION
AH (IPSEC_TUNNEL)	User-Defined	51	The IPSEC AH (Authentication Header) tunneling protocol uses this service.
AIM/New-ICQ	TCP	5190	AOL's Internet Messenger service. It is also used as a listening port by ICQ.
AUTH	TCP	113	Authentication protocol used by some servers.
BGP	TCP	179	Border Gateway Protocol.
BOOTP_CLIENT	UDP	68	DHCP Client.
BOOTP_SERVER	UDP	67	DHCP Server.
CU-SEEME	TCP UDP	7648 24032	A popular videoconferencing solution from White Pines Software.
DNS	TCP/UDP	53	Domain Name Server, a service that matches web names (for example <a href="http://www.zyxel.com">www.zyxel.com</a> ) to IP numbers.
ESP (IPSEC_TUNNEL)	User-Defined	50	The IPSEC ESP (Encapsulation Security Protocol) tunneling protocol uses this service.
FINGER	TCP	79	Finger is a UNIX or Internet related command that can be used to find out if a user is logged on.
FTP	TCP TCP	20 21	File Transfer Program, a program to enable fast transfer of files, including large files that may not be possible by e-mail.
H.323	TCP	1720	NetMeeting uses this protocol.
HTTP	TCP	80	Hyper Text Transfer Protocol - a client/server protocol for the world wide web.
HTTPS	TCP	443	HTTPS is a secured http session often used in e-commerce.

Table 69 Commonly Used Services (continued)

NAME	PROTOCOL	PORT(S)	DESCRIPTION
ICMP	User-Defined	1	Internet Control Message Protocol is often used for diagnostic or routing purposes.
ICQ	UDP	4000	This is a popular Internet chat program.
IGMP (MULTICAST)	User-Defined	2	Internet Group Management Protocol is used when sending packets to a specific group of hosts.
IKE	UDP	500	The Internet Key Exchange algorithm is used for key distribution and management.
IRC	TCP/UDP	6667	This is another popular Internet chat program.
MSN Messenger	TCP	1863	Microsoft Networks' messenger service uses this protocol.
NEW-ICQ	TCP	5190	An Internet chat program.
NEWS	TCP	144	A protocol for news groups.
NFS	UDP	2049	Network File System - NFS is a client/server distributed file service that provides transparent file sharing for network environments.
NNTP	TCP	119	Network News Transport Protocol is the delivery mechanism for the USENET newsgroup service.
PING	User-Defined	1	Packet INternet Groper is a protocol that sends out ICMP echo requests to test whether or not a remote host is reachable.
POP3	TCP	110	Post Office Protocol version 3 lets a client computer get e-mail from a POP3 server through a temporary connection (TCP/IP or other).
PPTP	TCP	1723	Point-to-Point Tunneling Protocol enables secure transfer of data over public networks. This is the control channel.
PPTP_TUNNEL (GRE)	User-Defined	47	PPTP (Point-to-Point Tunneling Protocol) enables secure transfer of data over public networks. This is the data channel.
RCMD	TCP	512	Remote Command Service.
REAL_AUDIO	TCP	7070	A streaming audio service that enables real time sound over the web.
REXEC	TCP	514	Remote Execution Daemon.
RLOGIN	TCP	513	Remote Login.
RTELNET	TCP	107	Remote Telnet.
RTSP	TCP/UDP	554	The Real Time Streaming (media control) Protocol (RTSP) is a remote control for multimedia on the Internet.
SFTP	TCP	115	Simple File Transfer Protocol.
SMTP	TCP	25	Simple Mail Transfer Protocol is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another.
SNMP	TCP/UDP	161	Simple Network Management Program.
SNMP-TRAPS	TCP/UDP	162	Traps for use with the SNMP (RFC:1215).
SQL-NET	TCP	1521	Structured Query Language is an interface to access data on many different types of database systems, including mainframes, midrange systems, UNIX systems and network servers.
SSH	TCP/UDP	22	Secure Shell Remote Login Program.

Table 69 Commonly Used Services (continued)

NAME	PROTOCOL	PORT(S)	DESCRIPTION
STRM WORKS	UDP	1558	Stream Works Protocol.
SYSLOG	UDP	514	Syslog allows you to send system logs to a UNIX server.
TACACS	UDP	49	Login Host Protocol used for (Terminal Access Controller Access Control System).
TELNET	TCP	23	Telnet is the login and terminal emulation protocol common on the Internet and in UNIX environments. It operates over TCP/IP networks. Its primary function is to allow users to log into remote host systems.
TFTP	UDP	69	Trivial File Transfer Protocol is an Internet file transfer protocol similar to FTP, but uses the UDP (User Datagram Protocol) rather than TCP (Transmission Control Protocol).
VDOLIVE	TCP	7000	Another videoconferencing solution.

# APPENDIX C

## Customer Support

In the event of problems that cannot be solved by using this manual, you should contact your vendor. If you cannot contact your vendor, then contact a Zyxel office for the region in which you bought the device.

See <http://www.zyxel.com/homepage.shtml> and also [http://www.zyxel.com/about\\_zyxel/zyxel\\_worldwide.shtml](http://www.zyxel.com/about_zyxel/zyxel_worldwide.shtml) for the latest information.

Please have the following information ready when you contact an office.

### Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

### Corporate Headquarters (Worldwide)

#### Taiwan

- Zyxel Communications Corporation
- <http://www.zyxel.com>

### Asia

#### China

- Zyxel Communications (Shanghai) Corp.
- Zyxel Communications (Beijing) Corp.
- Zyxel Communications (Tianjin) Corp.
- <https://www.zyxel.cn>

#### India

- Zyxel Technology India Pvt Ltd
- <https://www.zyxel.in>

#### Kazakhstan

- Zyxel Kazakhstan
- <https://www.zyxel.kz>

### **Korea**

- Zyxel Korea Corp.
- <http://www.zyxel.kr>

### **Malaysia**

- Zyxel Malaysia Sdn Bhd.
- <http://www.zyxel.com.my>

### **Pakistan**

- Zyxel Pakistan (Pvt.) Ltd.
- <http://www.zyxel.com.pk>

### **Philippines**

- Zyxel Philippines
- <http://www.zyxel.com.ph>

### **Singapore**

- Zyxel Singapore Pte Ltd.
- <http://www.zyxel.com.sg>

### **Taiwan**

- Zyxel Communications Corporation
- <https://www.zyxel.com/tw/zh/>

### **Thailand**

- Zyxel Thailand Co., Ltd
- <https://www.zyxel.co.th>

### **Vietnam**

- Zyxel Communications Corporation-Vietnam Office
- <https://www.zyxel.com/vn/vi>

## **Europe**

### **Belarus**

- Zyxel BY
- <https://www.zyxel.by>

### **Belgium**

- Zyxel Communications B.V.
- <https://www.zyxel.com/be/nl/>

- <https://www.zyxel.com/be/fr/>

## **Bulgaria**

- Zyxel България
- <https://www.zyxel.com/bg/bg/>

## **Czech Republic**

- Zyxel Communications Czech s.r.o
- <https://www.zyxel.cz>

## **Denmark**

- Zyxel Communications A/S
- <https://www.zyxel.dk>

## **Estonia**

- Zyxel Estonia
- <https://www.zyxel.com/ee/et/>

## **Finland**

- Zyxel Communications
- <https://www.zyxel.fi>

## **France**

- Zyxel France
- <https://www.zyxel.fr>

## **Germany**

- Zyxel Deutschland GmbH
- <https://www.zyxel.de>

## **Hungary**

- Zyxel Hungary & SEE
- <https://www.zyxel.hu>

## **Italy**

- Zyxel Communications Italy
- <https://www.zyxel.it/>

## **Latvia**

- Zyxel Latvia
- <https://www.zyxel.com/lv/lv/homepage.shtml>



## **Lithuania**

- Zyxel Lithuania
- <https://www.zyxel.com/lt/lt/homepage.shtml>

## **Netherlands**

- Zyxel Benelux
- <https://www.zyxel.nl>

## **Norway**

- Zyxel Communications
- <https://www.zyxel.no>

## **Poland**

- Zyxel Communications Poland
- <https://www.zyxel.pl>

## **Romania**

- Zyxel Romania
- <https://www.zyxel.com/ro/ro>

## **Russia**

- Zyxel Russia
- <https://www.zyxel.ru>

## **Slovakia**

- Zyxel Communications Czech s.r.o. organizacna zlozka
- <https://www.zyxel.sk>

## **Spain**

- Zyxel Communications ES Ltd
- <https://www.zyxel.es>

## **Sweden**

- Zyxel Communications
- <https://www.zyxel.se>

## **Switzerland**

- Studerus AG
- <https://www.zyxel.ch/>

## **Turkey**

- Zyxel Turkey A.S.

- <https://www.zyxel.com.tr>

## **UK**

- Zyxel Communications UK Ltd.
- <https://www.zyxel.co.uk>

## **Ukraine**

- Zyxel Ukraine
- <http://www.ua.zyxel.com>

## **South America**

### **Argentina**

- Zyxel Communication Corporation
- <https://www.zyxel.com/ec/es/>

### **Brazil**

- Zyxel Communications Brasil Ltda.
- <https://www.zyxel.com/br/pt/>

### **Colombia**

- Zyxel Communications Corporation
- <https://www.zyxel.com/co/es/>

### **Ecuador**

- Zyxel Communication Corporation
- <https://www.zyxel.com/ec/es/>

### **South America**

- Zyxel Communications Corporation
- <https://www.zyxel.com/co/es/>

## **Middle East**

### **Israel**

- Zyxel Communication Corporation
- <http://il.zyxel.com/homepage.shtml>

### **Middle East**

- Zyxel Communication Corporation
- <https://www.zyxel.com/me/en/>

## North America

### USA

- Zyxel Communications, Inc. - North America Headquarters
- <https://www.zyxel.com/us/en/>

## Oceania

### Australia

- Zyxel Communications Corporation
- <https://www.zyxel.com/au/en/>

## Africa

### South Africa

- Nology (Pty) Ltd.
- <https://www.zyxel.co.za>

# APPENDIX D

## Legal Information

### Copyright

Copyright © 2019 by Zyxel Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of Zyxel Communications Corporation.

Published by Zyxel Communications Corporation. All rights reserved.

### Disclaimer

Zyxel does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. Zyxel further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

### Regulatory Notice and Statement

#### UNITED STATES of AMERICA



The following information applies if you use the product within USA area.

#### FCC EMC Statement

- The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.
- This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this device does cause harmful interference to radio or television reception, which is found by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna
  - Increase the separation between the devices
  - Connect the equipment to an outlet other than the receiver's
  - Consult a dealer or an experienced radio/TV technician for assistance

The following information applies if you use the product with RF function within USA area.

#### FCC Radiation Exposure Statement

- This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

#### CANADA

The following information applies if you use the product within Canada area.

#### Industry Canada ICES Statement

CAN ICES-3 (B)/NMB-3(B)

#### Industry Canada RSS-GEN & RSS-247 statement

- This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

- This radio transmitter has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

If the product with 5G wireless function operating in 5150-5250 MHz and 5725-5850 MHz, the following attention must be paid,

- The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- The worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in Section 6.2.2(3) of RSS 247 shall be clearly indicated.

If the product with 5G wireless function operating in 5250-5350 MHz and 5470-5725 MHz, the following attention must be paid.

- For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- Le présent émetteur radio de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Lorsque la fonction sans fil 5G fonctionnant en 5150-5250 MHz and 5725-5850 MHz est activée pour ce produit, il est nécessaire de porter une attention particulière aux choses suivantes

- Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- Pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;
- Les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élevation, et énoncée à la section 6.2.2 3) du CNR-247, doivent être clairement indiqués.

Lorsque la fonction sans fil 5G fonctionnant en 5250-5350 MHz et 5470-5725 MHz est activée pour ce produit, il est nécessaire de porter une attention particulière aux choses suivantes.

- Pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5 250 à 5 350 MHz et de 5 470 à 5 725 MHz doit être conforme à la limite de la p.i.r.e.

### Industry Canada radiation exposure statement

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

### Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

## EUROPEAN UNION



The following information applies if you use the product within the European Union.

### Declaration of Conformity with Regard to EU Directive 2014/53/EU (Radio Equipment Directive, RED)

- Compliance information for 2.4GHz and/or 5GHz wireless products relevant to the EU and other Countries following the EU Directive 2014/53/ EU (RED). And this product may be used in all EU countries (and other countries following the EU Directive 2014/53/EU) without any limitation except for the countries mentioned below table:
- In the majority of the EU and other European countries, the 5GHz bands have been made available for the use of wireless local area networks (LANs). Later in this document you will find an overview of countries in which additional restrictions or requirements or both are applicable. The requirements for any country may evolve. Zyxel recommends that you check with the local authorities for the latest status of their national regulations for the 5GHz wireless LANs.
- If this device for operation in the band 5150-5350 MHz, it is for indoor use only.
- This equipment should be installed and operated with a minimum distance of 20cm between the radio equipment and your body.
- The maximum RF power operating for each band as follows:
  - LTE Band 1: 281.19 mW
  - LTE Band 3: 243.22 mW
  - LTE Band 7: 241.55 mW
  - LTE Band 8: 217.77 mW
  - LTE Band 20: 212.32 mW
  - LTE Band 28: 229.09 mW
  - LTE Band 38: 219.28 mW
  - LTE Band 40: 190.99 mW
  - WCDMA Band I: 236.59 mW
  - WCDMA Band VIII: 192.75 mW
  - GSM900: 1479.11 mW

- GSM 1800: 776.25 mW
- WiFi 2.4G: 90.99 mW

Български (Bulgarian)	<p>С настоящото Zyxel декларира, че това оборудване е в съответствие със съществените изисквания и другите приложими разпоредбите на Директива 2014/53/ЕС.</p> <p><b>National Restrictions</b></p> <ul style="list-style-type: none"> <li>• The Belgian Institute for Postal Services and Telecommunications (BIPT) must be notified of any outdoor wireless link having a range exceeding 300 meters. Please check <a href="http://www.bipt.be">http://www.bipt.be</a> for more details.</li> <li>• Draadloze verbindingen voor buitengebruik en met een reikwijdte van meer dan 300 meter dienen aangemeld te worden bij het Belgisch Instituut voor postdiensten en telecommunicatie (BIPT). Zie <a href="http://www.bipt.be">http://www.bipt.be</a> voor meer gegevens.</li> <li>• Les liaisons sans fil pour une utilisation en extérieur d'une distance supérieure à 300 mètres doivent être notifiées à l'Institut Belge des services Postaux et des Télécommunications (IBPT). Visitez <a href="http://www.ibpt.be">http://www.ibpt.be</a> pour de plus amples détails.</li> </ul>
Español (Spanish)	<p>Por medio de la presente Zyxel declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/UE.</p>
Čeština (Czech)	<p>Zyxel tímto prohlašuje, že tento zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.</p>
Dansk (Danish)	<p>Undertegnede Zyxel erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.</p> <p><b>National Restrictions</b></p> <ul style="list-style-type: none"> <li>• In Denmark, the band 5150 - 5350 MHz is also allowed for outdoor usage.</li> <li>• I Danmark må frekvensbåndet 5150 - 5350 også anvendes udendørs.</li> </ul>
Deutsch (German)	<p>Hiermit erklärt Zyxel, dass sich das Gerät Ausstattung in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.</p>
Eesti keel (Estonian)	<p>Käesolevaga kinnitab Zyxel seadme seadme vastavust direktiivi 2014/53/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.</p>
Ελληνικά (Greek)	<p>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ζyxel ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU.</p>
English	<p>Hereby, Zyxel declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.</p>
Français (French)	<p>Par la présente Zyxel déclare que l'appareil équipements est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.</p>
Hrvatski (Croatian)	<p>Zyxel ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.</p>
Íslenska (Icelandic)	<p>Hér með lýsir, Zyxel því yfir að þessi búnaður er í samræmi við grunnkröfur og önnur viðeigandi ákvæði tilskipunar 2014/53/EU.</p>
Italiano (Italian)	<p>Con la presente Zyxel dichiara che questo attrezzatura è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU.</p> <p><b>National Restrictions</b></p> <ul style="list-style-type: none"> <li>• This product meets the National Radio Interface and the requirements specified in the National Frequency Allocation Table for Italy. Unless this wireless LAN product is operating within the boundaries of the owner's property, its use requires a "general authorization." Please check <a href="http://www.sviluppoeconomico.gov.it/">http://www.sviluppoeconomico.gov.it/</a> for more details.</li> <li>• Questo prodotto è conforme alla specifiche di interfaccia Radio Nazionali e rispetta il Piano Nazionale di ripartizione delle frequenze in Italia. Se non viene installato all'interno del proprio fondo, l'utilizzo di prodotti Wireless LAN richiede una "Autorizzazione Generale". Consultare <a href="http://www.sviluppoeconomico.gov.it/">http://www.sviluppoeconomico.gov.it/</a> per maggiori dettagli.</li> </ul>
Latviešu valoda (Latvian)	<p>Ar šo Zyxel deklarē, ka iekārtas atbilst Direktīvas 2014/53/EU būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.</p> <p><b>National Restrictions</b></p> <ul style="list-style-type: none"> <li>• The outdoor usage of the 2.4 GHz band requires an authorization from the Electronic Communications Office. Please check <a href="http://www.esd.lv">http://www.esd.lv</a> for more details.</li> <li>• 2.4 GHz frekvenču joslas izmantošanai ārpus telpām nepieciešama atļauja no Elektronisko sakaru direkcijas. Vairāk informācijas: <a href="http://www.esd.lv">http://www.esd.lv</a>.</li> </ul>
Lietuvių kalba (Lithuanian)	<p>Šiuo Zyxel deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas.</p>
Magyar (Hungarian)	<p>Alulírott, Zyxel nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.</p>
Malti (Maltese)	<p>Hawnhekk, Zyxel, jiddikjara li dan tagħmir jikkonforma mal-ftiġġiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 2014/53/EU.</p>
Nederlands (Dutch)	<p>Hierbij verklaart Zyxel dat het toestel uitrusting in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.</p>
Polski (Polish)	<p>Niniejszym Zyxel oświadcza, że sprzęt jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU.</p>
Português (Portuguese)	<p>Zyxel declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/UE.</p>

Română (Romanian)	Prin prezenta, Zyxel declară că acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 2014/53/EU.
Slovenčina (Slovak)	Zyxel týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.
Slovenščina (Slovene)	Zyxel izjavlja, da je ta oprema v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.
Suomi (Finnish)	Zyxel vakuuttaa täten että laitteen tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska (Swedish)	Härmed intygar Zyxel att denna utrustning står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.
Norsk (Norwegian)	Erklærer herved Zyxel at dette utstyret er i samsvar med de grunnleggende kravene og andre relevante bestemmelser i direktiv 2014/53/EU.

**Notes:**

1. Although Norway, Switzerland and Liechtenstein are not EU member states, the EU Directive 2014/53/EU has also been implemented in those countries.
2. The regulatory limits for maximum output power are specified in EIRP. The EIRP level (in dBm) of a device can be calculated by adding the gain of the antenna used (specified in dBi) to the output power available at the connector (specified in dBm).

**List of national codes**

COUNTRY	ISO 3166 2 LETTER CODE	COUNTRY	ISO 3166 2 LETTER CODE
Austria	AT	Liechtenstein	LI
Belgium	BE	Lithuania	LT
Bulgaria	BG	Luxembourg	LU
Croatia	HR	Malta	MT
Cyprus	CY	Netherlands	NL
Czech Republic	CZ	Norway	NO
Denmark	DK	Poland	PL
Estonia	EE	Portugal	PT
Finland	FI	Romania	RO
France	FR	Serbia	RS
Germany	DE	Slovakia	SK
Greece	GR	Slovenia	SI
Hungary	HU	Spain	ES
Iceland	IS	Switzerland	CH
Ireland	IE	Sweden	SE
Italy	IT	Turkey	TR
Latvia	LV	United Kingdom	GB

**Safety Warnings**

- Do not use this product near water, for example, in a wet basement or near a swimming pool.
- Do not expose your device to dampness, dust or corrosive liquids.
- Do not store things on the device.
- Do not obstruct the device ventilation slots as insufficient airflow may harm your device. For example, do not place the device in an enclosed space such as a box or on a very soft surface such as a bed or sofa.
- Do not install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- Do not open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks.
- Only qualified service personnel should service or disassemble this device. Please contact your vendor for further information.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Do not remove the plug and connect it to a power outlet by itself; always attach the plug to the power adaptor first before connecting it to a power outlet.
- Do not allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Please use the provided or designated connection cables/power cables/ adaptors. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe). If the power adaptor or cord is damaged, it might cause electrocution. Remove it from the device and the power source, repairing the power adapter or cord is prohibited. Contact your local vendor to order a new one.
- Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.

- CAUTION: Risk of explosion if battery is replaced by an incorrect type, dispose of used batteries according to the instruction. Dispose them at the applicable collection point for the recycling of electrical and electronic devices. For detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the store where you purchased the product.
- The following warning statements apply, where the disconnect device is not incorporated in the device or where the plug on the power supply cord is intended to serve as the disconnect device.
  - For permanently connected devices, a readily accessible disconnect device shall be incorporated external to the device;
  - For pluggable devices, the socket-outlet shall be installed near the device and shall be easily accessible.

## Environment Statement

### ErP (Energy-related Products)

Zyxel products put on the EU market in compliance with the requirement of the European Parliament and the Council published Directive 2009/125/EC establishing a framework for the setting of ecodesign requirements for energy-related products (recast), so called as "ErP Directive (Energy-related Products directive)" as well as ecodesign requirement laid down in applicable implementing measures, power consumption has satisfied regulation requirements which are:

- Network standby power consumption < 8W, and/or
- Off mode power consumption < 0.5W, and/or
- Standby mode power consumption < 0.5W.

(Wireless setting, please refer to "Wireless" chapter for more detail.)

### European Union - Disposal and Recycling Information

The symbol below means that according to local regulations your product and/or its battery shall be disposed of separately from domestic waste. If this product is end of life, take it to a recycling station designated by local authorities. At the time of disposal, the separate collection of your product and/or its battery will help save natural resources and ensure that the environment is sustainable development.

Die folgende Symbol bedeutet, dass Ihr Produkt und/oder seine Batterie gemäß den örtlichen Bestimmungen getrennt vom Hausmüll entsorgt werden muss. Wenden Sie sich an eine Recyclingstation, wenn dieses Produkt das Ende seiner Lebensdauer erreicht hat. Zum Zeitpunkt der Entsorgung wird die getrennte Sammlung von Produkt und/oder seiner Batterie dazu beitragen, natürliche Ressourcen zu sparen und die Umwelt und die menschliche Gesundheit zu schützen.

El símbolo de abajo indica que según las regulaciones locales, su producto y/o su batería deberán depositarse como basura separada de la doméstica. Cuando este producto alcance el final de su vida útil, llévelo a un punto limpio. Cuando llegue el momento de desechar el producto, la recogida por separado éste y/o su batería ayudará a salvar los recursos naturales y a proteger la salud humana y medioambiental.

Le symbole ci-dessous signifie que selon les réglementations locales votre produit et/ou sa batterie doivent être éliminés séparément des ordures ménagères. Lorsque ce produit atteint sa fin de vie, amenez-le à un centre de recyclage. Au moment de la mise au rebut, la collecte séparée de votre produit et/ou de sa batterie aidera à économiser les ressources naturelles et protéger l'environnement et la santé humaine.

Il simbolo sotto significa che secondo i regolamenti locali il vostro prodotto e/o batteria deve essere smaltito separatamente dai rifiuti domestici. Quando questo prodotto raggiunge la fine della vita di servizio portarlo a una stazione di riciclaggio. Al momento dello smaltimento, la raccolta separata del vostro prodotto e/o della sua batteria aiuta a risparmiare risorse naturali e a proteggere l'ambiente e la salute umana.

Symbolen innebär att enligt lokal lagstiftning ska produkten och/eller dess batteri kastas separat från hushållsavfallet. När den här produkten når slutet av sin livslängd ska du ta den till en återvinningsstation. Vid tiden för kasseringen bidrar du till en bättre miljö och mänsklig hälsa genom att göra dig av med den på ett återvinningsställe.



台灣



以下訊息僅適用於產品具有無線功能且銷售至台灣地區

- 第十二條 經型式認證合格之低功率射頻電機，非經許可，公司，商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- 第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
- 無線資訊傳輸設備須忍受合法通信之干擾且不得干擾合法通信；如造成干擾，應立即停用，俟無干擾之虞，始得繼續使用。
- 無線資訊傳輸設備的製造廠商應確保頻率穩定性，如依製造廠商使用手冊上所述正常操作，發射的信號應維持於操作頻帶中



以下訊息僅適用於產品操作於 5.25-5.35 赫赫頻帶內並銷售至台灣地區

- 在 5.25-5.35 赫赫頻帶內操作之無線資訊傳輸設備，限於室內使用。

以下訊息僅適用於產品屬於專業安裝並銷售至台灣地區

- 本器材須經專業工程人員安裝及設定，始得設置使用，且不得直接販售給一般消費者。





安全警告 - 為了您的安全，請先閱讀以下警告及指示：

- 請勿將此產品接近水、火焰或放置在高溫的環境。
- 避免設備接觸：
  - 任何液體 - 切勿讓設備接觸水、雨水、高濕度、污水腐蝕性的液體或其他水份。
  - 灰塵及污物 - 切勿接觸灰塵、污物、沙土、食物或其他不合適的材料。
- 雷雨天氣時，不要安裝，使用或維修此設備。有遭受電擊的風險。
- 切勿重摔或撞擊設備，並勿使用不正確的電源變壓器。
- 若接上不正確的電源變壓器會有爆炸的風險。
- 請勿隨意更換產品內的電池。
- 如果更換不正確之電池型式，會有爆炸的風險，請依製造商說明書處理使用過之電池。
- 請將廢電池丟棄在適當的電器或電子設備回收處。
- 請勿將設備解體。
- 請勿阻礙設備的散熱孔，空氣對流不足將會造成設備損害。
- 請插在正確的電壓供給插座（如：北美 / 台灣電壓 110V AC，歐洲是 230V AC）。
- 假若電源變壓器或電源變壓器的纜線損壞，請從插座拔除，若您還繼續插電使用，會有觸電死亡的風險。
- 請勿試圖修理電源變壓器或電源變壓器的纜線，若有毀損，請直接聯絡您購買的店家，購買一個新的電源變壓器。
- 請勿將此設備安裝於室外，此設備僅適合放置於室內。
- 請勿隨一般垃圾丟棄。
- 請參閱產品背貼上的設備額定功率。
- 請參考產品型錄或是彩盒上的作業溫度。
- 產品沒有斷電裝置或者採用電源線的插頭視為斷電裝置的一部分，以下警語將適用：
  - 對永久連接之設備，在設備外部須安裝可觸及之斷電裝置；
  - 對插接式之設備，插座必須接近安裝之地點而且是易於觸及的。

## About the Symbols

Various symbols are used in this product to ensure correct usage, to prevent danger to the user and others, and to prevent property damage. The meaning of these symbols are described below. It is important that you read these descriptions thoroughly and fully understand the contents.

### Explanation of the Symbols

SYMBOL	EXPLANATION
	Alternating current (AC): AC is an electric current in which the flow of electric charge periodically reverses direction.
	Direct current (DC): DC if the unidirectional flow or movement of electric charge carriers.
	Earth; ground: A wiring terminal intended for connection of a Protective Earthing Conductor.
	Class II equipment: The method of protection against electric shock in the case of class II equipment is either double insulation or reinforced insulation.

## Viewing Certifications

Go to <http://www.zyxel.com> to view this product's documentation and certifications.

## Zyxel Limited Warranty

Zyxel warrants to the original end user (purchaser) that this product is free from any defects in material or workmanship for a specific period (the Warranty Period) from the date of purchase. The Warranty Period varies by region. Check with your vendor and/or the authorized Zyxel local distributor for details about the Warranty Period of this product. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, Zyxel will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to

proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of Zyxel. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

### Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. Zyxel shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at [http://www.zyxel.com/web/support\\_warranty\\_info.php](http://www.zyxel.com/web/support_warranty_info.php).

### Registration

Register your product online to receive e-mail notices of firmware upgrades and information at [www.zyxel.com](http://www.zyxel.com) for global products, or at [www.us.zyxel.com](http://www.us.zyxel.com) for North American products.

### Open Source Licenses

This product may contain in part some free software distributed under GPL license terms and/or GPL like licenses. Open source licenses are provided with the firmware package. You can download the latest firmware at [www.zyxel.com](http://www.zyxel.com). If you cannot find it there, contact your vendor or Zyxel Technical Support at [support@zyxel.com.tw](mailto:support@zyxel.com.tw).

To obtain the source code covered under those Licenses, please contact your vendor or Zyxel Technical Support at [support@zyxel.com](mailto:support@zyxel.com).

# Index

## A

ACS [130](#)  
Address Assignment [54](#)  
Address Resolution Protocol [48](#)  
Auto Configuration Server, see ACS [130](#)

## B

Bandwidth management  
  overview [119](#)  
  priority [121](#)

## C

certifications [183](#)  
  viewing [185](#)  
Channel [27](#)  
channel [64](#)  
Configuration  
  restore [138](#)  
configuration  
  static route [133](#)  
contact information [174](#)  
content filtering  
  by keyword (in URL) [109](#)  
copyright [180](#)  
CPU usage [28](#)  
customer support [174](#)

## D

Daylight saving [136](#)  
DDNS [96](#)  
  see also Dynamic DNS  
  service providers [96, 111](#)

DHCP [47, 82](#)  
  DHCP server  
  see also Dynamic Host Configuration Protocol  
DHCP server [81, 82](#)  
disclaimer [180](#)  
DNS [85](#)  
DNS Server [54](#)  
DNS server [85](#)  
Domain Name System [85](#)  
Domain Name System. See DNS.  
Dynamic DNS [96](#)  
Dynamic Host Configuration Protocol [82](#)  
DynDNS [96, 111](#)  
DynDNS see also DDNS [96, 111](#)

## E

encryption [65](#)  
  and local (user) database [66](#)  
  key [66](#)  
  WPA compatible [66](#)  
ESSID [143](#)

## F

Firewall  
  guidelines [105](#)  
  ICMP packets [106](#)  
firewall  
  stateful inspection [104](#)  
Firmware upload [136](#)  
  file extension  
  using HTTP  
firmware version [27](#)

**G**

General wireless LAN screen [66](#)

**I**

IGMP [54](#)

see also Internet Group Multicast Protocol  
version

IGMP version [54](#)

interface group [101](#)

Internet Group Multicast Protocol [54](#)

Internet Protocol version 6 [55](#)

IP Address [81, 89](#)

IP Pool [83](#)

IPv6 [55](#)

addressing [55](#)

prefix [55](#)

prefix length [55](#)

**L**

LAN [80](#)

IP pool setup [82](#)

LAN overview [80](#)

LAN setup [80](#)

Language [139](#)

Link type [28](#)

local (user) database [65](#)

and encryption [66](#)

Local Area Network [80](#)

logout

Web Configurator [23](#)

**M**

MAC [72](#)

MAC address [64](#)

MAC address filter [64](#)

MAC address filtering [72](#)

MAC filter [72](#)

managing the device

good habits [13](#)

using the web configurator. See web configurator.

using the WPS. See WPS.

Media access control [72](#)

Memory usage [28](#)

Multicast [54](#)

IGMP [54](#)

**N**

NAT [87, 88](#)

overview [87](#)

port forwarding [93](#)

see also Network Address Translation

server sets [93](#)

NAT Traversal [123](#)

Navigation Panel [23](#)

navigation panel [23](#)

Network Address Translation [87, 88](#)

**P**

Pool Size [83](#)

Port forwarding [89, 93](#)

default server [88, 93](#)

example [94](#)

local server [89](#)

port numbers

services

port speed [28](#)

**Q**

Quality of Service (QoS) [75](#)

**R**

RADIUS server [65](#)

remote management

TR-069 [130](#)

Remote Procedure Calls, see RPCs [130](#)  
 Reset button [13](#)  
 Reset the device [13](#)  
 Restore configuration [138](#)  
 Roaming [74](#)  
 RPPCs [130](#)  
 RTS/CTS Threshold [64, 74](#)

## S

Scheduling [77](#)  
 Service and port numbers [108, 122](#)  
 Service Set [67, 72](#)  
 Service Set IDentification [67, 72](#)  
 Service Set IDentity. See SSID.  
 setup  
   static route [133](#)  
 SSID [27, 64, 67, 72](#)  
 stateful inspection firewall [104](#)  
 Static DHCP [84](#)  
 Static Route [98](#)  
 static route  
   configuration [133](#)  
 Status [25](#)  
 Subnet Mask [81](#)  
 Summary  
   DHCP table [47](#)  
   Packet statistics [49, 51](#)  
   Wireless station status [50](#)  
 System General Setup [132](#)  
 System restart [139](#)

## T

TCP/IP configuration [82](#)  
 Time setting [134](#)  
 TR-069 [130](#)  
   ACS setup [130](#)  
 trigger port [94](#)  
 Trigger port forwarding [94](#)  
   example [94](#)  
   process [94](#)

## U

Universal Plug and Play [123](#)  
   Application [123](#)  
   Security issues [124](#)  
 UPnP [123](#)  
 URL Keyword Blocking [110](#)  
 user authentication [65](#)  
   local (user) database [65](#)  
   RADIUS server [65](#)  
 User Name [97](#)

## W

WAN (Wide Area Network) [53](#)  
 warranty [185](#)  
   note [186](#)  
 Web Configurator  
   how to access [19](#)  
   Overview [19](#)  
 web configurator [13](#)  
 WEP Encryption [70](#)  
 Wireless association list [50](#)  
 wireless channel [143](#)  
 wireless LAN [143](#)  
 wireless LAN scheduling [77](#)  
 Wireless network  
   basic guidelines [63](#)  
   channel [64](#)  
   encryption [65](#)  
   example [63](#)  
   MAC address filter [64](#)  
   overview [63](#)  
   security [64](#)  
   SSID [64](#)  
 Wireless security [64](#)  
   overview [64](#)  
   type [64](#)  
 wireless security [143](#)  
 Wireless tutorial [34](#)  
 Wizard setup [29](#)  
 WLAN button [14](#)  
 WPA compatible [66](#)  
 WPS [13](#)