



# **Network Video Recorder**

**User Manual**

## Legal Information

©2023 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

### About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website ( <https://www.hikvision.com/> ).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

### Trademarks

**HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.



: The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

### Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT

## Network Video Recorder User Manual

---

INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

## Regulatory Information

### FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

### EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the



purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: <http://www.recyclethis.info> .

2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: <http://www.recyclethis.info> .

### **Industry Canada ICES-003 Compliance**

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

## Applicable Model

This manual is applicable to the following models.

**Table 1-1 Applicable Model**

Series	Model
iDS-6700NXI-I/FA	iDS-6708NXI-I/FA
iDS-6700NXI-I/S	iDS-6716NXI-I/S
iDS-7600NXI-I2/X	iDS-7608NXI-I2/X
	iDS-7616NXI-I2/X
iDS-7600NXI-I2/P/X	iDS-7608NXI-I2/8P/X
	iDS-7616NXI-I2/16P/X
iDS-7700NXI-I4/X	iDS-7716NXI-I4/X
	iDS-7732NXI-I4/X
iDS-7700NXI-I4/16P/X	iDS-7716NXI-I4/16P/X
	iDS-7732NXI-I4/16P/X
iDS-7700NXI-I4/S	iDS-7716NXI-I4/S
	iDS-7732NXI-I4/S
iDS-7700NXI-I4/16P/S	iDS-7716NXI-I4/16P/S
	iDS-7732NXI-I4/16P/S
iDS-9600NXI-I8/X	iDS-9616NXI-I8/X
iDS-9600NXI-I8/X	iDS-9632NXI-I8/X
	iDS-9664NXI-I8/X
iDS-9600NXI-I8/S	iDS-9616NXI-I8/S
	iDS-9632NXI-I8/S
	iDS-9664NXI-I8/S
iDS-9600NXI-I16/X	iDS-9616NXI-I16/X
	iDS-9632NXI-I16/X
	iDS-9664NXI-I16/X
iDS-9600NXI-I16	iDS-96064NXI-I16

## Network Video Recorder User Manual

---

Series	Model
	iDS-96128NXI-I16
iDS-96000NXI-I24	iDS-96128NXI-I24
	iDS-96256NXI-I24
iDS-6700NXI-I/8F(B)	iDS-6708NXI-I/8F(B)
iDS-6716NXI-I/16S(B)	iDS-6716NXI-I/16S(B)
iDS-7700NXI-I4/16P/16S(B)	iDS-7716NXI-I4/16P/16S(B)
	iDS-7732NXI-I4/16P/16S(B)
iDS-7700NXI-I4/16P/X(B)	iDS-7716NXI-I4/16P/X(B)
	iDS-7732NXI-I4/16P/X(B)
iDS-7700NXI-I4/16S(B)	iDS-7716NXI-I4/16S(B)
	iDS-7732NXI-I4/16S(B)
iDS-7700NXI-I4/X(B)	iDS-7716NXI-I4/X(B)
	iDS-7732NXI-I4/X(B)
iDS-9600NXI-I8/4F(B)	iDS-9608NXI-I8/4F(B)
	iDS-9616NXI-I8/4F(B)
	iDS-9632NXI-I8/4F(B)
iDS-9600NXI-I8/8F(B)	iDS-9616NXI-I8/8F(B)
	iDS-9632NXI-I8/8F(B)
	iDS-9664NXI-I8/8F(B)
iDS-9600NXI-I8/X(B)	iDS-9616NXI-I8/X(B)
	iDS-9632NXI-I8/X(B)
	iDS-9664NXI-I8/X(B)
iDS-9600NXI-I8/16S(B)	iDS-9616NXI-I8/16S(B)
	iDS-9632NXI-I8/16S(B)
	iDS-9664NXI-I8/16S(B)
iDS-9600NXI-I16/8F(B)	iDS-9616NXI-I16/8F(B)
	iDS-9632NXI-I16/8F(B)
	iDS-9664NXI-I16/8F(B)
iDS-9600NXI-I16/X(B)	iDS-9616NXI-I16/X(B)

## Network Video Recorder User Manual

---

Series	Model
	iDS-9632NXI-I16/X(B)
	iDS-9664NXI-I16/X(B)
iDS-9600NXI-I16/16S(B)	iDS-9616NXI-I16/16S(B)
	iDS-9632NXI-I16/16S(B)
	iDS-9664NXI-I16/16S(B)
iDS-96000NXI-I16(B)	iDS-96064NXI-I16(B)
	iDS-96128NXI-I16(B)
iDS-96000NXI-I24(B)	iDS-96128NXI-I24(B)
	iDS-96256NXI-I24(B)
iDS-7600NXI-M2/X	iDS-7608NXI-M2/X
	iDS-7616NXI-M2/X
	iDS-7632NXI-M2/X
iDS-7600NXI-M2/P/X	iDS-7608NXI-M2/8P/X
	iDS-7616NXI-M2/16P/X
iDS-7700NXI-M4/X	iDS-7716NXI-M4/X
	iDS-7732NXI-M4/X
iDS-7700NXI-M4/16P/X	iDS-7716NXI-M4/16P/X
	iDS-7732NXI-M4/16P/X
iDS-9600NXI-M8/X	iDS-9616NXI-M8/X
	iDS-9632NXI-M8/X
	iDS-9664NXI-M8/X
iDS-9600NXI-M8R/X	iDS-9616NXI-M8R/X
	iDS-9632NXI-M8R/X
	iDS-9664NXI-M8R/X
iDS-9600NXI-M16/X	iDS-9632NXI-M16/X
	iDS-9664NXI-M16/X
iDS-9600NXI-M16/X	iDS-9632NXI-M16R/X
	iDS-9664NXI-M16R/X
iDS-9600NXI-I8/S/SL	iDS-9632NXI-I8/S/SL

## Network Video Recorder User Manual

---

Series	Model
	iDS-9664NXI-I8/S/SL
iDS-9664NXI-I16/S/SL	iDS-9664NXI-I16/S/SL

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>Danger</b>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 <b>Caution</b>	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 <b>Note</b>	Provides additional information to emphasize or supplement important points of the main text.

## Safety Instruction

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- Firmly connect the plug to the power socket. Do not connect several devices to one power adapter. Power off the device before connecting and disconnecting accessories and peripherals.
- Shock hazard! Disconnect all power sources before maintenance.
- The equipment must be connected to an earthed mains socket-outlet.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- ⚡ indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- Input voltage should meet the SELV (Safety Extra Low Voltage) and the LPS (Limited Power Source) according to the IEC62368.
- High touch current! Connect to earth before connecting to the power supply.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Use the device in conjunction with an UPS, and use factory recommended HDD if possible.
- This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- This equipment is not suitable for use in locations where children are likely to be present.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
- Dispose of used batteries according to the instructions.
- Keep body parts away from fan blades and motors. Disconnect the power source during servicing.
- Keep body parts away from motors. Disconnect the power source during servicing.
- Use only power supplies same with the original model, or LPS power supplies with the same voltage and electric current.

## Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- The device is designed for indoor use only. Install it in a well-ventilated, dust-free environment without liquids.
- Ensure recorder is properly secured to a rack or shelf. Major shocks or jolts to the recorder as a result of dropping it may cause damage to the sensitive electronics within the recorder.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids shall be placed on the equipment, such as vases.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. The openings shall never be blocked by placing the equipment on a bed, sofa, rug or other similar surface.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- For certain models, the equipment has been designed, when required, modified for connection to an IT power distribution system.
-  identifies the battery holder itself and identifies the positioning of the cell(s) inside the battery holder.
- + identifies the positive terminal(s) of equipment which is used with, or generates direct current.
- - identifies the negative terminal(s) of equipment which is used with, or generates direct current.
- Keep a minimum 200 mm (7.87 inch) distance around the equipment for sufficient ventilation.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- Use only power supplies listed in the user manual or user instruction.
- The USB port of the equipment is used for connecting to a mouse, keyboard, USB flash drive, or Wi-Fi dongle only.
- Use only power supplies listed in the user manual or user instruction.
- Do not touch the sharp edges or corners.
- When the device is running above 45 °C (113 °F), or its HDD temperature in S.M.A.R.T. exceeds the stated value, please ensure the device is running in a cool environment, or replace HDD(s) to make the HDD temperature in S.M.A.R.T. below the stated value.

# Contents

<b>Chapter 1 Basic Operation</b> .....	<b>1</b>
1.1 Activate Your Device .....	1
1.1.1 Default User and IP Address .....	1
1.1.2 Activate via Local Menu .....	1
1.1.3 Activate via SADP .....	2
1.1.4 Activate via Client Software .....	3
1.1.5 Activate via Web Browser .....	6
1.2 Configure TCP/IP .....	6
1.3 Configure HDD .....	7
1.4 Add Network Camera .....	8
1.4.1 Add Automatically Searched Online Network Camera .....	8
1.4.2 Add Network Camera Manually .....	9
1.4.3 Add Network Camera Through PoE .....	10
1.4.4 Add Network Camera via Customized Protocol .....	12
1.5 Connect to Platform .....	13
1.5.1 Configure ISUP .....	13
1.5.2 Configure Hik-Connect .....	15
<b>Chapter 2 Camera Settings</b> .....	<b>17</b>
2.1 View Camera Error Information .....	17
2.2 Configure Image Parameters .....	17
2.3 Configure OSD .....	17
2.4 Configure Privacy Mask .....	18
2.5 IP Camera Time Sync .....	19
2.6 Import Network Camera Certificate .....	20
2.7 Import/Export IP Camera Configuration Files .....	20
2.8 Save Camera VCA Data .....	21

2.9 Upgrade IP Cameras .....	21
<b>Chapter 3 Live View .....</b>	<b>23</b>
3.1 Start Live View .....	23
3.2 Configure Live View Settings .....	24
3.3 Configure Auto-Switch of Cameras .....	25
3.4 Configure Live View Layout .....	25
3.4.1 Configure Custom Live View Layout .....	25
3.4.2 Configure Live View Mode .....	26
3.5 Configure Channel-Zero Encoding .....	27
3.6 Main and Auxiliary Ports Strategy .....	27
3.7 Digital Zoom .....	28
3.8 Fisheye View .....	29
3.9 3D Positioning .....	30
3.10 Live View Strategy .....	30
3.11 Person Passing .....	30
3.12 PTZ Control .....	33
3.12.1 Configure PTZ Parameters .....	33
3.12.2 Set a Preset .....	33
3.12.3 Call a Preset .....	34
3.12.4 Set a Patrol .....	34
3.12.5 Call a Patrol .....	36
3.12.6 Set a Pattern .....	36
3.12.7 Call a Pattern .....	37
3.12.8 Set Linear Scan Limit .....	37
3.12.9 One-Touch Park .....	38
3.12.10 Auxiliary Functions .....	39
<b>Chapter 4 Recording and Playback .....</b>	<b>40</b>
4.1 Recording .....	40

4.1.1 Configure Recording Parameters .....	40
4.1.2 Enable H.265 Stream Access .....	42
4.1.3 ANR .....	42
4.1.4 Manual Recording .....	42
4.1.5 Configure Recording Schedule .....	42
4.1.6 Configure Continuous Recording .....	44
4.1.7 Configure Motion Detection Triggered Recording .....	45
4.1.8 Configure Event Triggered Recording .....	45
4.1.9 Configure Alarm Triggered Recording .....	45
4.1.10 Configure Picture Capture .....	46
4.1.11 Configure Holiday Recording .....	46
4.1.12 Configure Redundant Recording and Capture .....	47
4.2 Playback .....	48
4.2.1 Instant Playback .....	48
4.2.2 Play Normal Video .....	49
4.2.3 Play Smart Searched Video .....	50
4.2.4 Play Custom Searched Files .....	50
4.2.5 Play Tag Files .....	51
4.2.6 Play by Sub-periods .....	52
4.2.7 Play Log Files .....	52
4.2.8 Play External Files .....	53
4.3 Playback Operations .....	53
4.3.1 View Playback Error Information .....	53
4.3.2 Set Play Strategy in Important/Custom Mode .....	53
4.3.3 Edit Video Clips .....	54
4.3.4 Switch between Main Stream and Sub-Stream .....	54
4.3.5 Switch Audio Source .....	54
4.3.6 Thumbnails View .....	55

4.3.7 Fisheye View .....	55
4.3.8 Fast View .....	56
4.3.9 Digital Zoom .....	56
4.3.10 POS Information Overlay .....	57
<b>Chapter 5 Picture Capture .....</b>	<b>58</b>
5.1 Configure Parameters .....	58
5.2 Configure Capture Schedule .....	58
5.3 Configure Holiday Capture Schedule .....	58
<b>Chapter 6 Event .....</b>	<b>60</b>
6.1 Normal Event Alarm .....	60
6.1.1 Configure Motion Detection Alarms .....	60
6.1.2 Configure Video Loss Alarms .....	60
6.1.3 Configure Video Tampering Alarms .....	61
6.1.4 Configure Sensor Alarms .....	61
6.1.5 Configure Exceptions Alarms .....	61
6.1.6 Configure Combined Alarm .....	62
6.2 VCA Event Alarm .....	63
6.2.1 Temperature Screening .....	63
6.2.2 Transparent Transmission .....	64
6.2.3 Hard Hat Detection .....	65
6.2.4 People Gathering Detection .....	65
6.2.5 Fast Moving Detection .....	66
6.2.6 Parking Detection .....	67
6.2.7 Unattended Baggage Detection .....	68
6.2.8 Object Removal Detection .....	69
6.2.9 Audio Exception Detection .....	70
6.2.10 Defocus Detection .....	71
6.2.11 Sudden Scene Change Detection .....	72

6.2.12 PIR Alarm .....	73
6.2.13 Thermal Camera Detection .....	74
6.2.14 Queue Management .....	75
6.3 Configure Arming Schedule .....	75
6.4 Configure Linkage Actions .....	76
6.4.1 Configure Auto-Switch Full Screen Monitoring .....	76
6.4.2 Configure Buzzer .....	77
6.4.3 Notify Surveillance Center .....	77
6.4.4 Configure Email Linkage .....	77
6.4.5 Configure Audio Alert .....	78
6.4.6 Trigger Alarm Output .....	78
6.4.7 Configure Audio and Light Alarm Linkage .....	78
6.4.8 Configure PTZ Linkage .....	79
<b>Chapter 7 Smart Analysis .....</b>	<b>80</b>
7.1 Engine Configuration .....	80
7.2 Task Configuration .....	81
7.3 Self-Learning .....	82
7.3.1 Training Task .....	82
7.3.2 Algorithm Management .....	83
7.4 Face Picture Comparison .....	83
7.4.1 Face Grading Configuration .....	83
7.4.2 Face Capture .....	84
7.4.3 Face Picture Library Management .....	85
7.4.4 Face Picture Comparison Alarm .....	86
7.4.5 People Frequency Alarm .....	90
7.4.6 Face Picture Search .....	93
7.5 Perimeter Protection .....	96
7.5.1 Line Crossing Detection .....	96

7.5.2 Intrusion Detection .....	98
7.5.3 Region Entrance Detection .....	100
7.5.4 Region Exiting Detection .....	101
7.6 Human Body Detection .....	103
7.6.1 Human Body Detection .....	103
7.6.2 Human Body Search .....	104
7.7 Multi-Target-Type Detection .....	106
7.8 Vehicle Detection .....	107
7.8.1 Configure Vehicle Detection .....	107
7.8.2 Vehicle Search .....	108
7.9 Object Thrown from Building .....	108
7.10 Face Counting .....	111
7.11 Target Detection .....	113
7.12 People Counting .....	113
7.13 Heat Map .....	114
<b>Chapter 8 IoT .....</b>	<b>116</b>
8.1 Add an IoT Device .....	116
8.1.1 Add an Access Control Device .....	116
8.1.2 Add an Alarm Device .....	117
8.1.3 Add Network Audio Device .....	119
8.2 Configure the Linkage Action and Arming Schedule .....	119
8.3 Configure OSD .....	120
8.4 Configure Audio Parameters .....	121
8.5 Search the IoT Record .....	122
8.6 IoT Video/Picture .....	123
8.6.1 Configure the Event Recording/Capturing .....	124
8.6.2 Search IoT Video .....	125
<b>Chapter 9 File Management .....</b>	<b>127</b>

9.1 Search Files .....	127
9.2 Export Files .....	127
9.3 Quick Backup .....	128
9.4 Smart Search .....	128
<b>Chapter 10 Storage .....</b>	<b>129</b>
10.1 Storage Device Management .....	129
10.1.1 SSD Management .....	129
10.1.2 Manage Local HDD .....	130
10.1.3 Add a Network Disk .....	132
10.1.4 Configure Cloud Storage .....	133
10.1.5 Manage eSATA .....	134
10.1.6 Dynamically Adjust Recording Writing Buffer .....	136
10.2 Disk Array .....	137
10.2.1 Create a Disk Array .....	137
10.2.2 Rebuild an Array .....	139
<b>Chapter 11 Hot Spare Device Backup .....</b>	<b>142</b>
11.1 Set Working Device .....	142
11.2 Set Hot Spare Device .....	142
11.3 Manage Hot Spare System .....	143
<b>Chapter 12 Network Settings .....</b>	<b>145</b>
12.1 Configure DDNS .....	145
12.2 Configure PPPoE .....	145
12.3 Configure Port Mapping (NAT) .....	146
12.4 Configure SNMP .....	147
12.5 Configure Email .....	149
12.6 Configure Port .....	150
12.7 Configure ONVIF .....	151
<b>Chapter 13 POS Configuration .....</b>	<b>153</b>

13.1 Configure POS Connection .....	153
13.2 Configure POS Text Overlay .....	156
13.3 Configure POS Alarm .....	157
<b>Chapter 14 User Management and Security .....</b>	<b>159</b>
14.1 Manage User Accounts .....	159
14.1.1 Add a User .....	159
14.1.2 Edit the Admin User .....	160
14.1.3 Edit an Operator/Guest User .....	161
14.2 Manage User Permissions .....	161
14.2.1 Set User Permissions .....	161
14.2.2 Set Live View Permission on Lock Screen .....	164
14.2.3 Set Double Verification Permission for Non-admin Users .....	165
14.3 Configure Password Security .....	165
14.3.1 Export GUID File .....	165
14.3.2 Configure Security Questions .....	166
14.3.3 Configure Reserved Email .....	167
14.4 Reset Password .....	168
14.4.1 Reset Password by GUID .....	168
14.4.2 Reset Password by Security Questions .....	169
14.4.3 Reset Password by Reserved Email .....	169
14.4.4 Reset Password by Hik-Connect .....	170
<b>Chapter 15 System Management .....</b>	<b>171</b>
15.1 Configure Device .....	171
15.2 Configure Time .....	171
15.2.1 Manual Time Synchronization .....	171
15.2.2 NTP Synchronization .....	172
15.2.3 DST Synchronization .....	172
15.3 Audio Management .....	173

15.4 Configure Enhanced SVC Mode .....	173
15.5 Network Detection .....	173
15.5.1 Network Traffic Monitoring .....	173
15.5.2 Test Network Delay and Packet Loss .....	174
15.5.3 Export Network Packet .....	175
15.5.4 Network Resource Statistics .....	175
15.6 Storage Device Maintenance .....	176
15.6.1 Bad Sector Detection .....	176
15.6.2 S.M.A.R.T. Detection .....	176
15.6.3 HDD Health Detection .....	177
15.6.4 Configure Disk Clone .....	178
15.6.5 Repair Database .....	179
15.7 Upgrade Device .....	179
15.7.1 Upgrade by Local Backup Device .....	179
15.7.2 Upgrade by FTP .....	180
15.7.3 Upgrade by Web Browser .....	180
15.7.4 Upgrade by Hik-Connect .....	181
15.8 Import/Export Device Configuration Files .....	181
15.9 Log Management .....	182
15.9.1 Log Storage .....	182
15.9.2 Search & Export Log Files .....	182
15.9.3 Upload Logs to the Server .....	183
15.9.4 One-Way Authentication .....	184
15.9.5 Two-Way Authentication .....	185
15.10 Export Diagnostic Information .....	186
15.11 Restore Default Settings .....	186
15.12 Schedule Reboot .....	187
15.13 Security Management .....	187

15.13.1 Configure ONVIF .....	187
15.13.2 IP/MAC Address Filter .....	187
15.13.3 RTSP Authentication .....	188
15.13.4 ISAPI Service .....	189
15.13.5 HTTP Authentication .....	189
15.13.6 IP Camera Occupation Detection .....	189
<b>Chapter 16 Appendix .....</b>	<b>190</b>
16.1 Glossary .....	190
16.2 Communication Matrix .....	191
16.3 Device Command .....	191
16.4 Frequently Asked Questions .....	192
16.4.1 Why is there a part of channels displaying “No Resource” or turning black screen in multi-screen live view? .....	192
16.4.2 Why is the video recorder notifying the stream type is not supported? .....	192
16.4.3 Why is the video recorder notifying risky password after a network camera is added? .....	193
16.4.4 How to improve the playback image quality? .....	193
16.4.5 How to confirm the video recorder is using H.265 to record video? .....	193
16.4.6 Why is the timeline at playback not constant? .....	193
16.4.7 Why is the video recorder notifying the network is unreachable when a network camera is being added? .....	194
16.4.8 Why is the IP address of network camera being changed automatically? .....	194
16.4.9 Why is the video recorder notifying IP conflict? .....	194
16.4.10 Why is image getting stuck when playing back by single or multi-channel cameras? .....	195
16.4.11 Why does my video recorder make a beeping sound after booting? .....	195
16.4.12 Why is there no recorded video after the motion detection is set? .....	195
16.4.13 Why is the video sound quality not good? .....	196

# Chapter 1 Basic Operation

## 1.1 Activate Your Device

### 1.1.1 Default User and IP Address

- Default administrator account: admin.
- Default IPv4 address: 192.168.1.64.

### 1.1.2 Activate via Local Menu

For the first-time access, you have to set an admin password to activate your device. No operation is allowed before activation. You can also activate the device via web browser, SADP or client software.

#### Steps

1. Enter the admin password twice.

The screenshot displays a local menu for device activation. At the top, there is a text input field containing 'admin'. Below it is a button labeled 'Create New Password'. A horizontal separator line follows. Underneath is another text input field labeled 'Confirm New Password'. Below that is a checkbox labeled 'Export GUID' with a help icon (a circle containing a question mark) to its right. At the bottom of the form is a text input field labeled 'Create Channel Default Password'. A note below the form states: 'Note:Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.' Below the note is an 'OK' button. At the very bottom of the screen, there is a small line of text: 'Please respect other people's privacy and rights when using product.'

Figure 1-1 Activate via Local Menu



## Warning

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

---

2. Enter a password to activate network cameras that are connected to the device.
  3. Click **OK**.
- 



## Note

After the device is activated, you should properly keep the password.

---

### What to do next

Follow the wizard to set basic parameters.

- There are methods to reset your password when you forget. You have to configure at least one password resetting method after activation.
- For Hik-Connect configuration, refer to ***Configure Hik-Connect*** for details.

### 1.1.3 Activate via SADP


SADP software is used for detecting the online device, activating the device, and resetting its password.

#### Before You Start

Get the SADP software from the supplied disk or the official website, and install the SADP according to the prompts.

#### Steps

1. Connect your video recorder power supply to an electrical outlet and turn on it.
2. Run the SADP software to search the online recorders.
3. Check the recorder status from the device list, and select the inactive recorder.

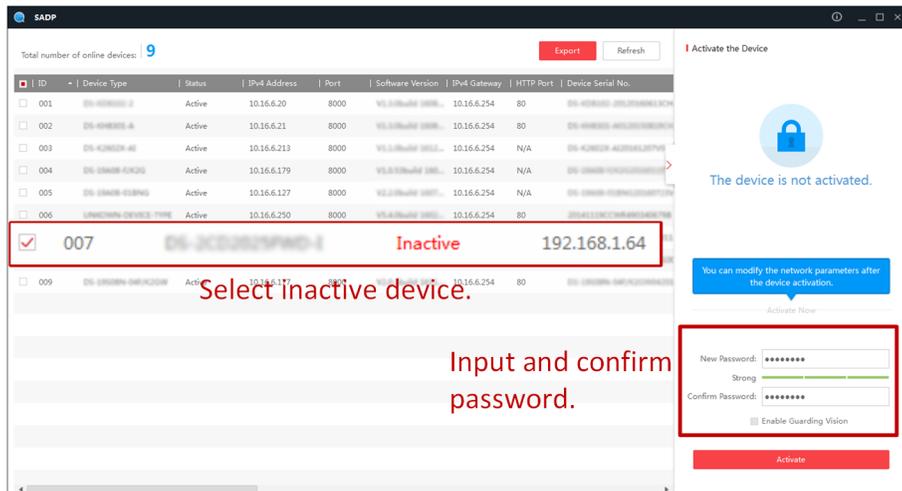

**Figure 1-2 Activate via SADP**

4. Create and input the new password in the password field, and confirm the password.

### Note

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

5. Click **Activate**.

## 1.1.4 Activate via Client Software

The client software is versatile video management software for multiple kinds of devices.

### Before You Start

Get the client software from the supplied disk or the official website, and install the software according to the prompts.

### Steps

1. Run the client software and the control panel of the software pops up, as shown below.

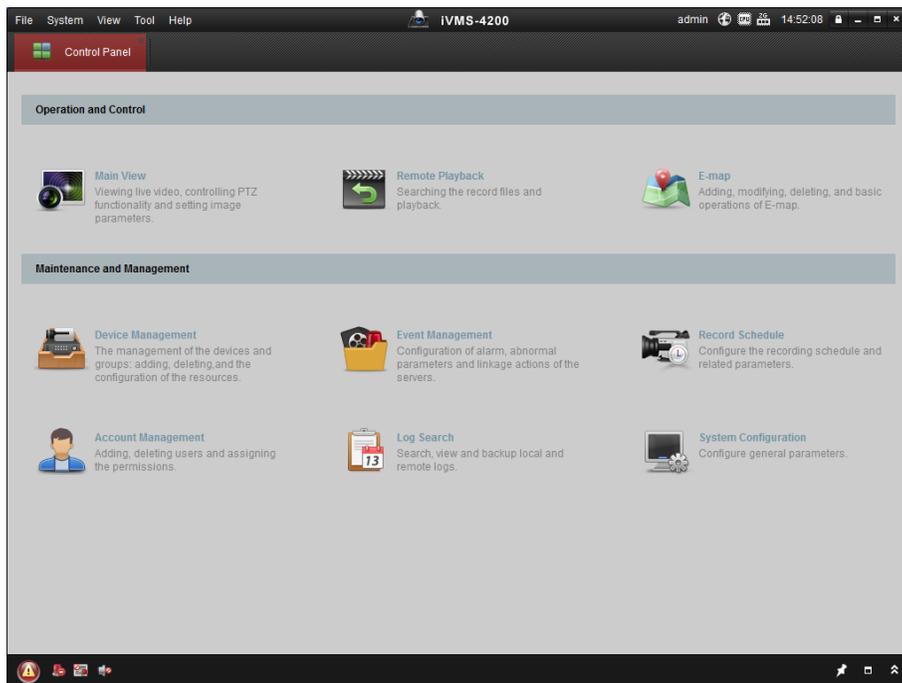


Figure 1-3 Control Panel

2. Click **Device Management** to enter the Device Management interface, as shown below.

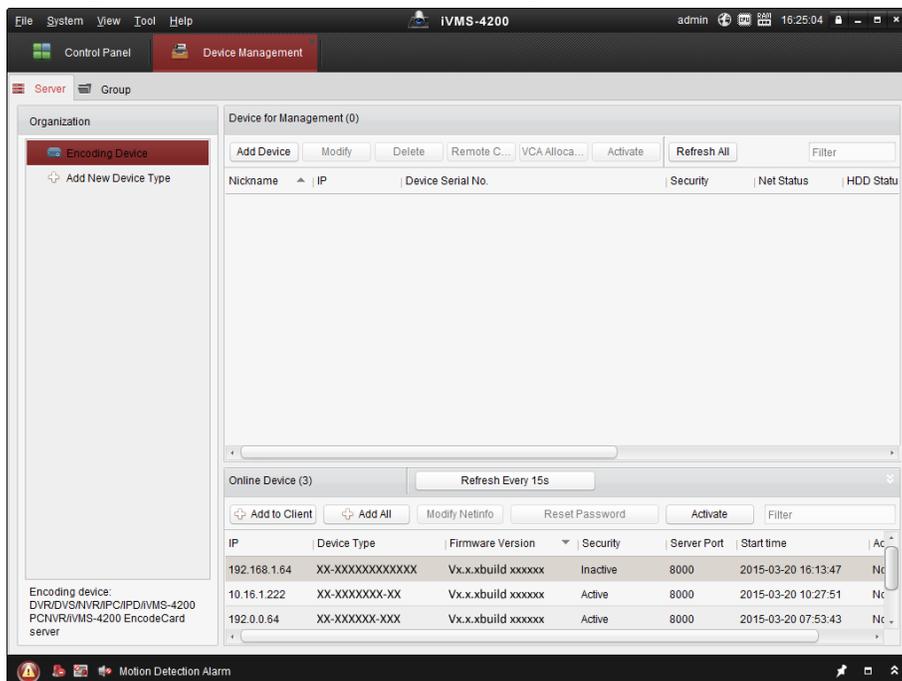



Figure 1-4 Device Management Interface

3. Check the recorder status from the device list, and select an inactive recorder.
4. Click **Activate** to pop up the Activation interface.
5. Create a password and input the password in the password field, and confirm the password.

 **Note**

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.


---

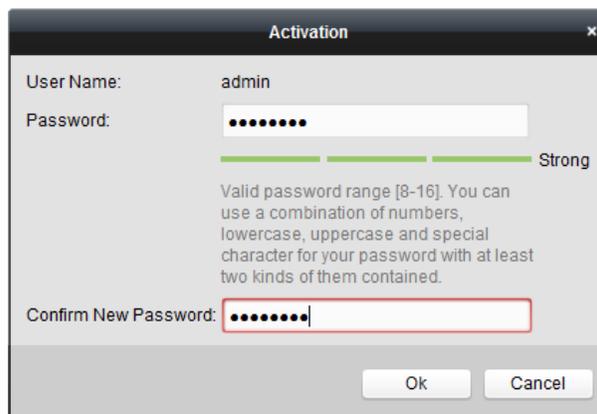

**Figure 1-5 Activation**

6. Click **OK** to start activation.

7. Click **Modify Netinfo** to pop up the Network Parameter Modification interface, as shown below.

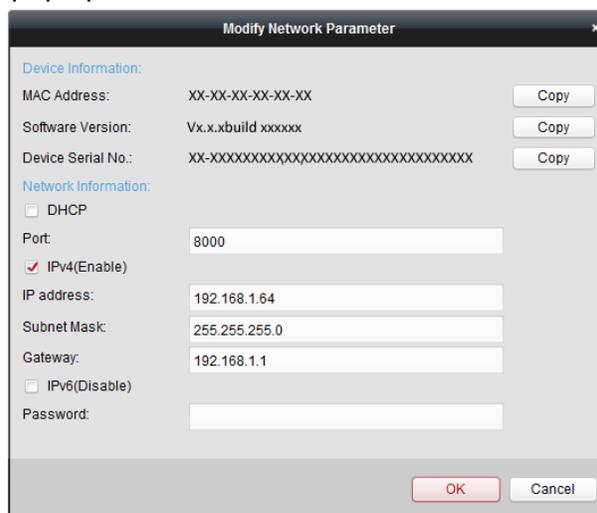

**Figure 1-6 Modify Network Parameters**

8. Change the recorder IP address to the same subnet with your computer.

- Modify the IP address manually.
- Check **Enable DHCP**.


9. Input the password to activate your IP address modification.

## 1.1.5 Activate via Web Browser

You can get access to the recorder via web browser. You may use one of the following web browsers: Internet Explorer 6.0 and above, Apple Safari, Mozilla Firefox, and Google Chrome. The supported resolutions include 1024 × 768 and above.

### Steps

1. Enter the IP address in web browser, and then press **Enter**. The default IP address is 192.168.1.64.

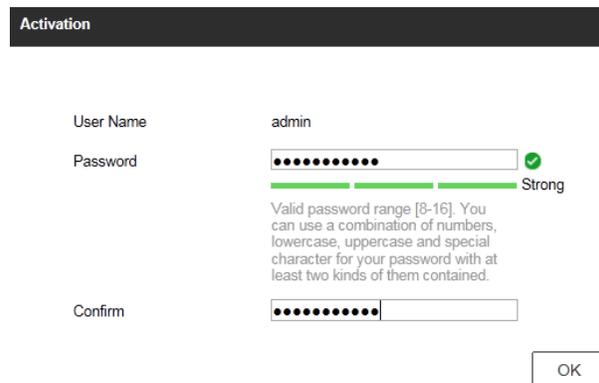

Activation

User Name admin

Password   Strong

Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.

Confirm

OK

**Figure 1-7 Web Browser Activation**

2. Set the password for the admin user account.

---

### Note

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

3. Click **OK**.

## 1.2 Configure TCP/IP

TCP/IP must be properly configured before operating your device over a network. Both IPv4 and IPv6 are available.

### Steps

1. Go to **System** → **Network** → **TCP/IP** .

The screenshot displays the TCP/IP configuration interface. At the top, 'Working Mode' is set to 'Net Fault-Tolerance', 'Select NIC' is 'bond0', and 'NIC Type' is '10M/100M/1000M Self-adaptiv'. The 'IPv4' tab is active, showing 'Enable DHCP' as an unchecked checkbox. Below it are input fields for 'IPv4 Address', 'IPv4 Subnet Mask', and 'IPv4 Default Gateway'. To the right, 'Enable Obtain DNS Se...' is also unchecked, with 'Preferred DNS Server' and 'Alternate DNS Server' input fields below it. At the bottom of the IPv4 section, there are fields for 'MAC Address', 'MTU(Bytes)' (set to 1500), and 'Main NIC' (set to LAN1). A note next to the MTU field states: 'If MTU is less than 1280, IPv6 related functions will be unavailable.' An 'Apply' button is located at the bottom left of the configuration area.

**Figure 1-8 TCP/IP Settings**

**2. Select Working Mode as Net-Fault Tolerance or Multi-Address Mode.**

**Net-Fault Tolerance**

The two NIC cards use the same IP address, and you can select the main NIC to LAN1 or LAN2. In this way, in case of one NIC card failure, the device will automatically enable another standby NIC card so as to ensure the normal running of the system.

**Multi-Address Mode**

The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 under Select NIC for parameter settings. Select one NIC card as the default route. When the system connects with the extranet, the data will be forwarded through the default route.

- 3.** Click **IPv4** or **IPv6** as you required.
- 4. Optional:** Check **Enable DHCP** to obtain IP settings automatically if a DHCP server is available on the network.
- 5.** Set related parameters.

---

 **Note**

Valid MTU value range is from 500 to 1500.

---

- 6.** Click **Apply**.

## 1.3 Configure HDD

Ensure the video recorder storage media is well. You can install at least one HDD and initialize it, or create a RAID and initialize it.

## 1.4 Add Network Camera


Before you can get live video or record the video files, you must add the network cameras to the connection list of the device.

### Before You Start

Ensure the network connection is valid and correct and the IP camera to add has been activated.

### Steps

1. Click  on the main menu bar.
2. Click **Custom Add** tab on the title bar.

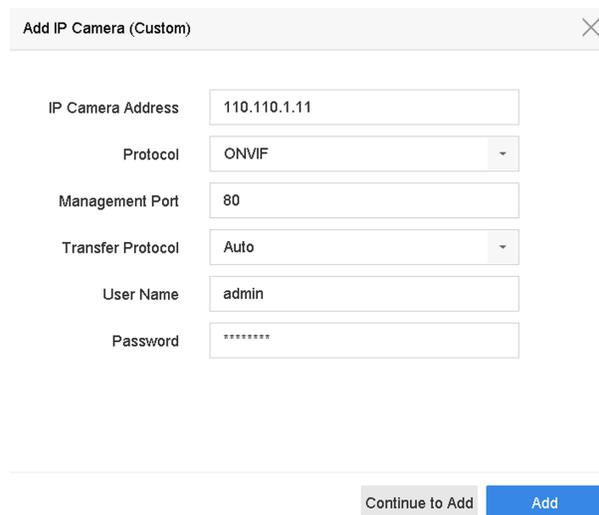

IP Camera Address	110.110.1.11
Protocol	ONVIF
Management Port	80
Transfer Protocol	Auto
User Name	admin
Password	*****

Continue to Add   Add


**Figure 1-9 Add IP Camera**

3. Enter IP address, protocol, management port, and other IP camera information to add.
4. Enter the login user name and password of the IP camera.
5. Click **Add** to finish the adding of the IP camera.
6. **Optional:** Click **Continue to Add** to continue to add additional IP cameras.

### 1.4.1 Add Automatically Searched Online Network Camera

#### Steps

1. Click  on the main menu.
2. Click **Number of Unadded Online Device** at the bottom.
3. Select the automatically searched online network cameras.
4. Click **Add** to add the camera which has the same login password with the video recorder.

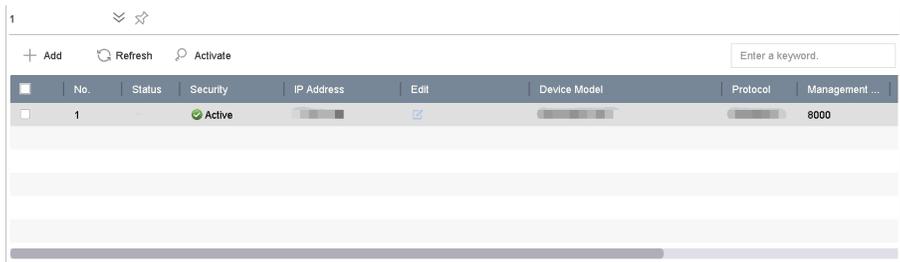

**Figure 1-10 Add Automatically Searched Online Network Camera**

## Note

If the network camera to add has not been activated, you can activate it in the network camera list of camera management interface.

## 1.4.2 Add Network Camera Manually

Before you view live video or record video files, you must add network cameras to the device.

### Before You Start

Ensure the network connection is valid and correct, and the network camera is activated.

### Steps

1. Click on the main menu.
2. Click **Custom Add**.
3. Set the parameters. For example, **IP Camera Address**, **Protocol**, etc.

## Note

Management port ranges from 1 to 65535.

Add IP Camera (Custom)

No.	Sta...	Security	IP Address	Device Model

IP Camera Address:

Protocol: HIKVISION

Management Port: 8000

Transfer Protocol: Auto

User Name: admin

Password:

Use Channel Defaul...

Enable IP Camera T...

Use Default Port

Verify Certificate

Search Continue to Add **Add**

**Figure 1-11 Add Network Camera**

4. **Optional:** Check **Use Channel Default Password** to use the default password to add the camera.

- 5. Optional:** Check **Enable IP Camera Time Sync** to synchronize the time of the connected IP camera automatically. For details, refer to [IP Camera Time Sync](#) .
- 6. Optional:** Check **Use Default Port** to use the default management port to add the camera. For SDK service, the default port value is 8000. For enhanced SDK service, the default value is 8443.

---

 **Note**

The function is only available when you use HIKVISION protocol.

- 7. Optional:** Check **Verify Certificate** to verify the camera with certificate. The certificate is a form of identification for the camera that provides more secure camera authentication. It requires to import the network camera certificate to the device first when you use this function. For details, refer to [Import Network Camera Certificate](#) .

---

 **Note**

The enhanced SDK service is only available when you use HIKVISION protocol.

- 8. Optional:** Click **Search** to search other network cameras.
- 9. Optional:** Click **Continue to Add** to add other network cameras.
- 10.** Click **Add**.

### 1.4.3 Add Network Camera Through PoE

The PoE interfaces enable the device system to pass electrical power safely, along with data, on Ethernet cabling to the connected PoE cameras. Supported PoE camera number varies with device module. If you disable the PoE interface, you can also connect to the online network cameras. And the PoE interface supports the Plug-and-Play function.

## Add PoE Camera

### Steps

- Go to **Camera → Camera → PoE Settings** .
- Enable or disable long network cable mode by selecting **Long Distance** or **Short Distance**.

#### Long Distance

Long-distance (100 to 300 meters) network transmissions via PoE interface.

#### Short Distance

Short-distance (< 100 meters) network transmission via PoE interface.

---

 **Note**

- The PoE ports are enabled with the short distance mode by default.
- The bandwidth of IP camera connected to the PoE via long network cable (100 to 300 meters) cannot exceed 6 MP.
- The allowed max. long network cable may be less than 300 meters depending on different IP camera models and cable materials.

- When the transmission distance reaches 100 to 250 meters, you must use the CAT5E or CAT6 network cable to connect with the PoE interface.
- When the transmission distance reaches 250 to 300 meters, you must use the CAT6 network cable to connect with the PoE interface.

Channel	<input type="radio"/> Long Distance	<input type="radio"/> Short Distance	Channel Status	Actual Power
D1	<input checked="" type="radio"/>	<input type="radio"/>	Disconnected	0.0W
D2	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D5	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D6	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D7	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D8	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D9	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D10	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D11	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D12	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D13	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D14	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D15	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W
D16	<input type="radio"/>	<input checked="" type="radio"/>	Disconnected	0.0W

Actual power: 0.0W. Remaining power: 200.0W. 0%

Apply

**Figure 1-12 Add PoE Camera**

3. Click **Apply**.
4. Connect PoE cameras to device PoE ports with network cables.
5. Go to **Camera → Camera → IP Camera** to view camera image and information.

## Add Non-PoE Network Camera

You can disable the PoE interface by selecting the manual while the current channel can be used as a normal channel and the parameters can also be edited.

### Steps

1. Go to **Camera → Camera → IP Camera** .
2. Position the cursor on a window with no linked network camera and click  .

IP Camera No	D1
Adding Method	Manual
IP Camera Address	192.168.254.2
Protocol	HIKVISION
Management Port	8000
Channel Port	1
Transfer Protocol	Auto
User Name	admin
Password	

**Figure 1-13 Edit Network Camera**

**3. Select Adding Method as Manual.**

**Plug-and-Play**

The camera is physically connected to the PoE interface. Its parameters cannot be edited. You can go to **System → Network → TCP/IP** to change IP address of PoE port.

**Manual**

Add IP camera without physical connection via network.

**4. Enter IP address, User Name, and Password.**

**5. Click OK.**

## 1.4.4 Add Network Camera via Customized Protocol

For network cameras that are not using standard protocols, you can configure customized protocols to add them. The system provides 8 customized protocols.

**Steps**

**1.** Click  on the main menu.

**2.** Go to **More Settings → Protocol**.

## Note



### 3. Set protocol parameters.

#### Type

The network camera adopting custom protocol must support getting stream through standard RTSP.

#### Path

Contact the manufacturer of network camera for the URL (Uniform Resource Locator) of getting main stream and sub-stream.

## Note

The protocol type and the transfer protocol must be supported by the network camera to add.

4. Click **OK**.
5. Click **Custom Add** to add cameras.
6. Set the parameters.
7. Click **OK**.

## 1.5 Connect to Platform

### 1.5.1 Configure ISUP

SDK is based on Intelligent Security Uplink Protocol (ISUP). It provides APIs, library files, and commands for the third-party platform to access devices such as NVRs, speed domes, DVRs, network cameras, mobile NVRs, mobile devices, decoding devices, etc. With this protocol, the third-party platform can realize functions like live view, playback, two-way audio, PTZ control, etc.

#### Steps

1. Go to **System** → **Network** → **Advanced** → **Platform Access** .

Access Type	ISUP
Enable	<input checked="" type="checkbox"/>
Server Address	
Server Port	7660
Registration Status	Offline
Device ID	720251740
Version	ISUP5.0
Encryption Password	*****

**Figure 1-14 ISUP Settings**

2. Select **Access Type** as **ISUP**.
3. Check **Enable**.



### Note

Enabling ISUP will disable other platform access.

4. Set the related parameters.

#### Server Address

The platform server IP address.

#### Server Port

The platform server port, ranges from 1024 to 65535. The actual port shall be provided by the platform.

#### Device ID

Device ID shall be provided by the platform.

#### Version

ISUP protocol version, only V5.0 is available.

#### Encryption Password

Encryption password is required when using ISUP V5.0 version, it provides more secure communication between the device and platform. Enter it for verification after the device is registered to the ISUP platform. It cannot be empty, or "ABCDEF".

5. Click **Apply** to save the settings and restart the device.

#### What to do next

You can see the registration status (online or offline) after the device is restarted.

## 1.5.2 Configure Hik-Connect

Hik-Connect provides mobile phone application and platform service to access and manage your video recorder, which enables you to get a convenient remote access to the video security system.

### Steps

1. Go to **System** → **Network** → **Advanced** → **Platform Access** .
2. Check **Enable** to activate the function. Then the service terms will pop up.
  - 1) Enter **Verification Code**.
  - 2) Scan the QR code to read the service terms and privacy statement.
  - 3) Check **The Hik-Connect service will require Internet access. Please read Service Terms and Privacy Statement before enabling the service.** if you agree with the service terms and privacy statement.
  - 4) Click **OK**.

---

### Note

- Hik-Connect is disabled by default.
  - The verification code is empty by default. It must contain 6 to 12 letters or numbers, and it is case sensitive.
- 
3. **Optional:** Configure following parameters.
    - Check **Custom** and enter **Server Address** as your desire.
    - Check **Enable Stream Encryption**, then verification code is required for remote access and live view.
    - Check **Time Sync**, and the device will sync time with Hik-Connect instead of NTP server.
  4. Bind your device with a Hik-Connect account.
    - 1) Use a smart phone to scan the QR code, and download Hik-Connect app. You can also download it from <https://appstore.hikvision.com> , or the QR code below. Refer to *Hik-Connect Mobile Client User Manual* for details.



Figure 1-15 Download Hik-Connect

- 2) Use Hik-Connect to scan the device QR, and bind the device.

---

 **Note**

If the device is already bound with an account, you can click **Unbind** to unbind with the current account.

---

5. Click **Apply**.

**What to do next**

You can access your video recorder via Hik-Connect.

## Chapter 2 Camera Settings

### 2.1 View Camera Error Information

Camera error information of each channel can be accessed.

If exception occurs, camera error information of individual channel(s) will be provided on the screen. Go to **Camera → IP Camera** , move the cursor to a window, and click  to edit the parameters of different channel(s).

### 2.2 Configure Image Parameters

You can customize image parameters, including day/night switch, backlight, contrast, and saturation in **Camera → Display** .

#### Image Settings

Customize the image parameters including brightness, contrast, and saturation.

#### Exposure

Set the camera exposure time (1/10000 to 1 sec). A larger exposure value results in a brighter image.

#### Day/Night Switch

Set the camera to day, night, or auto switch mode according to time or the surrounding illumination condition. When the light diminishes at night, the camera can switch to night mode with high quality black and white image.

#### Backlight

Set the camera's wide dynamic range (0 to 100). When the surrounding illumination and the object have large differences in brightness, you can set the WDR value to balance the brightness level of the whole image.

#### Image Enhancement

For optimized image contrast enhancement that reduces noise in video stream.


### 2.3 Configure OSD

You can configure the OSD (On-screen Display) for the camera, including date/time, camera name, etc.

#### Steps

1. Go to **Camera → Display** .
2. Select a camera as your desire.
3. Edit name in **Camera Name**.

4. Check **Display Name**, **Display Date** and **Display Week** to show the information on the image.
5. Set the date format, time format, and display mode.

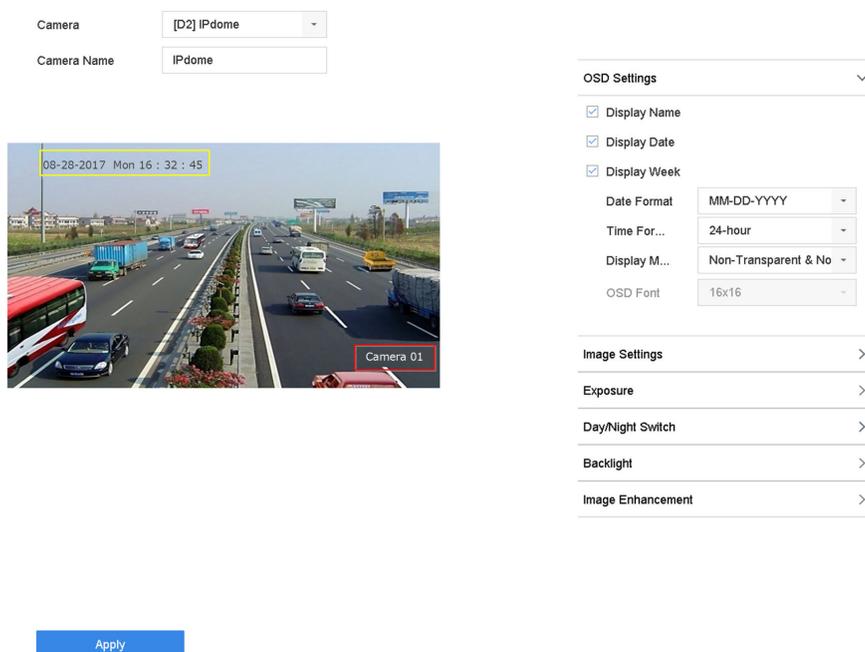

**Figure 2-1 OSD Settings**


6. Drag the text frame on the preview window to adjust the OSD position.
7. Click **Apply**.

## 2.4 Configure Privacy Mask

The privacy mask protects personal privacy by concealing parts of the image from live view or recording with a masked area.

### Steps

1. Go to **Camera → Privacy Mask**.
2. Select a camera to set privacy mask.
3. Check **Enable**.
4. Draw a zone on the window. The zone will be marked by different frame colors.

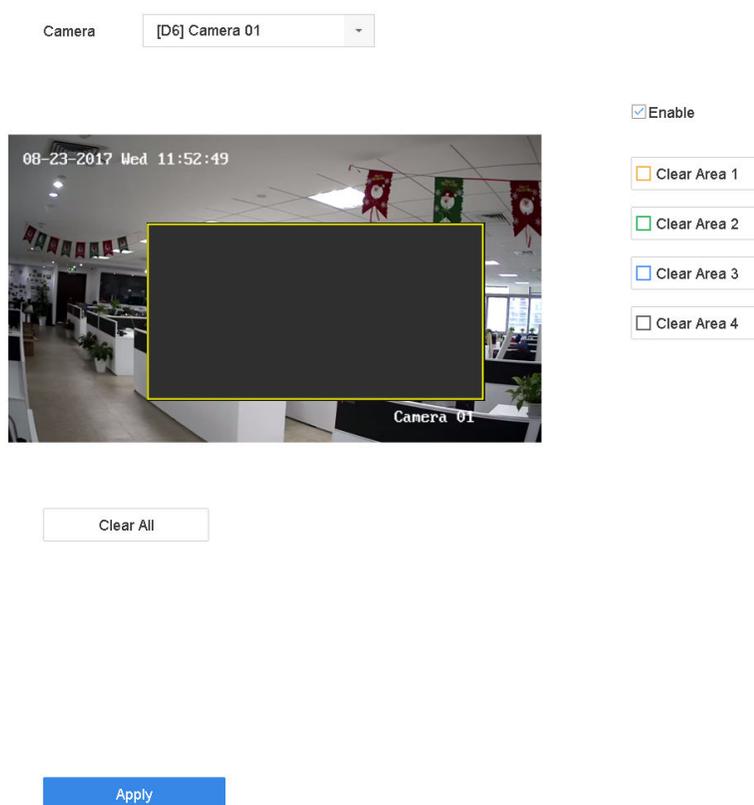

**Figure 2-2 Privacy Mask Settings**

---

**Note**

- Up to 4 privacy masks zones can be configured and the size of each area can be adjusted.
- You can clear the configured privacy mask zones on the window by clicking the corresponding clear zone 1 to 4 icons on the right of the window, or click **Clear All** to clear all zones.

---

5. Click **Apply**.


## 2.5 IP Camera Time Sync

The device can automatically synchronize the time of connected IP camera after enabling this function.

### Steps

1. Go to **Camera → Camera → IP Camera** .
2. Position the cursor on the window of the IP camera and click  .
3. Check **Enable IP Camera Time Sync**.
4. Click **OK**.
5. **Optional:** All IPC channels can be enabled/disabled with shortcuts.
  - 1) Go to **Maintenance → System Service → More Settings** .

- 2) Click **Time Sync Configuration**, select **Enable IPC Time Sync** or **Disable IPC Time Sync** to enable/disable scheduled time sync for all IPC/IoT channels.

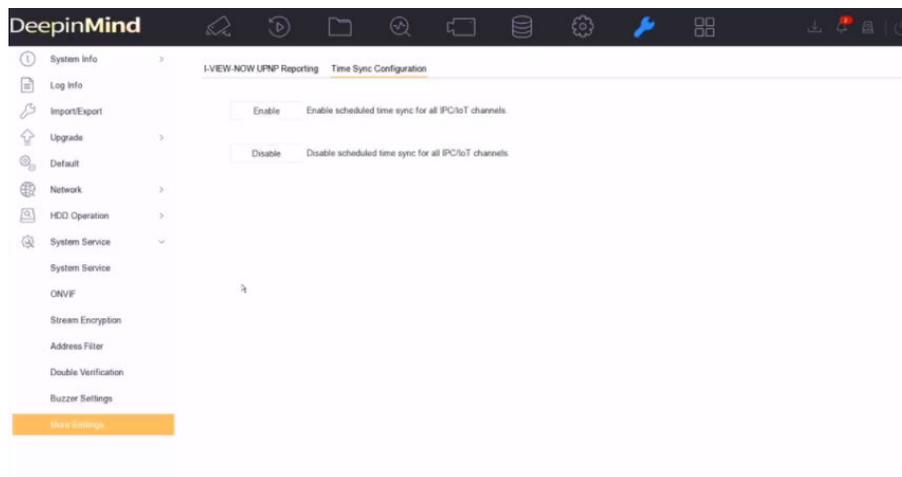

**Figure 2-3 IP Camera Time Sync**



### Note

This function is only available for the admin user.

---

## 2.6 Import Network Camera Certificate

Import the network camera certificate to the video recorder.

### Steps

1. Log in the network camera via web browser.
2. Go to **Configuration** → **Network** → **Advanced Settings** → **HTTPS** on the web browser to export its certificate.
3. Click **Export** at **Export Certificate** to save the certificate.
4. Log in the video recorder by web browser.
5. Go to **Configuration** → **System** → **Security** → **Trusted Root Certification Authorities** → **Import**.
6. Click **Import** to import the network camera certificate.

## 2.7 Import/Export IP Camera Configuration Files

The IP camera information, including the IP address, manage port, password of admin, etc., can be saved in Microsoft Excel format and backed up to the local device. The exported file can be edited on a PC, including adding or deleting the content, and copying the setting to other devices by importing the Excel file to it.

## Before You Start

When importing the configuration file, connect the storage device that contains the configuration file to the device.

## Steps

1. Go to **Camera → IP Camera Import/Export**.
2. Click **IP Camera Import/Export**, and the detected external device contents appear.
3. Export or import the IP camera configuration files.
  - Click **Export** to export the configuration files to the selected local backup device.
  - To import a configuration file, select the file from the selected backup device and click **Import**.



## Note

After the importing process is completed, you must reboot the device to activate the settings.

---

## 2.8 Save Camera VCA Data

After saving camera VCA data to your device, you will be able to search the camera VCA data.

Go to **Storage → Advanced** to enable **Save VCA Data** via local GUI interface.

Go to **Configuration → Video and Audio → Display Info. on Scream** to turn on **Enable Dual-VCA** via web browser.

## 2.9 Upgrade IP Cameras

The IP camera can be upgraded through the device.

## Steps

1. Go to **Camera → Camera → IP Camera → More Settings → Upgrade**.

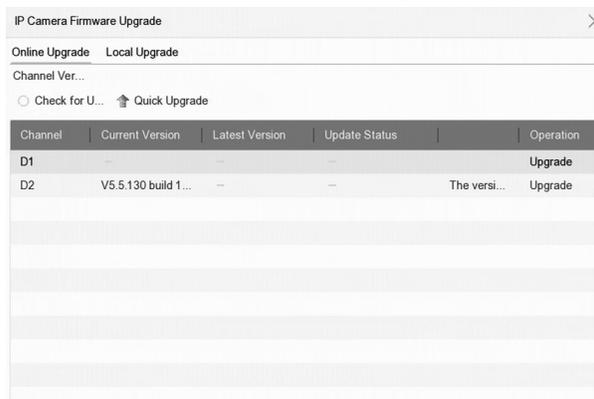


Figure 2-4 Upgrade IP Cameras

2. Select a method to upgrade your camera.

### Online Upgrade

Click **Online Upgrade**, and click **Check for Updates** or **Quick Upgrade** to upgrade your cameras.



Your device shall be properly connected to Hik-Connect.

---

**Local Upgrade**      Inserted a USB flash drive that contains the firmware to your device. Click **Local Upgrade**, and select the camera and firmware file for upgrade.

The IP camera will automatically restart after it is upgraded.

**3. Click Upgrade.**

## Chapter 3 Live View

Live view displays the video image getting from each camera in real time.

### 3.1 Start Live View

Click  on the main menu bar.

- Select a window and double click a camera from the channel list to play the live image of the camera.
- Double click a window to view it in single-screen mode. Double click again to exit single-screen mode.
- Use the toolbar at the playing window bottom to realize the capture, instant playback, audio on/off, digital zoom, live view strategy, show information and start/stop recording, etc.

---

#### Note

- Click  at the lower right corner to stop all-day continuous recordings.
  - If you have added audio device(s) to the recorder, you can move the cursor to  to select an audio source. But this selection is used for live view only, it will not affect the audio recording settings.
- 
- Click  to start/stop auto-switch. The screen will automatically switch to the next one.
  - Single click  to enable VCA information display. Double click  to disable VCA information display.

---

#### Note

Click  at the lower right corner to enable/disable VCA information display for all channels. VCA information of 16 channels (maximum) is available.

- 
- Move the cursor to a window, and right click your mouse to display the shortcut menu of the window. The shortcut menu will be different according to the window.

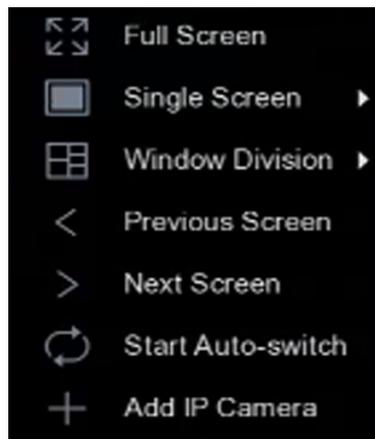


Figure 3-1 Shortcut Menu

---

**Note**

If exception occurs, error information will be displayed on the screen. Click  to edit the parameters of different channel(s).

---

## 3.2 Configure Live View Settings

Live View settings can be customized. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

### Steps

1. Go to **System** → **Live View** → **General** .

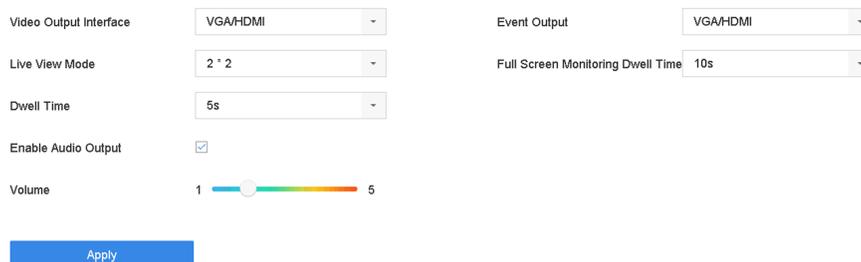


Figure 3-2 Live View-General

2. Configure the live view parameters.

#### Video Output Interface

Select the video output to configure.

#### Live View Mode

Select the display mode for Live View, e.g., 2\*2, 1\*5, etc.

#### Dwell Time

The time in seconds to wait between switching of cameras when using auto-switch in Live View.

### **Enable Audio Output**

Enable/disable audio output for the selected video output.

### **Volume**

Adjust the Live View volume, playback and two-way audio for the selected output interface.

### **Event Output**

Select the output to show event video.

### **Full Screen Monitoring Dwell Time**

Set the time in seconds to show alarm event screen.

3. Click **OK**.

## **3.3 Configure Auto-Switch of Cameras**

You can set the auto-switch of cameras to play in different display modes.

### **Steps**

1. Go to **System** → **Live View** → **General** .
2. Set **Video Output Interface**, **Live View Mode**, and **Dwell Time**.

#### **Video Output Interface**

Select the video output interface.

#### **Live View Mode**

Select the display mode for live view, e.g., 2\*2, 1\*5, etc.

#### **Dwell Time**

The time in seconds to dwell between switching of cameras when enabling auto-switch. The range is from 5s to 300s.

3. Go to **View Settings** to set the view layout.
4. Click **OK** to save the settings.

## **3.4 Configure Live View Layout**


Live view displays the video image getting from each camera in real time.

### **3.4.1 Configure Custom Live View Layout**

#### **Steps**

1. Go to **System** → **Live View** → **View** .
2. Click **Set Custom Layout**.
3. Click  on the Custom Layout Configuration interface.

4. Edit the layout name.
5. Select a window division mode from the toolbar.

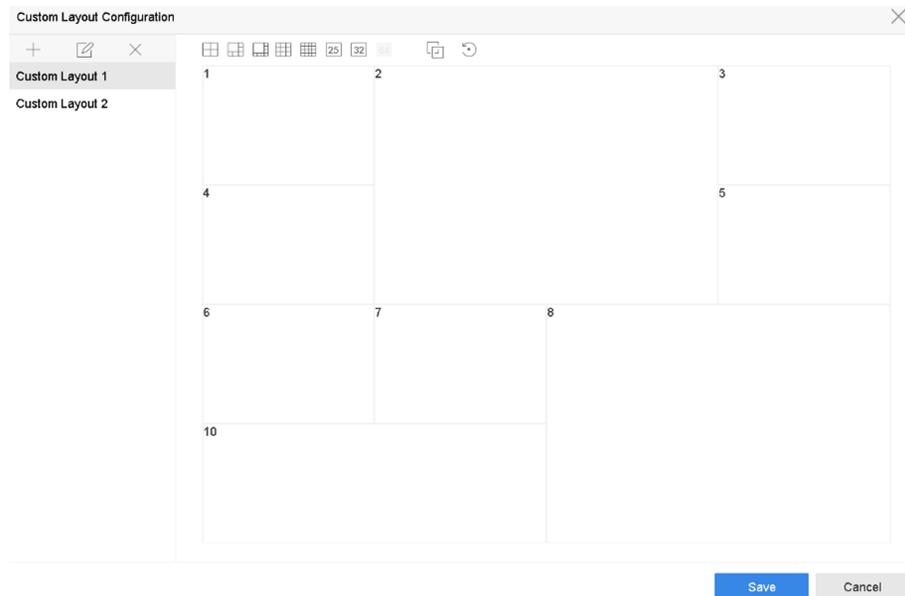

**Figure 3-3 Configure Live View Layout**

6. Select multiple windows and click  to joint the windows. The selected windows must be in rectangle area.
7. Click **Save**.  
The successfully configured layout is displayed in the list.
8. **Optional:** Select a live view layout from the list and click  to edit the name, or click  to delete the name.

## 3.4.2 Configure Live View Mode

### Steps

1. Go to **System** → **Live View** → **View** .
2. Select the video output interface.
3. Select a layout or custom layout from the toolbar.
4. Select a division window, and double-click on a camera in the list to link the camera to the window.

---

### Note

- You can also click-and-drag the camera to the desired window on the Live View interface to set the camera order.
- You can enter the number in the text field to quickly search the camera from the list.

5. Click **Apply**.
6. **Optional:** Click  to start live view for all channels, or click  to stop all live view channels.

## 3.5 Configure Channel-Zero Encoding

Enable the channel-zero encoding when you need to get a remote view of many channels in real time from a web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality.

### Steps

1. Go to **System** → **Live View** → **Channel-Zero** .
2. Check **Enable Channel-Zero Encoding**.

Enable Channel-Zero Encoding

Frame Rate Full Frame

Max. Bitrate Mode General

Max. Bitrate(Kbps) 1792

Apply

**Figure 3-4 Channel-Zero Encoding**

3. Configure **Frame Rate**, **Max. Bitrate Mode**, and **Max. Bitrate**.

---

### Note

The higher frame rate and bitrate require the higher bandwidth.

4. Click **Apply**.

You can view all the channels on one screen via CMS or web browser.

## 3.6 Main and Auxiliary Ports Strategy

There are five video output types: HDMI, VGA, LCD, HDMI2, and CVBS. Priority of video outputs: HDMI > VGA/LCD > HDMI2.

You can click  in Live View mode, or go to **System** → **General** to switch the main/auxiliary port. For iDS-9600NXI-I8/4F(B) series, HDMI1 and VGA are simultaneous output, HDMI1, VGA, HDMI2, CVBS cannot provide video output at the same time. When HDMI1, HDMI2, VGA, and CVBS are all connected, CVBS does not provide video output, the main port is HDMI2, and the aux port is HDMI1 and VGA. You can enable CVBS in **System** → **General** , it requires to switch menu output mode to HTMI2, and disable HDMI1/VGA.

For other series, the following table shows the main and auxiliary ports strategy when video cables for HDMI, HDMI2, and VGA are connected.

### Main port

All operations are available for main port.

## Aux port

You can switch to aux port to do some basic operations, like playback, switching live view image.

## Third port

You can only preview camera image in third port.

**Table 3-1 Main and Auxiliary Ports Strategy**

HDMI/VGA/LCD simultaneous output	Menu output mode	HDMI	HDMI2	VGA/LCD
On	Auto	Main port	Aux port	Main port
Off	Auto	Main port	Aux port	Third port
On	HDMI2	Aux port	Main port	Aux port
Off	HDMI2	Aux port	Main port	Third port
On	HDMI/VGA/LCD	Main port	Aux port	Main port
Off	VGA/LCD	Aux port	Third port	Main port
	HDMI	Main port	Third port	Aux port

## 3.7 Digital Zoom

Digital Zoom zooms into the live image in different magnifications (1x to 16x).

### Steps

1. Start live view.
2. Click  from the toolbar.
3. Move the sliding bar or scroll the mouse wheel to zoom in/out the image to different magnifications (1x to 16x).



Figure 3-5 Digital Zoom

### 3.8 Fisheye View

The device supports the fisheye camera expansion in Live View or playback mode.

#### Before You Start

- The fisheye expansion view feature is supported only by certain models.
- The connected camera must support the fisheye view.

#### Steps

1. Start live view, click  to enter the fisheye expansion mode.
2. Select the expansion view mode.

Table 3-2 Fisheye View Icon Description

Icon	Description	Icon	Description
180° Panorama (  )	Switch the Live View image to the 180° panorama view.	360° Panorama (  )	Switch the Live View image to the 360° panorama view.
PTZ Expansion (  )	The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion. It supports the electronic PTZ function, also called e-PTZ.	Radial Expansion (  )	In radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the

Icon	Description	Icon	Description
			vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

### 3.9 3D Positioning

3D Positioning zooms in/out a specific live image area.

#### Steps

1. Start live view, and click .
2. Zoom in/out the image.
  - Zoom in: Click on the desired position in the video image and drag a rectangle area in the lower right direction to zoom in.
  - Zoom out: Drag a rectangle area in the upper left direction to move the position to the center and enable the rectangle area to zoom out.

### 3.10 Live View Strategy

#### Steps

1. In the live view mode, click  to enter the digital zoom operation interface in full screen mode.
2. Select the live view strategy to **Real-time**, **Balanced** or **Fluency**.

### 3.11 Person Passing

You can view real-time facial recognition and stranger recognition results.

#### Before You Start

Ensure you have configured facial detection and face picture comparison function, refer to ***Face Picture Comparison*** for details.

#### Steps



#### Note

This function is only available for certain models

---


1. Go to live view interface, and click  in toolbar.
2. Click , , or  to set window division.
3. Select a window as you desired.
4. Double click a camera from the camera list on the left bottom.
5. Click **Records** to view the real-time person passing records of selected camera. The records will also be shown in the window on the right. You can view the facial detection number at the top, including the total number, succeeded number and failed number.
6. **Optional:** For the unregistered face picture, you can double click it in records list, and add it to face picture library.

---

## Note

For guest and operator user, it requires Local Parameters Settings permission to add unregistered face picture to face picture library.

---

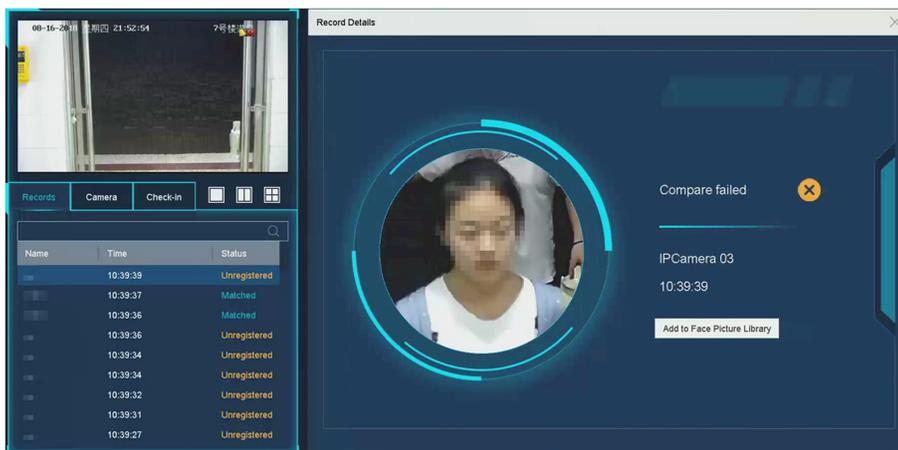

**Figure 3-6 Add Unregistered Face Picture**

7. **Optional:** Click **Check-in** to view face picture library check-in record, including **Total No.**, **Checked In** and **Unchecked In**.
8. **Optional:** Click  on the upper right corner to configure the display settings as you desired.

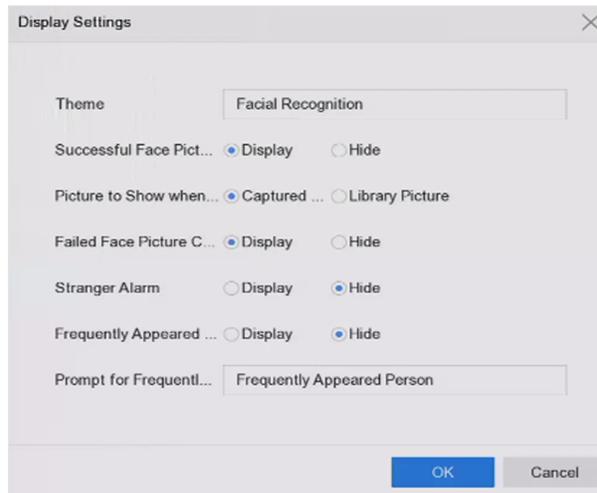


Figure 3-7 Person Passing Display Settings

9. **Optional:** Click  on the upper right corner to search and export record.
- 1) Set the search parameters as you desired.
  - 2) Click **Search**.
  - 3) Click **Export Attendance Record** or **Export Check-in Record**.

### Note

- Ensure you have inserted USB flash drive before export.
- You can click a record to review the attendance information of this individual in calendar.
- For guest and operator user, it requires "Local Video Export permission" (in "Camera Permission") to search and export record.

No.	Name	Library	Tag	Normal (D...	Late (Day)	Leave Earl...	Absence (...)	Checked I...	Unchecke...
1	1	test1		0	1	0	0	1	0
2	2	test1		0	1	0	0	1	0
3	3	test1		0	1	0	0	1	0
4	4	test1		0	1	0	0	1	0
5	5	test1		0	1	0	0	1	0
6	6	test1		0	1	0	0	1	0
7	7	test1		0	1	0	0	1	0
8	8	test1		0	1	0	0	1	0
9	9	test1		0	1	0	0	1	0
10	10	test1		0	1	0	0	1	0
11	11	test1		0	1	0	0	1	0
12	12	test1		0	1	0	0	1	0
13	13	test1		0	1	0	0	1	0
14	14	test1		0	1	0	0	1	0
15	15	test1		0	1	0	0	1	0
16	16	test1		0	1	0	0	1	0
17	17	test1		0	1	0	0	1	0

Figure 3-8 Person Passing Search Record


## 3.12 PTZ Control

### 3.12.1 Configure PTZ Parameters

Follow these procedures to set the PTZ parameters. The PTZ parameters configuration must be done before you can control the PTZ camera.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera.
2. Click **PTZ Parameters Settings** to set the PTZ parameters.

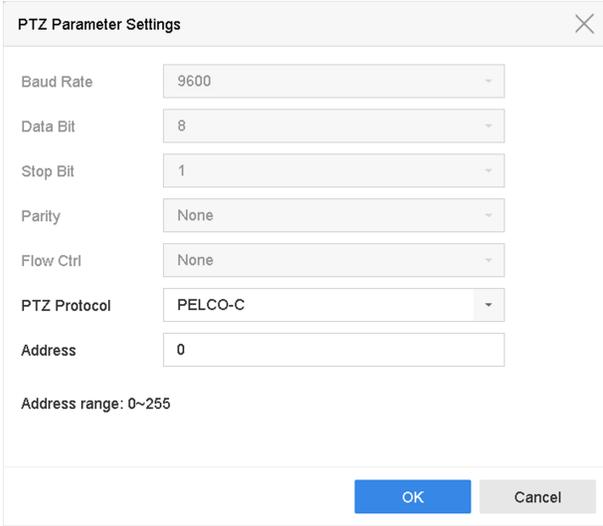

Parameter	Value
Baud Rate	9600
Data Bit	8
Stop Bit	1
Parity	None
Flow Ctrl	None
PTZ Protocol	PELCO-C
Address	0

Address range: 0~255

OK Cancel

**Figure 3-9 PTZ Parameters Settings**

3. Edit the PTZ parameters.

---

#### **Note**

All the parameters should be exactly match the PTZ camera parameters.

4. Click **OK** to save the settings.

### 3.12.2 Set a Preset

Presets record the PTZ position and the status of zoom, focus, iris, etc. You can call a preset to quickly move the camera to the predefined position.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view.
2. Click directional buttons to wheel the camera to a location.
3. Adjust the zoom, focus and iris status.
4. Click  in the lower right corner of Live View to set the preset.



**Figure 3-10 Set Preset**

5. Select the preset No. (1 to 255) from the drop-down list.
6. Enter the preset name.
7. Click **Apply** to save the preset.
8. **Optional:** Click **Cancel** to cancel the location information of the preset.
9. **Optional:** Click  in the lower right corner of Live View to view the configured presets.



**Figure 3-11 View the Configured Presets**

### 3.12.3 Call a Preset

A preset enables the camera to point to a specified position such as a window when an event takes place.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's Live View.
2. Click  in the lower right corner of Live View to set the preset.
3. Select the preset No. from the drop-down list.
4. Click **Call** to call it, or click  in the lower right corner of Live View, and click the configured preset to call it.



**Figure 3-12 Call Preset (1)**



**Figure 3-13 Call Preset (2)**

### 3.12.4 Set a Patrol

Patrols can be set to move the PTZ to key points and have it stay there for a set duration before moving on to the next key point. The key points are correspond to the presets.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view.
2. Click **Patrol** to configure patrol.

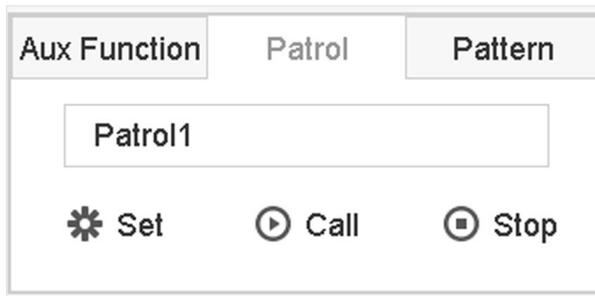


Figure 3-14 Patrol Configuration

- 3. Select the patrol No.
- 4. Click Set.

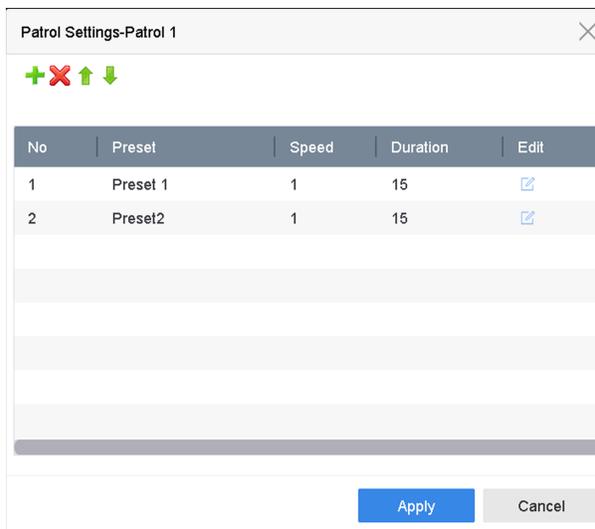


Figure 3-15 Patrol Settings

- 5. Click + to add a key point to the patrol.

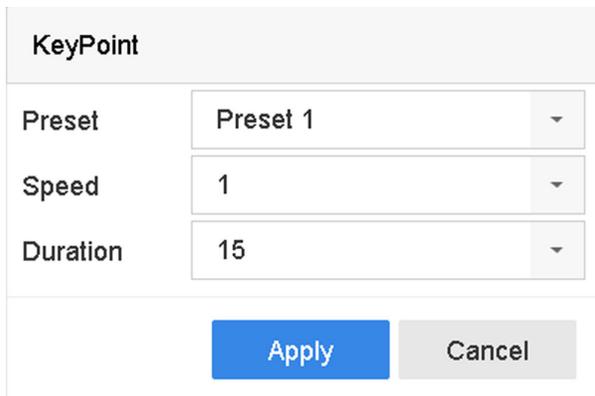


Figure 3-16 Key Point Configuration

- 1) Configure key point parameters.

**Preset**

Determines the order the PTZ will follow while cycling through the patrol.

**Speed**

Defines the speed the PTZ will move from one key point to the next.

**Duration**

Refers to the duration to stay at the corresponding key point.

2) Click **Apply** to save the key points to the patrol.

6. Other operation is as follows.

**Table 3-3 Operation Description**

Operation	Description	Operation	Description
✖	Select a key point to delete.	✍	Edit the added key point.
↑	Adjust the key point order	↓	Adjust the key point order


7. Click **Apply** to save the patrol settings.

### 3.12.5 Call a Patrol

Calling a patrol makes the PTZ move according to the predefined patrol path.

**Steps**

1. Click  on the quick settings toolbar of the PTZ camera's live view.
2. Click **Patrol** on the PTZ control panel.

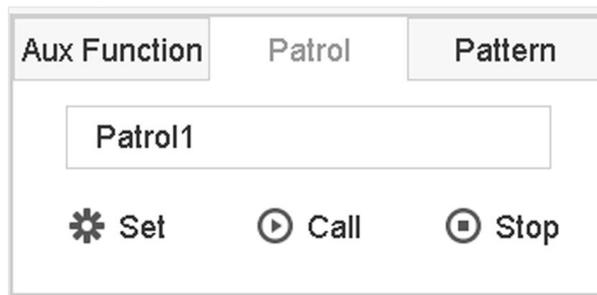

**Figure 3-17 Patrol Configuration**

3. Select a patrol.
4. Click **Call** to start the patrol.
5. **Optional:** Click **Stop** to stop the patrol.

### 3.12.6 Set a Pattern

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ move according to the predefined path.

**Steps**

1. Click  on the quick settings toolbar of the PTZ camera's live view.

2. Click **Pattern** to configure a pattern.



**Figure 3-18 Pattern Configuration**

3. Select the pattern No.

4. Set the pattern.


- 1) Click **Record** to start recording.
- 2) Click corresponding buttons on the control panel to move the PTZ camera.
- 3) Click **Stop** to stop recording. The PTZ movement is recorded as the pattern.

### 3.12.7 Call a Pattern

Follow the procedure to move the PTZ camera according to the predefined patterns.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view.
2. Click **Pattern** to configure pattern.

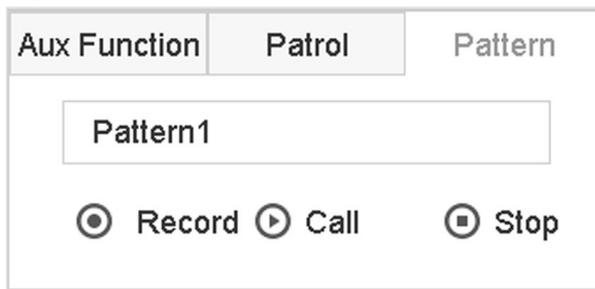

**Figure 3-19 Pattern Configuration**

3. Select a pattern.

4. Click **Call** to start the pattern.

5. **Optional:** Click **Stop** to stop the pattern.

### 3.12.8 Set Linear Scan Limit

Linear Scan trigger a scan in the horizontal direction in the predefined range.

#### Before You Start

Make sure the connected IP camera supports the PTZ function and is properly connected.

---

### Note

This function is supported only by certain models.

---

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view.
  2. Click directional buttons to wheel the camera to a location, and click **Left Limit** or **Right Limit** to link the location to the corresponding limit.
- 

### Note

The speed dome linear scans from the left limit to the right limit, and you must set the left limit on the left side of the right limit. Also, the angle from the left limit to the right limit must be not greater than 180°.

---

### 3.12.9 One-Touch Park

Certain speed dome models can be configured to start a predefined park action (scan, preset, patrol, etc.) automatically after a period of inactivity (park time).

#### Before You Start

Before operating this function, make sure the connected camera supports linear scan and is in HIKVISION protocol.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view.
2. Click **Park (Quick Patrol)**, **Park (Patrol 1)**, or **Park (Preset 1)** to activate the park action.

##### **Park (Quick Patrol)**

The dome starts patrolling from the predefined preset 1 to preset 32 in order after the park time. Undefined presets will be skipped.

##### **Park (Patrol 1)**

The dome starts moving according to the predefined patrol 1 path after the park time.

##### **Park (Preset 1)**

The dome moves to the predefined preset 1 location after the park time.

---

### Note

The park time can be set only via the speed dome configuration interface. The default value is 5s by default.

---

3. **Optional:** Click **Stop Park (Quick Patrol)**, **Stop Park (Patrol 1)**, or **Stop Park (Preset 1)** to inactivate it.
-

### 3.12.10 Auxiliary Functions


You can operate the auxiliary functions including light, wiper, 3D positioning, and center on the PTZ control panel.

#### Before You Start

Make sure the connected IP camera supports the PTZ function, and is properly connected.

#### Steps

1. Click  on the quick settings toolbar of the PTZ camera's live view. The PTZ control panel displays on the right of the interface.
2. Click **Aux Function**.

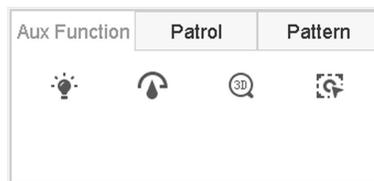

**Figure 3-20 Aux Function Configuration**

3. Click the icons to operate the aux functions. See the table for the icon descriptions.

**Table 3-4 Description of Aux Functions Icons**

Icon	Description
	Light on/off
	Wiper on/off
	3D positioning
	Center

## Chapter 4 Recording and Playback

### 4.1 Recording

#### 4.1.1 Configure Recording Parameters

##### Configure Video Parameters

Go to **Camera** → **Video Parameters** .

##### Main Stream

Main stream refers to the primary stream that affects data recorded to the hard disk drive and will directly determine your recording quality and image size.

Comparing with the sub-stream, the main stream can provide a higher quality video with higher resolution and frame rate.

##### Frame Rate (FPS - Frames per Second)

It refers to the number of frames captured each second. A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

##### Resolution

Image resolution is a measure of how much detail a digital image can hold. The greater the resolution, the greater the level of detail. Resolution can be specified as the number of pixel-columns (width) by the number of pixel-rows (height), e.g., 1024 × 768.

##### Bitrate Type

The bit rate (in kbit/s or Mbit/s) is often referred to as speed, but actually defines the number of bits/time unit rather than distance/time unit. Two types including variable or constant are available.

##### Enable H.265+

H.265+ is an optimized encoding technology based on the standard H.265/HEVC compression. With H.265+, the video quality is almost the same as that of H.265/HEVC but with less transmission bandwidth and storage capacity required.



##### Note

- A higher resolution, frame rate and bit rate setting will offer you better video quality, but it will also require more internet bandwidth and use more storage space on the hard disk drive.
  - H.265+ encoding technology is only available for certain models.
-

## Sub-Stream

Sub-stream is a second code that runs alongside the main stream. It allows you to reduce the outgoing internet bandwidth without sacrificing your direct recording quality.

Sub-stream is often exclusively used by apps to view live video. Users with limited internet speeds may benefit most from this setting.


## Video Quality

Set the video quality as you desire. The higher video quality results in more storage space requirement.

## Configure Advanced Parameters

### Steps

1. Go to **Storage** → **Schedule** → **Record** .
2. Check **Enable Schedule** to enable scheduled recording.
3. Click **Advanced** to set the advanced parameters.

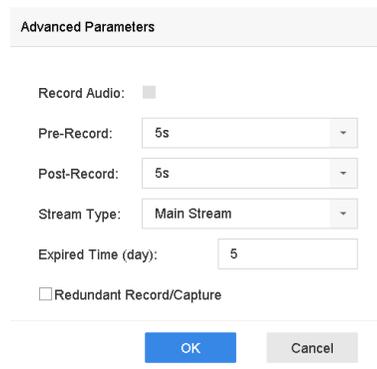

The screenshot shows a dialog box titled "Advanced Parameters". It contains the following settings:

- Record Audio:
- Pre-Record: 5s (dropdown menu)
- Post-Record: 5s (dropdown menu)
- Stream Type: Main Stream (dropdown menu)
- Expired Time (day): 5 (input field)
- Redundant Record/Capture

At the bottom, there are two buttons: "OK" (blue) and "Cancel" (grey).

**Figure 4-1 Advanced Record Settings**

### Record Audio

Enable or disable audio recording.

### Pre-record

The time you set to record before the scheduled time or event. For example, when an alarm triggers the recording at 10:00, and if you set the pre-record time as 5 seconds, the camera records at 9:59:55.

### Post-record

The time you set to record after the event or the scheduled time. For example, when an alarm triggered recording ends at 11:00, and if you set the post-record time as 5 seconds, it records till 11:00:05.

### Stream Type

Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

### Expired Time

The expired time is period for a recorded file to be kept in the HDD. When the deadline is reached, the file will be deleted. If you set the expired time to 0, the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.

### Redundant Record/Capture

By enabling redundant record or capture you save the record and captured picture in the redundant HDD.

### 4.1.2 Enable H.265 Stream Access

The device can automatically switch to the H.265 stream of IP camera (which supports H.265 video format) for the initial access.

Go to **Camera → More Settings → H.265 Auto Switch Configuration** to enable the function.

### 4.1.3 ANR

ANR (Automatic Network Replenishment) can automatically enable SD card of network camera to save the video in the condition of network disconnection, and can synchronize data after the network is recovered.

#### Before You Start

- Ensure the network connection between your device and network cameras is valid and correct.
- Ensure the network camera has been installed with an SD card.

#### Steps

1. Log in your device via web browser and go to **Configuration → Storage → Schedule Settings → Advanced**.
2. Check **Enable ANR**.
3. Click **OK**.

### 4.1.4 Manual Recording

You can click  to manually start/stop recording videos at live view.

### 4.1.5 Configure Recording Schedule

The camera would automatically start/stop recording according to the configured recording schedule.

### Before You Start

- Ensure you have installed the HDDs to the device or added the network disks before storing the video files, pictures and log files.
- Before enabling **Motion**, **Alarm**, **M | A** (motion or alarm), **M & A** (motion and alarm), and **Event** triggered recording and capture, you must configure the motion detection settings, alarm input settings and other events as well. Refer to **VCA Event Alarm** for details.

### Steps

1. Go to **Storage** → **Schedule** → **Record** .
2. Select a camera.
3. Check **Enable Schedule**.
4. Select a recording type.

#### Continuous

Scheduled recording.

#### Event

Recording triggered by all event triggered alarm.

#### Motion

Recording triggered by motion detection.

#### Alarm

Recording triggered by alarm.

#### M/A

Recording triggered by either motion detection or alarm.


#### M&A

Recording triggered by motion detection and alarm.

#### POS

Recording triggered by POS and alarm.

5. Drag the cursor on time bar to set the record schedule.

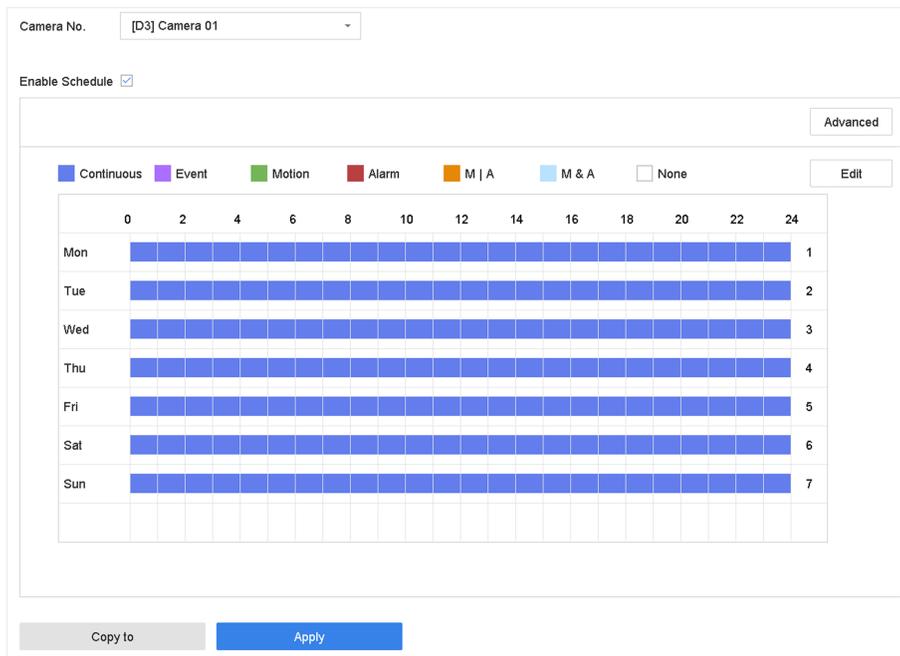

**Figure 4-2 Record Schedule**

## Note

- You can repeat the above steps to set schedule recording or capture for each day in the week.
- Continuous recording is applied to each day by default.

### **6. Optional:** Copy the recording schedule to other camera(s).

- 1) Click **Copy to**.
- 2) Select camera(s) to duplicate with the same schedule settings.
- 3) Click **OK**.

### **7.** Click **Apply**.

## **4.1.6 Configure Continuous Recording**

The device can continuously record the video within the configured time schedule.

### **Steps**

- 1.** Go to **Camera → Encoding Parameters → Recording Parameters** .
- 2.** Set the continuous main stream/sub-stream recording parameters for the camera.
- 3.** Go to **Storage → Recording Schedule** .
- 4.** Drag the mouse on the time bar to set the continuous recording schedule. Refer to **Configure Recording Schedule** for details.

### 4.1.7 Configure Motion Detection Triggered Recording

You can configure the recording triggered by the motion detection event.

#### Steps

1. Go to **System** → **Event** → **Normal Event** → **Motion Detection** .
2. Configure the motion detection and select the channel (s) to trigger the recording when motion event occurs. Refer to ***Configure Linkage Actions*** for details.
3. Go to **Camera** → **Encoding Parameters** → **Recording Parameters** .
4. Set the event main stream/sub-stream recording parameters for the camera.
5. Go to **Storage** → **Recording Schedule** .
6. Select the recording type to **Motion**.
7. Drag the mouse on the time bar to set motion detection recording schedule. Refer to ***Configure Recording Schedule*** for details.

### 4.1.8 Configure Event Triggered Recording

You can configure the recording triggered by the motion detection, motion detection and alarm, face detection, vehicle detection, line crossing detection, etc.

#### Steps

1. Go to **System** → **Event** .
2. Configure the event detection and select the channel(s) to trigger the recording when event occurs. Refer to ***Event*** for details.
3. Go to **Camera** → **Encoding Parameters** → **Recording Parameters** .
4. Set the event main stream/sub-stream recording parameters for the camera.
5. Go to **Storage** → **Recording Schedule** .
6. Select the recording type to **Event**.
7. Drag the mouse on the time bar to set the event detection recording schedule. Refer to ***Configure Recording Schedule*** for details.

### 4.1.9 Configure Alarm Triggered Recording

You can configure the recording triggered by the motion detection, face detection, vehicle detection, line crossing detection, etc.

#### Steps

1. Go to **System** → **Event** → **Normal Event** → **Alarm Input** .
2. Configure the alarm input and select the channel(s) to trigger the recording when alarm occurs. Refer to ***Event*** for details.
3. Go to **Camera** → **Encoding Parameters** → **Recording Parameters** .
4. Set the event main stream/sub-stream recording parameters for the camera.
5. Go to **Storage** → **Recording Schedule** .
6. Select the recording type to **Alarm**.

7. Drag the mouse on the time bar to set the alarm recording schedule. Refer to **Configure Recording Schedule** for details.

### 4.1.10 Configure Picture Capture

The picture refers to the live picture capture in continuous or event recording type. Only certain models support this function.

#### Steps

1. Go to **Camera → Encoding Parameters → Capture** .
2. Set the picture parameters.

#### Resolution

Set the resolution of the picture to capture.

#### Picture Quality

Set the picture quality to low, medium or high. The higher picture quality results in more storage space requirement.

#### Interval

The interval of capturing live picture.

3. Go to **Storage → Capture Schedule** .
4. Select the camera to configure the picture capture.
5. Set the picture capture schedule. Refer to **Configure Recording Schedule** for details.

### 4.1.11 Configure Holiday Recording

You may want to have different plan for recording on holiday, this function allows you to set the recording schedule on holiday for the year.

#### Steps

1. Go to **System → Holiday** .
2. Select a holiday item from the list.
3. Click  to edit the selected holiday.
4. Check **Enable**.

Figure 4-3 Edit Holiday Settings

**Figure 4-3 Edit Holiday Settings**

5. Set **Holiday Name**, **Mode**, **Start Date**, and **End Date**.
6. Click **OK**.
7. Set the schedule for holiday recording. Refer to [Configure Recording Schedule](#) for details.

## 4.1.12 Configure Redundant Recording and Capture

Enabling redundant recording and capture, which means saving the record files and captured pictures not only in the R/W HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.

### Before You Start

You must set the storage mode to **Group** before you set the HDD property to **Redundancy**. For detailed information, refer to [Configure HDD Group](#) . There should be at least another HDD which is in Read/Write status.

### Steps

1. Go to **Storage** → **Storage Device** .
2. Select a HDD from the list and click  to enter the **Local HDD Settings** interface.
3. Set the HDD property to **Redundancy**.
4. Go to **Storage** → **Schedule Settings** → **Record Schedule/Capture Schedule** .
5. Click **Advanced** to set the camera recording parameters.

**Advanced Parameters**

Record Audio:

Pre-Record: 5s

Post-Record: 5s

Stream Type: Main Stream

Expired Time (day): 5

Redundant Record/Capture

OK Cancel

Figure 4-4 Record Parameters

6. Check **Redundant Record/Capture**.
7. Click **OK** to save settings.

## 4.2 Playback

### 4.2.1 Instant Playback

Instant playback enables the device to play the recorded video files recorded in the last five minutes. If no video is found, it means there is no recording during the last five minutes.

After selecting the camera on **Live View**, you can move the cursor to the window bottom to access the toolbar, and click  to start instant playback.



Figure 4-5 Playback

## 4.2.2 Play Normal Video

Go to **Playback**, select date and camera(s). **1** **4** **8** **9** **16** is the window division shortcut for grouping cameras and playing videos. You can also select camera(s) from the list to achieve simultaneous playback of multiple camera(s).

Position the cursor on playback window, and use the toolbar at the bottom to perform playback operations. Refer to **Playback Operations** for details.

### Note

256x playing speed is supported.



Figure 4-6 Play Normal Video

## 4.2.3 Play Smart Searched Video

In smart playback mode, the device can analyze videos that containing motion, line, or intrusion detection information, and mark them in red.

Go to **Playback**, click **Smart**, and then click motion detection (  ), line crossing detection (  ), or intrusion detection (  ) in the toolbar at the bottom to play the video as your desire.

For certain cameras that have enabled human and vehicle of motion detection, you can click  or  to search human and vehicle targets. When you are playing back videos that contain human or vehicle targets, the device cannot use the videos (that contain human or vehicle targets) to apply a double analysis of line crossing detection (  ) or intrusion detection (  ).



Figure 4-7 Playback by Smart Search

## 4.2.4 Play Custom Searched Files

You can play video by customized search conditions.

### Steps

1. Go to **Playback**.
2. Select camera(s) from the list.
3. Click **Custom Search** at the lower-left corner.
4. Select a search method. For example, **Search by Appearance**.
5. Set search conditions
6. Click **Start Search**. The search result list displays 1 channel.
7. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.
8. **Optional:** Click  to play a video.
9. Click  to lock a file. The locked file will not be overwritten.
10. **Optional:** Export search results to a backup device.
  1. Select file(s) in the search result list, or check **Select All** to select all files.
  2. Click **Export** to export the selected file(s) to a backup device.

---

## Note

- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## 4.2.5 Play Tag Files

Video tag allows you to record information, such as people and locations of a certain time point, during playback. You can use video tag(s) to search video files and position time point.

### Add Tag Files

#### Steps

1. Go to **Playback**.
2. Search and play back the video file(s).
3. Click  to add the tag.
4. Edit the tag information.
5. Click **OK**.

---

## Note

Max. 64 tags can be added to a single video file.

---

### Play Tag Files

#### Steps

1. Go to **Playback**.
2. Click **Custom Search** at the lower-left corner.
3. Click **Search by Tag**.
4. Set search conditions, including time and tag keyword.
5. Click **Start Search**. The search result list displays 1 channel.
6. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.
7. Click  to play a video.
8. **Optional:** Export search results to a backup device.
  - 1) Select file(s) in the search result list, or check **Select All** to select all files.
  - 2) Click **Export** to export the selected file(s) to a backup device.

---

## Note

- You can click  to view export progress.
  - You can click  to return to search interface.
-

## 4.2.6 Play by Sub-periods

The video files can be played in multiple sub-periods simultaneously on the screen.

### Steps

1. Go to **Playback**.
2. Click **|||** at the lower-left corner.
3. Select a camera.
4. Set the start time and end time for searching video.
5. Select the different multi-period at the lower-right corner, e.g., 4-Period.

---

### Note

According to the defined number of split-screens, the video files on the selected date can be divided into average segments for playback. E.g., if there are video files existing between 16:00 and 22:00, and the 6-screen display mode is selected, then it can play the video files for 1 hour on each screen simultaneously.


---

## 4.2.7 Play Log Files

Play back record file(s) associated with channels after searching system logs.

### Steps

1. Go to **Maintenance** → **Log Info** .
2. Click **Log Search** .
3. Set search time and type and click **Search**.

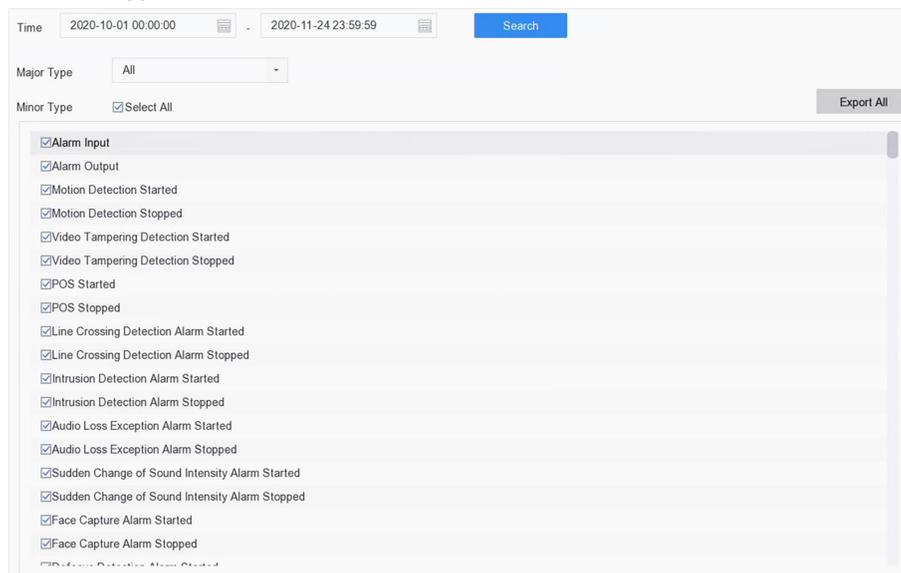

**Figure 4-8 Search Log Files**

4. Choose a log with a video file and click to start playing the log file.

No.	Major Type	Time	Minor Type	Parameter	Play	Details
32	Information	20-10-2020 10:30:55	Start Capture	N/A	—	ⓘ
33	Alarm	20-10-2020 10:31:05	Motion Detection Stopped	N/A	▶	ⓘ
34	Alarm	20-10-2020 10:31:08	Motion Detection Started	N/A	▶	ⓘ
35	Alarm	20-10-2020 10:31:36	Motion Detection Stopped	N/A	▶	ⓘ
36	Alarm	20-10-2020 10:31:38	Motion Detection Started	N/A	▶	ⓘ
37	Operation	20-10-2020 10:32:50	Local Operation: Configure Parameters	Image	▶	ⓘ
38	Alarm	20-10-2020 10:32:58	Motion Detection Stopped	N/A	▶	ⓘ
39	Operation	20-10-2020 10:33:07	Local Operation: Configure Parameters	Image	▶	ⓘ
40	Operation	20-10-2020 10:33:07	Local Operation: Configure Parameters	Image	▶	ⓘ
41	Operation	20-10-2020 10:33:35	Local Operation: Configure Parameters	Image	▶	ⓘ
42	Operation	20-10-2020 10:33:36	Local Operation: Configure Parameters	Image	▶	ⓘ
43	Alarm	20-10-2020 10:33:43	Motion Detection Started	N/A	▶	ⓘ

Figure 4-9 Play Log Files

## 4.2.8 Play External Files

You can play files from external storage devices.

### Before You Start

Connect the storage device with the video files to your device.

### Steps

1. Go to **Playback**.
2. Click  at the lower-left corner.
3. Click , or double-click the file to play it.

## 4.3 Playback Operations

### 4.3.1 View Playback Error Information

Playback error information of each channel can be accessed.

If exception occurs, playback error information of individual channel(s) will be provided on the screen. Go to **Playback** → **Channel**, select different channels to view if error information exists.

### 4.3.2 Set Play Strategy in Important/Custom Mode

When you are in the smart or custom video playback mode, you can set the playing speed separately for the normal video and the smart/custom video, or you can select to skip the normal video.

In the Smart/Custom video playback mode, click  to set the play strategy.

- When **Do not Play Normal Videos** is checked, the device will skip the normal video and play the smart (motion/line crossing/intrusion) video and the custom (searched video) only in the normal speed (X1).
- When **Do not Play Normal Videos** is unchecked, you can set the play speed for the normal video the smart/custom video separately. The speed range is from X1 to XMAX.

---

### **Note**

You can set the speed in the single-channel play mode only.

---

### 4.3.3 Edit Video Clips

You can cut and export video clips during playback.

#### Steps

1. Go to **Playback**.
2. Click  at the bottom toolbar.
3. Set the start time and end time. You can click  to set the time period, or set a time segment on time bar.
4. Click  to save the video clip to a storage device.

### 4.3.4 Switch between Main Stream and Sub-Stream

You can switch between the main stream and the sub-stream during the playback.

Icon	Description
	Play the video in main stream.
	Play the video in sub-stream.

---

### **Note**

The encoding parameters for the main stream and sub-stream can be configured in **Storage → Encoding Parameters** .

---

### 4.3.5 Switch Audio Source

If the network has linked a network audio device, you can switch the audio source to the linked audio device during playback.

Move the cursor to  at the toolbar, and then select an audio channel as your desire.

## 4.3.6 Thumbnails View

With the thumbnails view on the playback interface, you can conveniently locate the required video files on the time bar.

In the playback mode, position the cursor on time bar to get preview thumbnails.



**Figure 4-10 Thumbnails View**

You can click a thumbnail to enter the full-screen playback.

## 4.3.7 Fisheye View

The device supports the fisheye camera expansion in Live View or playback mode.

### Before You Start

- The fisheye expansion view feature is supported only by certain models.
- The connected camera must support the fisheye view.

### Steps

1. Start live view, click to enter the fisheye expansion mode.
2. Select the expansion view mode.

**Table 4-1 Fisheye View Icon Description**

Icon	Description	Icon	Description
180° Panorama (  )	Switch the Live View image to the 180° panorama view.	360° Panorama (  )	Switch the Live View image to the 360° panorama view.
PTZ Expansion (  )	The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion. It supports the electronic PTZ function, also called e-PTZ.	Radial Expansion (  )	In radial expansion mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the vision of a fish's

Icon	Description	Icon	Description
			convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

### 4.3.8 Fast View

Hold the mouse to drag on the time bar to get a fast view of the video files.

In the Video Playback mode, hold and drag the mouse through the playing time bar to fast view the video files.

Release the mouse at the required time point to enter the full-screen playback.

### 4.3.9 Digital Zoom

Digital Zoom zooms into the live image in different magnifications (1x to 16x).

#### Steps

1. Start live view.
2. Click  from the toolbar.
3. Move the sliding bar or scroll the mouse wheel to zoom in/out the image to different magnifications (1x to 16x).



**Figure 4-11 Digital Zoom**

### 4.3.10 POS Information Overlay

The device can be connected with the POS machine/server, and receive the transaction message for overlay on the image during playback.

---

 **Note**

When the playing speed is higher than 2x, the POS information cannot be overlaid on the video.

---

In the video live or playback mode, click  to overlay the POS transaction information on the playback video.

## Chapter 5 Picture Capture

---



This chapter is only available for certain models.

---

### 5.1 Configure Parameters

The picture refers to the live picture captured in continuous or event recording.

You can edit picture parameters in **Storage → Schedule → Capture → Advanced** .

#### Resolution

Set the picture resolution.

#### Picture Quality

Set picture quality to low, medium or high. Higher quality requires more storage space.

#### Interval

The live picture capture interval.

#### Capture Delay Time

The duration of capturing pictures.

### 5.2 Configure Capture Schedule

The device will automatically capture picture according to the schedule.

#### Before You Start

Ensure you have installed HDDs, or added network disks for storage.

#### Steps

1. Go to **Storage → Schedule → Capture** .
2. Select a camera.
3. Set the picture capture schedule. Refer to ***Configure Recording Schedule*** for schedule setting details.

### 5.3 Configure Holiday Capture Schedule


You can set the capture schedule on holidays of the year. The recorder will follow holiday capture plan as its capture priority during holidays.

#### Before You Start

Ensure you have installed HDDs, or added network disks for storage.

## Steps

1. Go to **System** → **Holiday** .
2. Select a holiday item from the list and click  .
3. Check **Enable**.
4. Edit holiday parameters, including name, mode, and date.

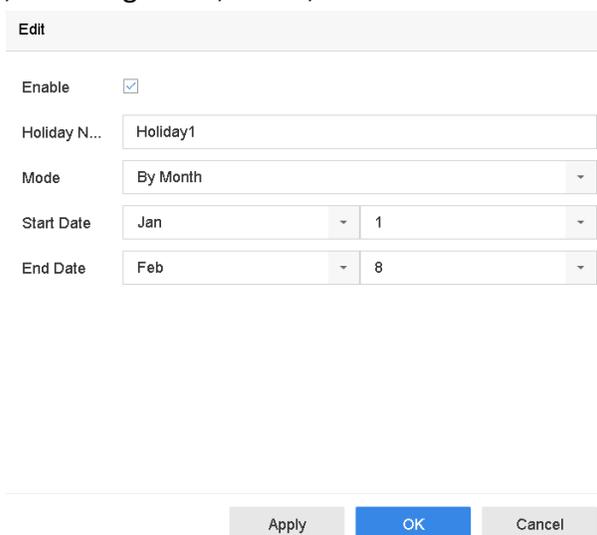

Edit	
Enable	<input checked="" type="checkbox"/>
Holiday N...	Holiday1
Mode	By Month
Start Date	Jan 1
End Date	Feb 8
Apply OK Cancel	

**Figure 5-1 Edit Holiday Settings**

5. Click **OK**.
6. Set the holiday capture schedule. Refer to [\*\*\*Configure Recording Schedule\*\*\*](#) for schedule setting details.

## Chapter 6 Event

### 6.1 Normal Event Alarm

#### 6.1.1 Configure Motion Detection Alarms

Motion detection enables the device to detect the moving objects in the monitored area and trigger alarms.

##### Steps

1. Go to **System → Event → Normal Event → Motion Detection** .
2. Select a camera.
3. Check **Enable**.
4. Set the motion detection rule.

**For cameras have human and vehicle detection function.**

Click **Draw Area** to draw the detection area(s) on the preview screen.

Set **Detection Target** as **Human** or **Vehicle** to discard alarms which are not triggered by human body or vehicle.

**For cameras do not have human and vehicle detection function.**

Click **Full screen** to set the full-screen as the detection area, or drag on the preview screen to draw the customized detection area.

5. Set **Sensitivity**  
**Sensitivity**

**Sensitivity** ranges from 0 to 100. It allows you to calibrate how readily movement triggers the alarm. A higher value results in the more readily to triggers motion detection.

6. Set the arming schedule. Refer to **Configure Arming Schedule** .
7. Set linkage actions. Refer to **Configure Linkage Actions** .

#### 6.1.2 Configure Video Loss Alarms

Video loss detection detects video loss of a channel and takes alarm response action(s).

##### Steps

1. Go to **System → Event → Normal Event → Video Loss** .
2. Select a camera.
3. Check **Enable**.
4. Set the arming schedule. Refer to **Configure Arming Schedule** .
5. Set linkage actions. Refer to **Configure Linkage Actions** .

### 6.1.3 Configure Video Tampering Alarms

Video tampering detection triggered an alarm when the camera lens is covered and takes alarm response action(s).

#### Steps

1. Go to **System** → **Event** → **Normal Event** → **Video Tampering** .
2. Select a camera.
3. Check **Enable**.
4. Set the video tampering area. Drag on the preview screen to draw the customized video tampering area.
5. Set **Sensitivity** (0-2). 3 levels are available. The sensitivity calibrates how readily movement triggers the alarm. A higher value more readily triggers the video tampering detection.
6. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
7. Set linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .

### 6.1.4 Configure Sensor Alarms

Set the handling action of an external sensor alarm.

#### Steps


1. Go to **System** → **Event** → **Normal Event** → **Alarm Input** .
2. Select an alarm input item from the list and click  .
3. Select the alarm input type.
4. Edit the alarm name.
5. Check **Input**.
6. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
7. Set linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .

### 6.1.5 Configure Exceptions Alarms

Exception events can be configured to take the event hint in the Live View window and trigger alarm output and linkage actions.


#### Steps

1. Go to **System** → **Event** → **Normal Event** → **Exception** .
2. **Optional:** Enable the event hint to display it in the live view window.
  - 1) Check **Enable Event Hint**.
  - 2) Click  to select the exception type(s) to take the event hint.

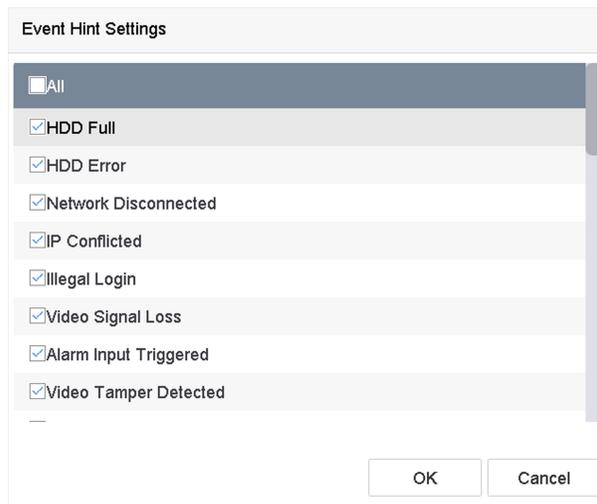

**Figure 6-1 Event Hint Settings**

3. Select an exception type.

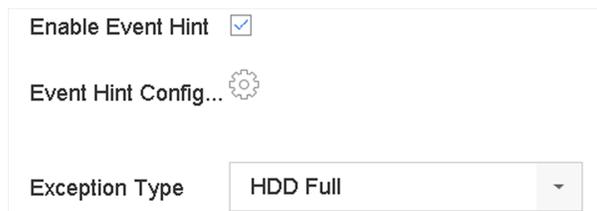

**Figure 6-2 Exceptions Handling**

4. Set the linkage actions. Refer to [Configure Linkage Actions](#) .

## 6.1.6 Configure Combined Alarm

Combined alarm combines events with alarm input. The combined alarm will be triggered when it receives alarms from both alarm input and events. Event types include motion detection, video tampering detection, and other smart events such as line crossing detection, intrusion detection, etc.

### Before You Start

Ensure the channel has been assigned with event alarm as your desire, and the alarm input has been configured (refer to [Configure Sensor Alarms](#) ).


### Steps

1. Go to **System** → **Event** → **Normal Event** → **Alarm Input** .
2. Select an alarm input item from the list and click  .
3. Select **Settings** as **Input**.
4. Click **Combined Alarm**.
5. Select a channel as your desire.
6. Select **Combined Alarm Event**.
7. Click **Apply**.

## Note

The combined alarm arming schedule and linkage action are the same as the selected event(s).

---

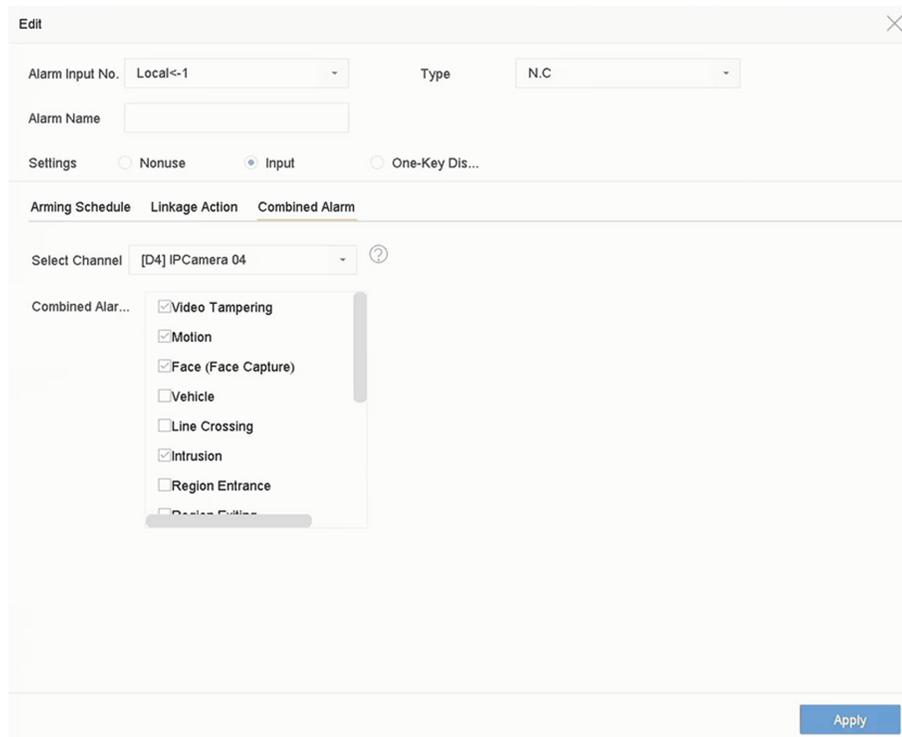

The screenshot shows a configuration window titled "Edit" with a close button (X) in the top right corner. It contains several sections:

- Alarm Input No.:** A dropdown menu showing "Local<-1".
- Type:** A dropdown menu showing "N.C".
- Alarm Name:** An empty text input field.
- Settings:** Three radio buttons: "Nonuse", "Input" (which is selected), and "One-Key Dis...".
- Arming Schedule | Linkage Action | Combined Alarm:** Three tabs, with "Combined Alarm" being the active one.
- Select Channel:** A dropdown menu showing "[D4] IPCamera 04" with a help icon (?) to its right.
- Combined Alar...:** A list of detection events with checkboxes:
  - Video Tampering
  - Motion
  - Face (Face Capture)
  - Vehicle
  - Line Crossing
  - Intrusion
  - Region Entrance
  - Device Failure
- Apply:** A blue button at the bottom right.

Figure 6-3 Combined Alarm

## 6.2 VCA Event Alarm

The device supports receiving VCA detections sent by connected IP cameras. Enable and configure VCA detection on the IP camera settings interface first.

---

### Note

- VCA detections must be supported by the connected IP camera.
  - Refer to the network camera user manual for detailed VCA detection instructions.
- 

### 6.2.1 Temperature Screening

After specified thermography cameras are connected, the device can display temperature measurement results, and notify you with audio alert when normal or abnormal temperature is detected.

#### Before You Start

Ensure your thermography camera supports this function, and it is properly configured.

## Steps

1. Go to **System → Event → Smart Event** .
2. Select the optical channel of thermography camera.
3. Click **Face Capture**.
4. **Optional:** Check **Save VCA Picture** to save the captured pictures of face detection.
5. Set the arming schedule. Refer to ***Configure Arming Schedule*** .
6. Set linkage actions. Refer to ***Configure Linkage Actions*** . If you require to implement linkage actions only when the thermography camera detects abnormal temperature, check **Abnormal Body Temperature** in **Rule Settings**.



The abnormal temperature is detected and defined by the thermography camera.

---

7. Click **Apply**.

## What to do next

- You can check  of **Target** in live view to view detection results.
- You can go to **File Management → Smart Search → Search by Appearance** to search detection results.

## 6.2.2 Transparent Transmission

Transparent transmission makes a large variety of events configurable, and the event alarms from cameras can be directly transmitted. For events which are not listed in smart event, they will be listed in the transparent transmission list. The list will only display events which the connected cameras support. You can custom the event description as your desire. Transparent transmission is configurable via web browser.

### Before You Start

Ensure you have correctly connected camera(s) that supports transparent transmission.

## Steps

1. Go to **Configuration → Event → More Events → Transparent Transmission Configuration** . The available events are listed in **Event Description List**.
2. Click **Template List** to export the template list file.



The template list is for reference only. It cannot be deleted or edited.

---

3. Edit **Event Description** according to your camera and the template list.

### Event Type

The event type shall be the same as your camera event.

### Event Description

The event description can be customized. After the event type is recognized, the device will display the event description as the event name.

4. Click **Save**.

## What to do next

Go to **Configuration** → **Event** → **Smart Event** → **More Events** to configure events.

## 6.2.3 Hard Hat Detection

Hard hat detection detects people who are not wearing hard hats. You can configure the arming schedule and linkage actions. Hard hat detection is configurable via web browser.

## 6.2.4 People Gathering Detection

People gathering detection is used to detect whether the density of human bodies within a specified area exceeds the set value and trigger alarm for linked actions.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a camera.
3. Click **People Gathering**.

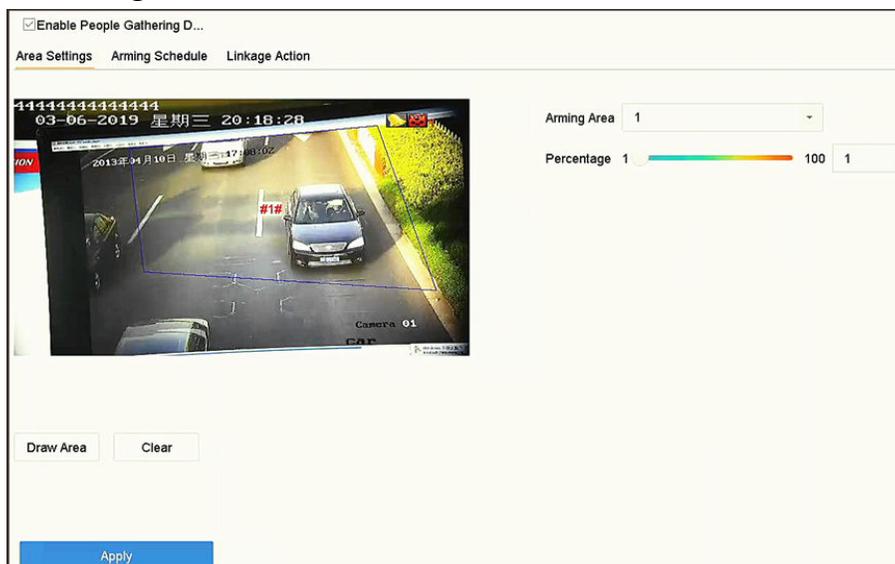


Figure 6-4 People Gathering Detection

4. Check **Enable People Gathering Detection**.
5. **Optional:** Check **Save VCA Picture** to save the captured people gathering detection pictures.
6. Set people gathering detection parameters.
  - 1) Select **Arming Area**.

---

### Note

Up to 4 areas are selectable.

---

- 2) Click **Draw Area** to draw a quadrilateral in the preview window by specifying four vertices of the area.
- 3) Set **Percentage**.

### Percentage

The density of human bodies within the area. If it exceeds the threshold value, the device will trigger alarm.

7. Set the arming schedule. Refer to [Configure Arming Schedule](#).
8. Set the linkage actions. Refer to [Configure Linkage Actions](#).
9. Click **Apply**.

## 6.2.5 Fast Moving Detection

Fast moving detection is used to detect suspicious running and chasing, over-speed, and fast moving. It will trigger alarm when an object is moving fast and send notification to arming host so that necessary actions can be taken in advance.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events**.
2. Select a camera.
3. Click **Fast Moving**.

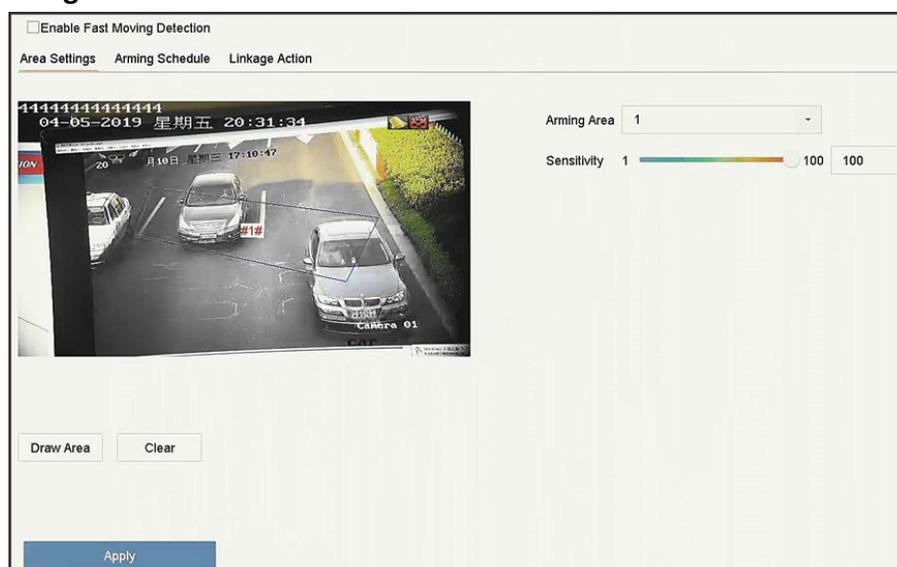


Figure 6-5 Fast Moving Detection

4. Check **Enable Fast Moving**.
5. **Optional:** Check **Save VCA Picture** to save the captured fast moving detection pictures.
6. Set fast moving detection parameters.
  - 1) Select **Arming Region**. Up to 4 regions are selectable.
  - 2) Click **Draw Area** to draw a quadrilateral in the preview window by specifying four vertices of the area.

### 3) Set **Sensitivity**.

#### **Sensitivity**

Similarity of the background image to the object. The higher the value is, more easily the detection alarm will be triggered.

7. Set the arming schedule. Refer to **Configure Arming Schedule** .

8. Set the linkage actions. Refer to **Configure Linkage Actions** .

9. Click **Apply**.

## 6.2.6 Parking Detection

Parking detection is used to detect parking violation in the area, applicable in expressway and one-way street.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .

2. Select a camera.

3. Click **Parking**.

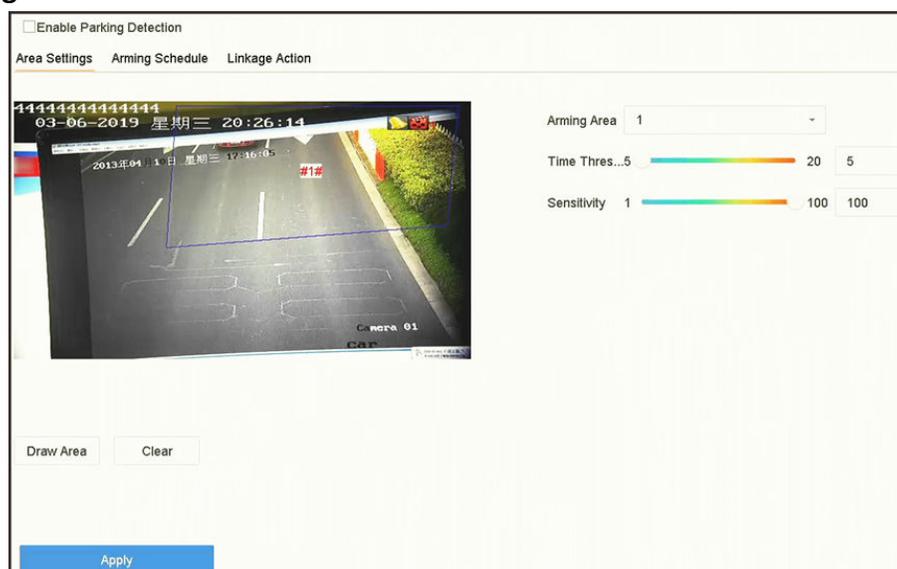


Figure 6-6 Parking Detection

4. Check **Enable Parking Detection**.

5. **Optional:** Check **Save VCA Picture** to save the captured parking detection pictures.

6. Set parking detection parameters.

1) Select **Arming Area**.

---

#### **Note**

Up to 4 areas are selectable.

2) Set **Time Threshold**.

#### **Time Threshold**

The time of a vehicle staying in the region. If the value is 10, an alarm will be triggered after the vehicle has stayed in the region for 10 s. Range: [5-20].

3) Set **Sensitivity**.

**Sensitivity**

Similarity of the background image to the object. The higher the value is, more easily the detection alarm will be triggered.

7. Set the arming schedule. Refer to **Configure Arming Schedule** .

8. Set the linkage actions. Refer to **Configure Linkage Actions** .


9. Click **Apply**.

## 6.2.7 Unattended Baggage Detection

Unattended baggage detection detects the objects left over in a predefined region such as the baggage, purses, dangerous materials, etc., and a series of actions can be taken when the alarm is triggered.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a camera.
3. Click **Unattended Baggage**.

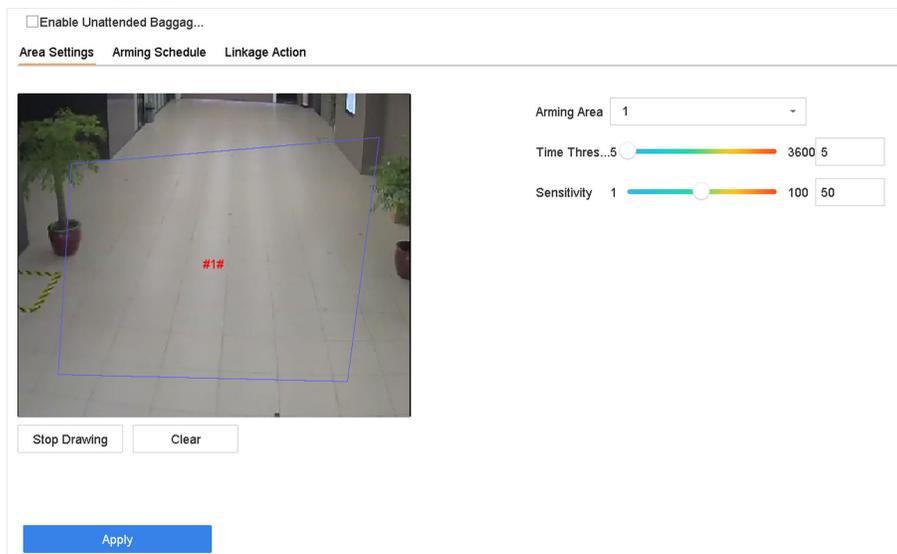

**Figure 6-7 Unattended Baggage Detection**

4. Check **Enable Unattended Baggage Detection**.

5. **Optional:** Check **Save VCA Picture** to save the captured unattended baggage detection pictures.

6. Set the detection rules and detection areas.

- 1) Select **Arming Area**.

## Note

Up to 4 areas are selectable.

- 2) Drag the sliders to set **Time Threshold** and **Sensitivity**.

### Time Threshold

The time of the objects left in the region. If the value is 10, an alarm will be triggered after the object is left and stayed in the region for 10 s. Range: [5-20].

### Sensitivity

Similarity of the background image to the object. The higher the value is, more easily the detection alarm will be triggered.

- 3) Click **Draw Region** and draw a quadrilateral in the preview window.

7. Set the arming schedule. Refer to [Configure Arming Schedule](#).

8. Set linkage actions. Refer to [Configure Linkage Actions](#).

9. Click **Apply**.

## 6.2.8 Object Removal Detection

The object removal detection function detects the objects removed from a predefined region, such as the exhibits on display, and a series of actions can be taken when the alarm is triggered.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events**.
2. Select a camera.
3. Click **Object Removable**.

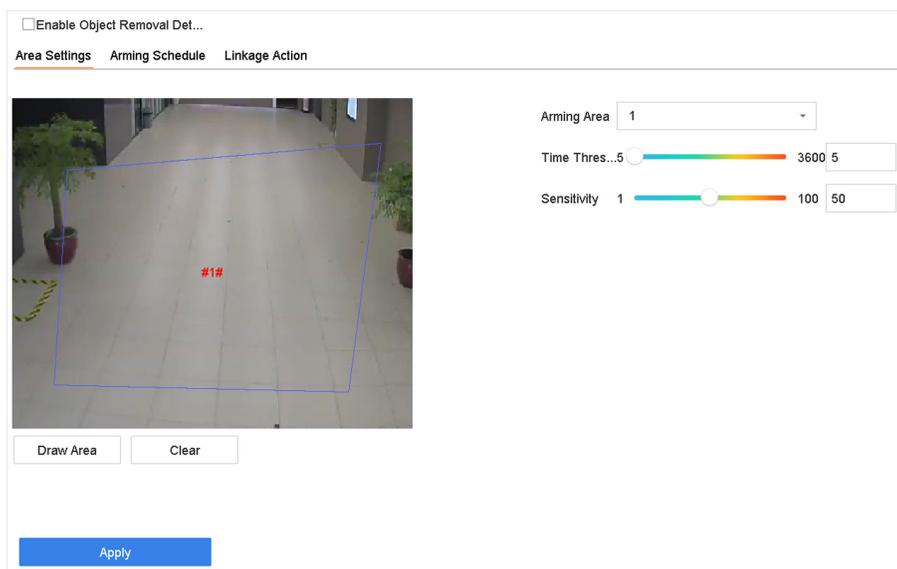


Figure 6-8 Object Removal Detection

4. Check **Enable Object Removable Detection**.

5. **Optional:** Check **Save VCA Picture** to save the captured object removable detection pictures.

6. Follow these steps to set the detection rules and detection areas.

1) Select **Arming Area**.



Up to 4 areas are selectable.

2) Drag the sliders to set **Time Threshold** and **Sensitivity**.

### Time Threshold

The time of the objects removed from the region. If the value is 10, alarm will be triggered after the object disappears from the region for 10 s. Range [5-20].

### Sensitivity

The similarity degree of the background image. If the sensitivity is high, a very small object taken from the region will trigger the alarm.

3) Click **Draw Area** and draw a quadrilateral in the preview window by specifying four vertices of the detection region.

7. Set the arming schedule. Refer to [Configure Arming Schedule](#) .

8. Set the linkage actions. Refer to [Configure Linkage Actions](#) .

9. Click **Apply**.

## 6.2.9 Audio Exception Detection

Audio exception detection detects abnormal sounds in the scene, such as a sudden increase/decrease in sound intensity.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .

2. Select a camera.

3. Click **Audio Exception**.

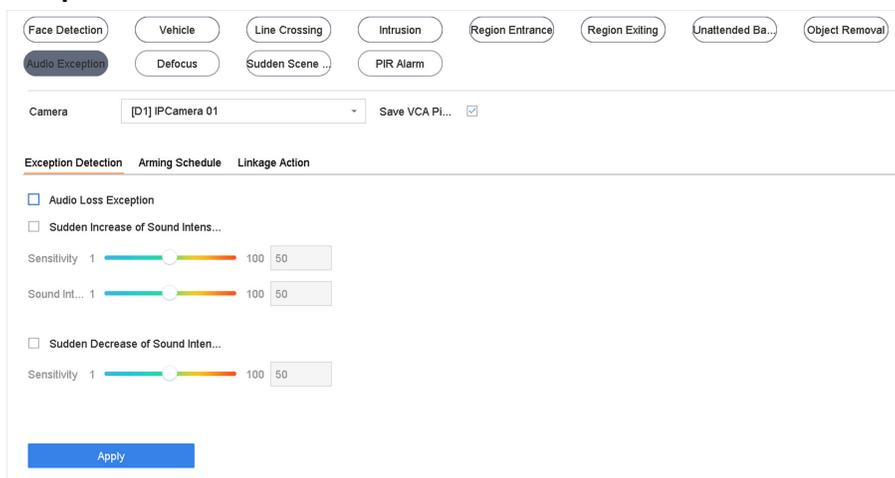


Figure 6-9 Audio Exception Detection

4. **Optional:** Check **Save VCA Picture** to save the captured audio exception detection pictures.

5. Set the detection rules.

1) Select **Exception Detection**.

2) Check **Audio Loss Exception**, **Sudden Increase of Sound Intensity Detection**, and/or **Sudden Decrease of Sound Intensity Detection**.

### **Audio Loss Exception**

Detects a steep sound rise in the scene. Set **Sensitivity** and **Sound Intensity Threshold** for the steep sound rise.

### **Sensitivity**

The smaller the value is, the more severely the change would trigger the detection. Range [1-100].

### **Sound Intensity Threshold**

It can filter the sound in the environment. The louder the environment sound is, the higher the value should be. Adjust it according to the environment. Range [1-100].

### **Sudden Decrease of Sound Intensity Detection**

Detects a steep sound drop in the scene. Detection sensitivity [1-100].

6. Set the arming schedule. Refer to **Configure Arming Schedule**.

7. Set the linkage actions. Refer to **Configure Linkage Actions**.

8. Click **Apply**.

## **6.2.10 Defocus Detection**

Image blur caused by lens defocus can be detected.

### **Steps**

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events**.

2. Select a camera.

3. Click **Defocus**.

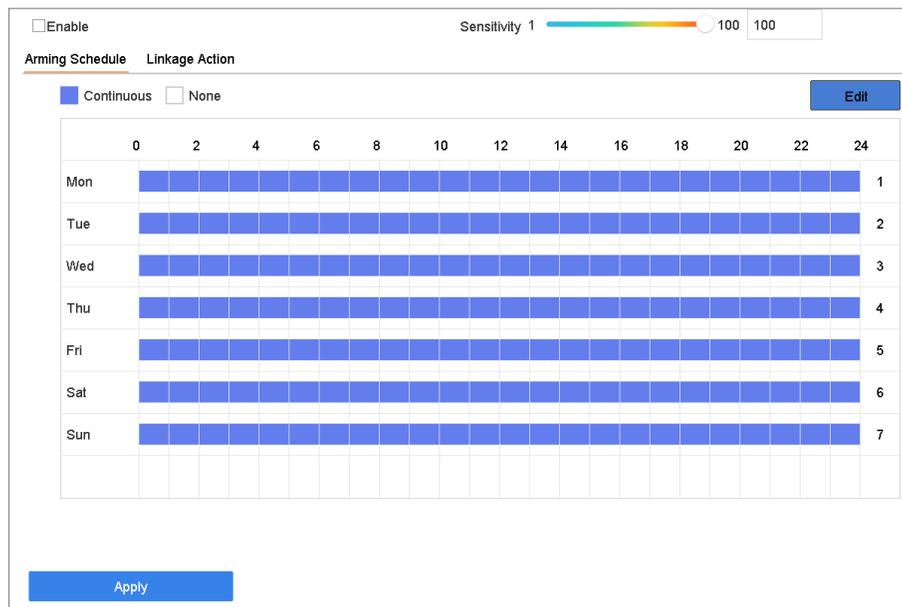


Figure 6-10 Defocus Detection

4. Check **Enable**.
5. **Optional:** Check **Save VCA Picture** to save the captured defocus detection pictures.
6. Set the detection sensitivity.

#### Sensitivity

Sensitivity range: [1-100]. The higher the value is, the more easily the defocus image will be detected.


7. Set the arming schedule. Refer to [Configure Arming Schedule](#).
8. Set the linkage actions. Refer to [Configure Linkage Actions](#).
9. Click **Apply**.

## 6.2.11 Sudden Scene Change Detection

Scene change detection detects the change of the video security environment affected by external factors, such as the intentional rotation of the camera.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events**.
2. Select a camera.
3. Click **Sudden Scene Change**.

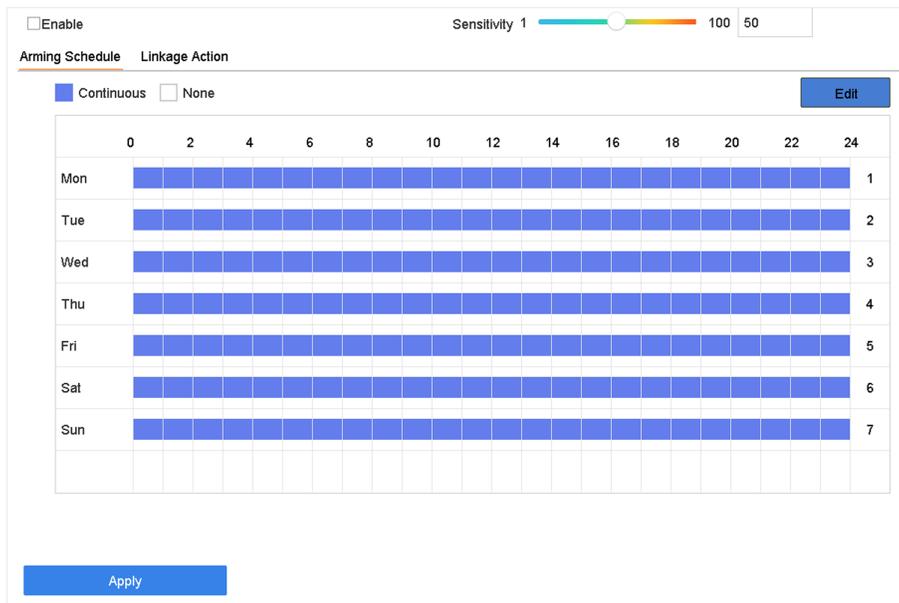

**Figure 6-11 Sudden Scene Change**

4. Check **Enable**.
5. **Optional:** Check **Save VCA Picture** to save the captured sudden scene change detection pictures.
6. Set the detection sensitivity.

**Sensitivity**

Ranges from 1 to 100, the higher the value, the more easily the change of scene can trigger the alarm.

7. Set the arming schedule. Refer to **Configure Arming Schedule** .
8. Set the linkage actions. Refer to **Configure Linkage Actions** .
9. Click **Apply**.

## 6.2.12 PIR Alarm

A PIR (Passive Infrared) alarm is triggered when an intruder moves within the detector vision field. The heat energy dissipated by a person or any other warm blooded creature such as dogs, cats, etc., can be detected.

**Steps**

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a camera.
3. Click **PIR Alarm**.

Enable PIR Alarm

Arming Schedule
Linkage Action

Continuous
  None
 
Edit

	0	2	4	6	8	10	12	14	16	18	20	22	24	
Mon													1	
Tue													2	
Wed													3	
Thu													4	
Fri													5	
Sat													6	
Sun													7	

Apply

**Figure 6-12 PIR Alarm**

4. Check **PIR Alarm**.
5. **Optional:** Check **Save VCA Picture** to save the captured of PIR alarm pictures.
6. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
7. Set the linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .
8. Click **Apply**.

## 6.2.13 Thermal Camera Detection

The NVR supports the event detection modes of the thermal network cameras: fire and smoke detection, temperature detection, temperature difference detection, etc.

### Before You Start

Add the thermal network camera to your device and make sure the camera is activated.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a thermal camera.
3. **Optional:** Check **Save VCA Picture** to save the captured pictures of detection.
4. Select an event detection (Temperature Measurement Alarm, etc.).
5. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
6. Set the linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .
7. Click **Apply**.

### 6.2.14 Queue Management

After connecting with queue management camera, you can set the arming schedule and linkage action of queue management.

#### Before You Start

Ensure the recorder have connected with queue management camera.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a queue management camera.
3. **Optional:** Check **Save VCA Picture** to save the captured pictures of detection.
4. Set the arming schedule. Refer to Chapter [\*\*\*Configure Arming Schedule\*\*\*](#) for details.
5. Set the linkage actions. Refer to Chapter [\*\*\*Configure Linkage Actions\*\*\*](#) for details.
6. Click **Apply**.

### 6.3 Configure Arming Schedule


#### Steps

1. Click **Arming Schedule**.
2. Click **Edit**.
3. Select a day of the week and set the time period. Up to eight time periods can be set each day.



Time periods cannot repeat or overlapped.

---

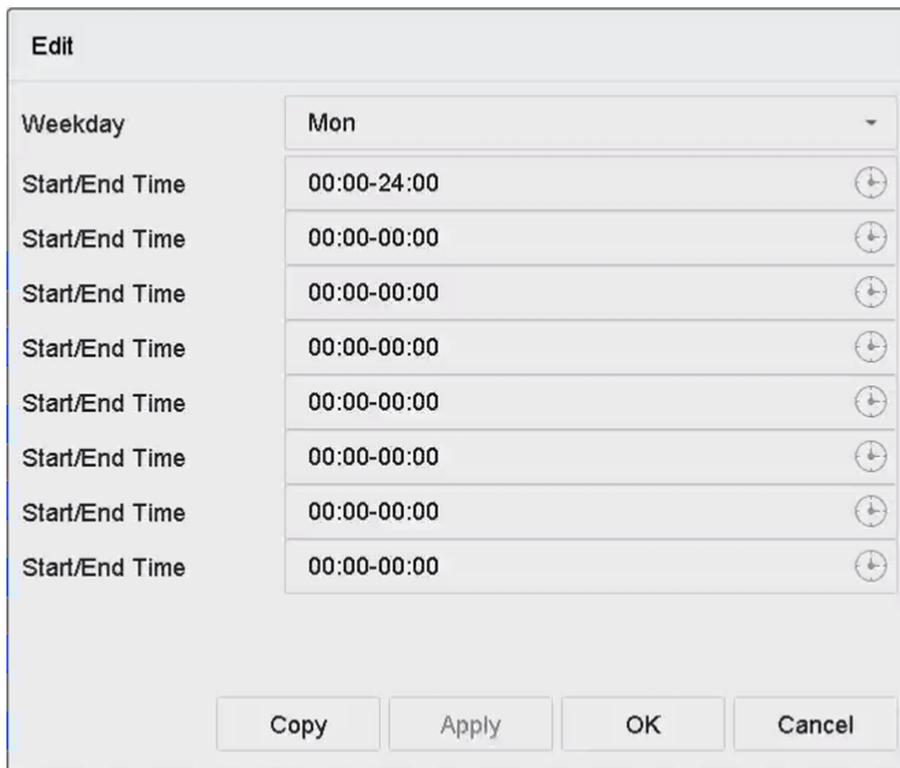

**Figure 6-13 Set Arming Schedule**

4. You can click **Copy** to copy the current day arming schedule settings to other day(s).
5. Click **Apply** to save the settings.

## 6.4 Configure Linkage Actions

Alarm linkage actions will be activated when an alarm or exception occurs.

### 6.4.1 Configure Auto-Switch Full Screen Monitoring

When an alarm is triggered, the local monitor displays in full screen the video image from the alarming channel configured for full screen monitoring. And when the alarm is triggered simultaneously in several channels, you must configure the auto-switch dwell time.

---

#### **Note**

Auto-switch will terminate once the alarm stops and back to the live view interface.

---

#### **Steps**

1. Go to **System** → **Live View** → **General** .
2. Set the event output and dwell time.

#### **Event Output**

Select the output to show the event video.

### Full Screen Monitoring Dwell Time

Set the time in seconds to show the alarm event screen. If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time).

3. Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
4. Select the **Full Screen Monitoring** alarm linkage action.
5. Select the channel(s) in **Trigger Channel** for full screen monitoring.

### 6.4.2 Configure Buzzer

When an alarm is detected, the buzzer will make an audible beep.

#### Steps

1. Go to **System → Live View → General** .
2. Check **Enable Audio Output**.
3. Set the audio volume.
4. Click **Apply**.
5. Go to **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
6. Select **Buzzer** as the alarm linkage action.

### 6.4.3 Notify Surveillance Center

The device can send an exception or alarm signal to the remote alarm host when an event occurs. The alarm host refers to the PC installed with client software (e.g., iVMS-4200, iVMS-5200).

#### Steps

1. Go to **System → Network → Advanced → More Settings** .
2. Set the alarm host IP and alarm host port.
3. Go to **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
4. Select **Notify Surveillance Center**.

### 6.4.4 Configure Email Linkage

The system can send an email with alarm information to a user or users when an alarm is detected.

#### Steps

1. Go to **System → Network → Advanced → Email** .
2. Set the email parameters.
3. Click **Apply**.

4. Go to the **Linkage Action** interface of the alarm detection (e.g., motion detection, video tampering, face detection, etc.).
5. Select **Send Email** alarm linkage action.

### 6.4.5 Configure Audio Alert

When an alarm is triggered, an audio file will be played as the linkage action. The audio file can be customized. Refer to ***Audio Management*** for details.

#### Before You Start

Ensure the audio files are imported to the device.

#### Steps



#### Note

This linkage action is only available for certain events.

---

1. Check **Audio Alert** in **Normal Linkage**.
2. Click  to select audio file.
3. Select an audio file.
4. Set arming schedule.
5. Click **OK**.
6. Click **Apply**.

### 6.4.6 Trigger Alarm Output

The alarm output can be triggered by the alarm input, motion detection, video tampering detection, face detection, line crossing detection, and any all other events.

#### Steps

1. Go to **Linkage Action** of the alarm detection (e.g., motion detection, face detection, line crossing detection, intrusion detection, etc.).
2. In **Trigger Alarm Outputs**, select the alarm output(s) to trigger.
3. Go to **System** → **Event** → **Normal Event** → **Alarm Output** .
4. Select an alarm output item from the list.

### 6.4.7 Configure Audio and Light Alarm Linkage

For certain network cameras, you can set the alarm linkage action as audio alarm or light alarm.

#### Before You Start

- Ensure your camera supports audio and light alarm linkage.
- Ensure the audio output and volume are properly configured.

### Steps

1. Go to the linkage action interface of the alarm detection (e.g., motion detection).
2. Set **Audio and Light Alarm Linkage** as your desire.
3. Click **Apply**.

### 6.4.8 Configure PTZ Linkage

The system can trigger the PTZ actions (e.g., call preset/patrol/pattern) when the alarm event, or VCA detection events occurs.

#### Before You Start

Make sure the connected PTZ or speed dome connected supports PTZ linkage.

### Steps

1. Go to **Linkage Action** interface of the alarm input or VCA detection (e.g., face detection, line crossing detection, intrusion detection, etc.).
2. Select the **PTZ Linkage**.
3. Select the camera to perform the PTZ actions.
4. Select the preset/patrol/pattern No. to call when the alarm events occur.



#### Note

You can set only one PTZ type for the linkage action each time.

---


## Chapter 7 Smart Analysis

### 7.1 Engine Configuration

Each engine processes a specified VCA type as its working mode. You can configure the engine working mode as your desire.

#### Steps

1. Go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** .

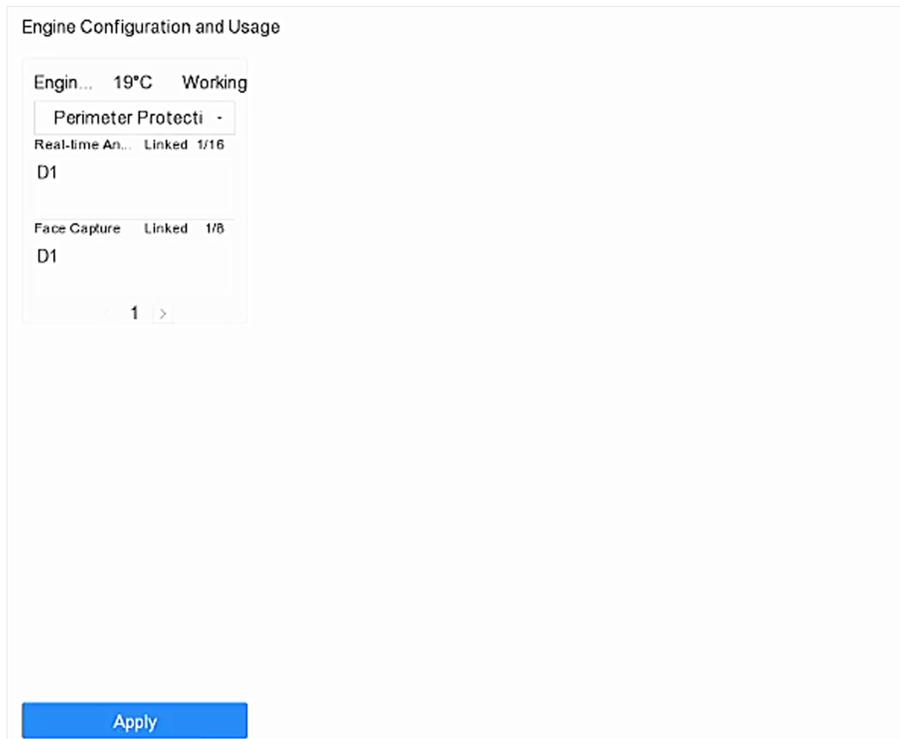

**Figure 7-1 Engine Configuration**

2. Configure each engine usage. You can view the engine temperature and linked channel status of each function.

---

#### **Note**

If the engine has been bound with channel(s), switching engine working mode will unbind the engine and channel(s), and cancel the related smart event of the channel.

3. Click **Apply** to save the settings.

## 7.2 Task Configuration

You can view the task status in task configuration. Smart analysis results are used for filtering the pictures when searching interested human body and vehicle pictures.

### Before You Start

Check **Save VCA Pictures** for human body detection/vehicle detection, line crossing detection, intrusion detection, region entrance, or region exiting.

### Steps



#### Note

The chapter is only available for certain models of iDS series.

1. Go to **Smart Analysis → Engine Settings → Task Configuration**.
2. Check cameras to enable corresponding analysis mode. Ensure engine is available for the selected analysis mode.
3. Enable auto analysis.

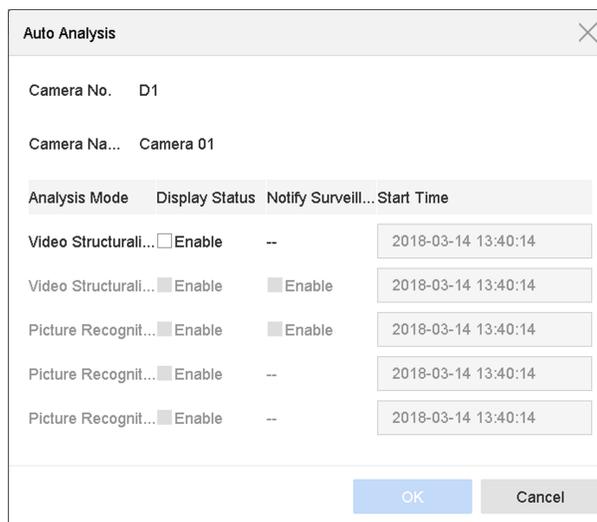


Figure 7-2 Auto Analysis

- 1) Click **Edit**.
  - 2) **Optional**: Check **Enable** of **Display Status** and **Notify Surveillance Center**.
  - 3) Set **Start Time** of video to analyze.
  - 4) Click **OK**.
4. Check cameras and click **Enabled** to start analyzing.

Task status includes 3 conditions: **Disabled**, **Waiting**, and **Enabled**.

#### Disabled

No analysis task is enabled on the camera.

#### Waiting

The analysis task of the camera is enabled. Device is waiting to analyze data.

## Enabled

The analysis task of the camera is enabled and device is analyzing data of the camera.

**5. Optional:** For **Non-Real-Time Face Picture Comparison** analysis mode, click **View Record** to view the progress of each day.

## 7.3 Self-Learning

This chapter is only available for certain models of perimeter protection events.

### 7.3.1 Training Task

Training task is used to improve perimeter protection alarm accuracy. After it is enabled, the device would automatically collect training materials from perimeter protection events. When there are enough materials, the device would run a round of training and update the algorithm at the preset time.

Go to **Smart Analysis** → **Self-Learning** → **Training Task** to enable the function under **Training Task**.

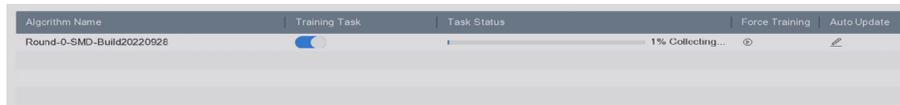


Figure 7-3 Training Task

#### Task Status

The task status for material collection. The progress would reach 100% when enough training materials are collected.

#### Force Training

This function is mainly used for technical supports, and you are not recommended to use it. If the collected materials are not enough, this function can force the device to run a round of training for the current collected materials.

#### Auto Update

After a round of training is completed, the device would automatically update the algorithm according to the preset time.

---

#### Note

- **Training Task** is enabled by default.
  - Enabling **Training Task** would occupy one engine, so the number of available channels for smart analysis may decrease.
  - When the algorithm is upgrading, the number of false alarms may currently be increased.
-

## 7.3.2 Algorithm Management

If the video scene is changed, or the alarm accuracy is not as good as it used to be, you can restore it to previous version or the original version.

Go to **Smart Analysis** → **Self-Learning** → **Algorithm Management** to manage algorithm.

## 7.4 Face Picture Comparison

The device supports the face picture comparison alarm and face capture for the connected camera based on face recognition feature.

Go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** . Configure at least one engine usage as **Facial Recognition**. Refer to [Engine Configuration](#) for details.

---

### Note

The chapter is only available for certain models.

---

### 7.4.1 Face Grading Configuration

Face grading is used for face picture selection. According to pupil distance, tilt angle and pan angle, it only uses face pictures which satisfy grading requirement for analysis. Larger pupil distance, smaller tilt and pan angle, better it would be for analysis.

#### Steps

1. Go to **Smart Analysis** → **Engine Settings** → **Face Grading** .

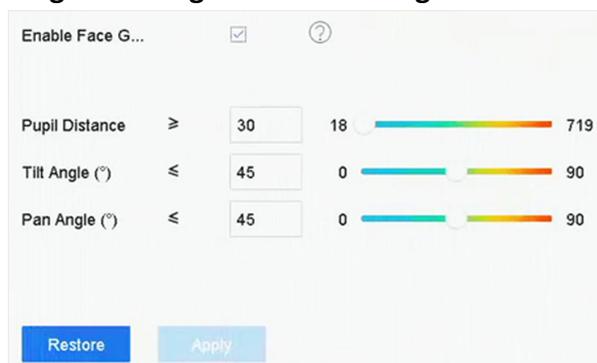


Figure 7-4 Face Grading

2. Check **Enable Face Grading**.

3. Set **Pupil Distance**, **Tilt Angle**, and **Pan Angle**.

#### Pupil Distance

Pupil distance is the distance between two pupils. In order to get better detection result, the pupil distance shall not be less than 40, and the recommended value is 60.

## Tilt Angle

Tilt angle is the angle between your view and horizontal plane.

## Pan Angle

Pan angle is the angle between your view and vertical plane.

4. Click **Apply**.

## What to do next


- After face picture modeling, you can view face grading score of each face picture via web browser in **Configuration → Face Picture Library** .
- You can click  in **Smart Analysis → Face Picture Database** to select face picture by face grading score.

## 7.4.2 Face Capture

The face capture detects and captures faces appearing in the scene. Linkage actions can be triggered when a human face is detected.

### Steps

1. Go to **Smart Analysis → Smart Event Settings → Facial Recognition** .
2. Click **Face Capture**.

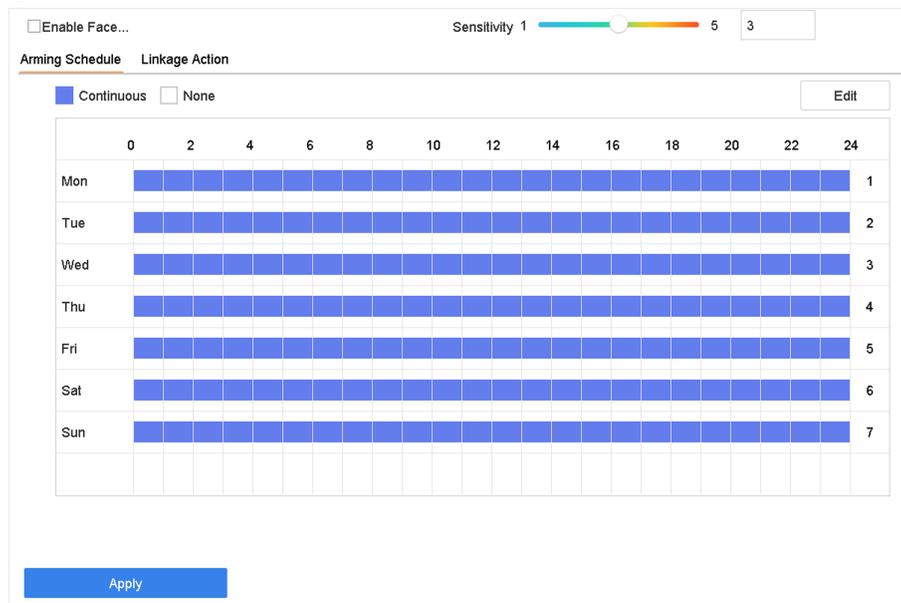

Enable Face... Sensitivity 1  5 3

Arming Schedule Linkage Action

Continuous  None Edit

	0	2	4	6	8	10	12	14	16	18	20	22	24	
Mon	█	█	█	█	█	█	█	█	█	█	█	█	█	1
Tue	█	█	█	█	█	█	█	█	█	█	█	█	█	2
Wed	█	█	█	█	█	█	█	█	█	█	█	█	█	3
Thu	█	█	█	█	█	█	█	█	█	█	█	█	█	4
Fri	█	█	█	█	█	█	█	█	█	█	█	█	█	5
Sat	█	█	█	█	█	█	█	█	█	█	█	█	█	6
Sun	█	█	█	█	█	█	█	█	█	█	█	█	█	7

Apply

Figure 7-5 Face Capture

3. Select a camera to configure.
4. Check **Enable Face Capture**.
5. **Optional:** Check **Save VCA Picture** to save the captured pictures of face detection.
6. Set the detection sensitivity.

---

## Note

Sensitivity range: [1-5]. The higher the value is, the easier faces will be detected.

7. Set the arming schedule. Refer to **Configure Arming Schedule**.
8. Set linkage actions. Refer to **Configure Linkage Actions**.
9. Click **Apply**.

## 7.4.3 Face Picture Library Management

Face picture library is mainly used for face picture storage and face picture comparison.

### Add a Face Picture Library

#### Steps

1. Go to **Smart Analysis → Face Picture Database**.
2. Click **+**.
3. Enter the face picture library name.
4. Click **OK**.

---

## Note

- You can click  or  to edit the library name or delete the library.
- You can click **Delete in Batch** or **Clear in Batch** to delete selected face picture libraries, or clear all face pictures in the selected face picture libraries.

---

### Upload Face Pictures to the Library

Face picture comparison is based on face pictures in the library. You can upload a single face picture or import multiple face pictures to the library.

#### Before You Start

- Ensure the picture format is JPEG or JPG.
- Import all pictures to a backup device in advance.

#### Steps

1. Select a face picture library in the list.
2. Click **Add** or **Import**.
3. Import picture(s).
  - **Add**: Click **Add** to import a face picture.

---

## Note

You can only upload one human face at a time. If the picture has multiple human faces, you have to pick one from them.

---

- **Import:** Click **Import** to import multiple face pictures. The device will use the file name as its face picture name and leave other attributes empty, or import picture files by specified rules. If a picture file has multiple human faces, the device will choose the human face at the center by default.
- 4. Optional:** Select pictures and click **Copy to** to copy the uploaded pictures of the current library to other library.
- 5. Optional:** Select a picture and click **Edit** to modify the picture information.
- 6. Optional:** Select a picture from the list and click **Delete** to delete the picture.
- 7. Optional:** Select a library and click **Export Face Picture Library** to export library to backup device.
- 8. Optional:** Click  or  to view by figure or list.
- 9. Optional:** Click  to search face picture by attributes.

### Library for Strangers

All unrecognized face pictures will be added to **Strangers** library. This library cannot be deleted, and will be unavailable for stranger alarm when you select libraries.

The library name uses **Strangers** by default, you can edit the name as your desire. You can edit, delete, search, and export face pictures in this library. Face pictures in this library can be copy to other libraries. After copying face pictures to other libraries, you can delete them as your desire.

This library displays frequently appeared person frequency if you have lined this library with frequently appeared person alarm.



#### Note

Ensure you have enabled frequently appeared person alarm. Refer to ***Frequently Appeared Person Alarm*** for details.

---

### 7.4.4 Face Picture Comparison Alarm

#### Configure Face Picture Comparison

Compare detected face pictures with specified face picture library. Trigger alarm when comparison succeeded.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Facial Recognition** .
2. Select a camera.
3. Click **Face Picture Comparison**.

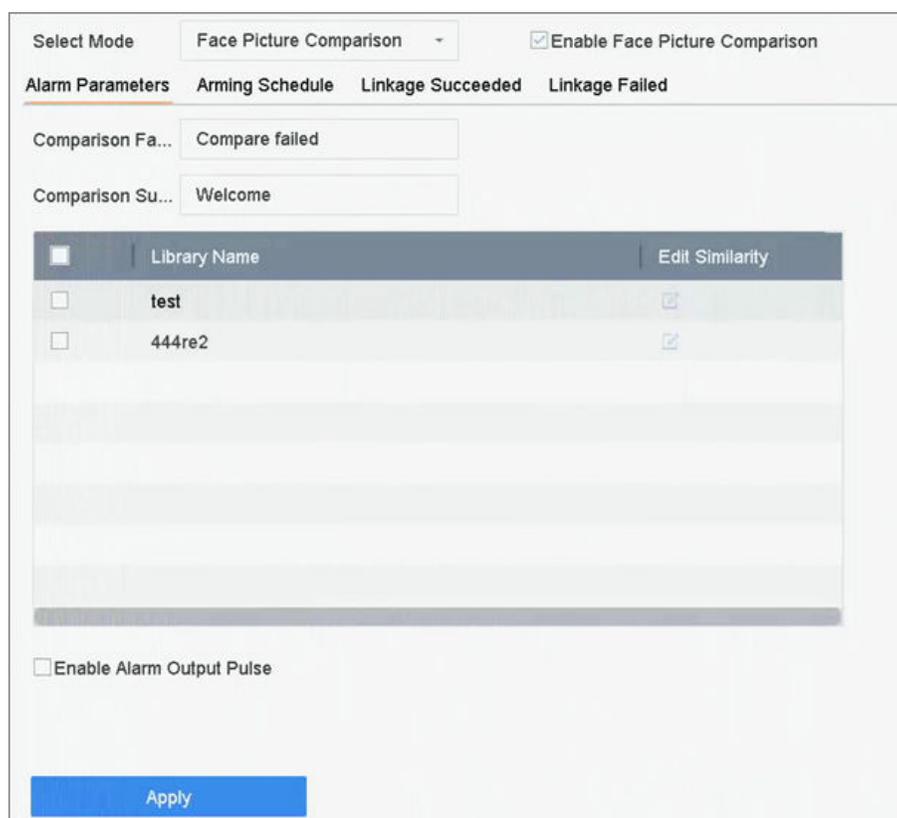


Figure 7-6 Face Picture Comparison

4. Set **Mode** as **Face Picture Comparison**.

5. **Optional:** Check **Enable Non-Real-Time Mode**. For places with a high flow of people, the device processing speed may not be fast enough, **Non-Real-Time Mode** will save the real-time pictures as cache, and process them later when engine has free resource. After enabling this function, all channels will be able to support face picture comparison.

### Note

- When **Non-Real-Time Mode** is enabled, the linkage method will only support **Notify Surveillance Center**.
- **Non-Real-Time Mode** will not trigger real-time alarm, so **Arming Schedule** is unavailable.
- You can search the comparison event results in **File Management** → **Smart Search** → **Face Search** → **Search by Event**.

6. Check **Enable Face Picture Comparison**.

7. **Optional:** Check **Save VCA Picture** to save the captured pictures of VCA detection. After the face picture comparison is enabled, the comparison results will be uploaded for face comparison alarm. If the comparison produced a match, both the real-time face picture and the target picture from the library will be uploaded. If no match is produced, the real-time face picture is uploaded to center only.

8. **Optional:** Set **Comparison Failed Prompt**, **Comparison Succeeded Prompt**, and **Enable Alarm Output Pulse**.

### Comparison Failed Prompt

It will display the prompt in live view **Target** (with **Facial Detection** checked) or **Facial Recognition** when face picture comparison failed. You can click  in live view to enter Facial Recognition interface.

### Comparison Succeeded Prompt

It will display the prompt in **Facial Recognition** when face picture comparison succeeded. You can click  in live view to enter person passing interface.

### Enable Alarm Output Pulse

It is usually linked with a gate. When a person is passing a gate, if the comparison succeeded, it will trigger a pulse to open the gate. The pulse is between 100 to 900 ms. You can set **Alarm Output Pulse (ms)** in **System** → **Event** → **Normal Event** → **Alarm Output** .

9. Select face picture libraries and set similarity.
10. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
11. Set the linkage actions when face picture comparison succeeded or failed. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .
12. **Optional:** Configure face grading parameters. Refer to [\*\*\*Face Grading Configuration\*\*\*](#) .
13. Click **Apply** to save the settings.

### Configure Stranger Alarm

Compare detected face pictures with specified face picture library. Trigger alarm when comparison failed.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Facial Recognition** .
2. Select a camera.
3. Click **Face Picture Comparison**.

The screenshot shows the 'Face Picture Comparison' configuration page. At the top, there is a 'Select Mode' dropdown menu set to 'Stranger' and a checked checkbox for 'Enable Stranger'. Below this are three tabs: 'Alarm Parameters' (which is active), 'Arming Schedule', and 'Linkage Action'. Under the 'Alarm Parameters' tab, there is a 'Stranger Prompt' text input field containing the word 'Stranger'. Below the text input is a table with two columns: 'Library Name' and 'Edit Similarity'. The table has one row with the value 'test' in the 'Library Name' column and an edit icon in the 'Edit Similarity' column. Below the table is a horizontal separator line and a checkbox for 'Enable Alarm Output Pulse', which is currently unchecked. At the bottom of the form is a blue 'Apply' button.

Figure 7-7 Face Picture Comparison

4. Select **Mode** as **Stranger**.
5. **Optional:** Check **Enable Non-Real-Time Mode**. For places with a high flow of people, the device processing speed may not be fast enough, **Non-Real-Time Mode** will save the real-time pictures as cache, and process them later when engine has free resource. After enabling this function, all channels will be able to support face picture comparison.

---

 **Note**

- When **Non-Real-Time Mode** is enabled, the linkage method will only support **Notify Surveillance Center**.
- **Non-Real-Time Mode** will not trigger real-time alarm, so **Arming Schedule** is unavailable.
- You can search the comparison event results in **File Management** → **Smart Search** → **Face Search** → **Search by Event** .

6. Check **Enable Stranger**.
7. **Optional:** Check **Save VCA Picture** to save the captured pictures of VCA detection. After the face picture comparison is enabled, the comparison results will be uploaded for face comparison alarm. If the comparison produced a match, both the real-time face picture and the target picture from the library will be uploaded. If no match is produced, the real-time face picture is uploaded to center only.

**8. Optional:** Set **Stranger Prompt**. It will display the prompt in live view **Target** (Facial Detection) when comparison failed.

### **Stranger Prompt**

It will display the prompt in live view **Target** (with **Facial Detection** checked) when face picture comparison failed.

### **Enable Alarm Output Pulse**

It is usually linked with a gate. When a person is passing a gate, if the comparison succeeded, it will trigger a pulse to open the gate. The pulse is between 100 to 900 ms. You can set **Alarm Output Pulse (ms)** in **System → Event → Normal Event → Alarm Output** .

**9.** Select face picture libraries and set similarity.

**10.** Set the arming schedule. Refer to [Configure Arming Schedule](#) .

**11.** Set the linkage actions. Refer to [Configure Linkage Actions](#) .

**12. Optional:** Configure face grading parameters. Refer to [Face Grading Configuration](#) .

**13.** Click **Apply** to save the settings.

## **7.4.5 People Frequency Alarm**


You can only configure people frequency alarm via web browser.

### **Frequently Appeared Person Alarm**

It will trigger alarm when a person has appeared at a high frequency.

#### **Steps**

**1.** Go to **Configuration → Event → People Frequency → Frequently Appeared Person** .

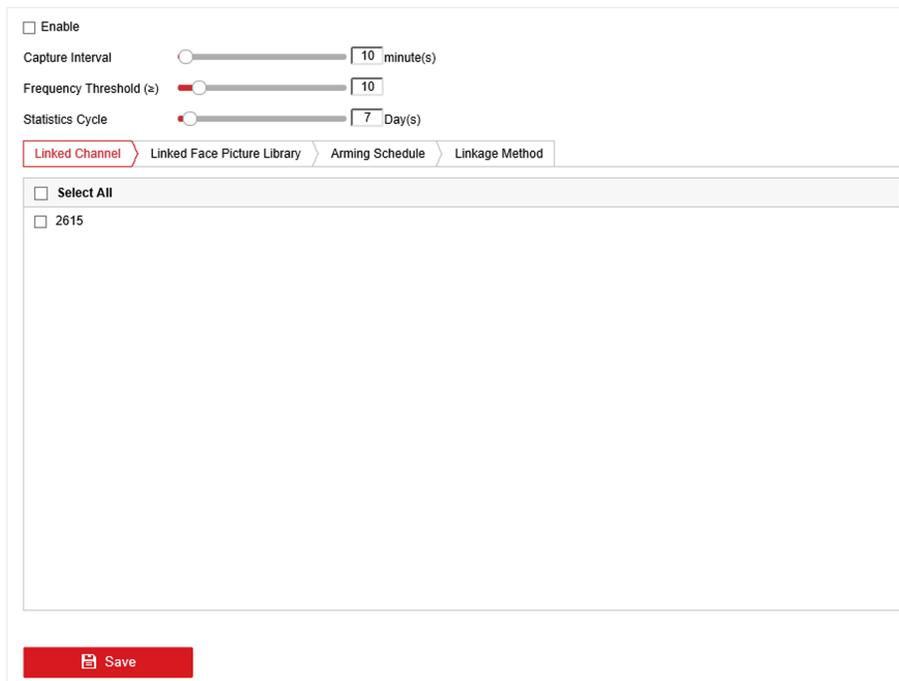

**Figure 7-8 Frequently Appeared Person**

2. Check **Enable**.
3. Set **Capture Interval**, **Frequency Threshold**, and **Statistics Cycle**.

#### **Capture Interval**

When a person has appeared several times within the capture interval, it only counts 1 time for this person.

#### **Frequency Threshold**

It will trigger alarm when the frequency has exceeded the threshold.

#### **Statistics Cycle**

Time period for counting the people frequency. For example, if the statistics cycle is 7 days, device will count people frequency in the last 7 days (including today), if a person has exceeded the frequency threshold in the last 7 days, it will trigger alarm.

4. Click **Linked Channel** to select channel.
5. Click **Linked Face Picture Library** to select face picture library.
6. Set similarity for the selected library.
7. Set strategy as **Filter** or **Alarm**.

#### **Filter**

If the face picture similarity has exceeded the value, the face picture is considered as an existing member in the library, which will not trigger alarm.

#### **Alarm**

It will trigger alarm when the face picture similarity and frequency has exceeded the threshold.

## Note

All unrecognized face pictures will be added to **Strangers** library, so that strangers can also trigger the frequently appeared person alarm, and they use the similarity of **Strangers** library.

8. Set the arming schedule. Refer to **Configure Arming Schedule**.
9. Set linkage actions. Refer to **Configure Linkage Actions**.
10. Click **Save**.

## Rarely Appeared Person Alarm

It will trigger an alarm when a person has appeared at a low frequency.

### Steps

1. Go to **Configuration → Event → People Frequency → Low Frequency Person**.

The screenshot shows the configuration page for the 'Rarely Appeared Person' alarm. At the top, there is an 'Enable' checkbox. Below it are three sliders: 'Capture Interval' set to 10 minute(s), 'Frequency Threshold (<)' set to 7 Time, and 'Statistics Cycle' set to 7 Day(s). A 'Daily Report Time' field is set to 18:00. There are three tabs: 'Linked Channel', 'Linked Face Picture Library', and 'Linkage Method'. The 'Linked Face Picture Library' tab is selected, showing a list with 'Select All' and '2615' items. A red 'Save' button is located at the bottom of the form.

Figure 7-9 Rarely Appeared Person

2. Check **Enable**.
3. Set **Capture Interval**, **Frequency Threshold**, **Statistics Cycle**, and **Daily Report Time**.

### Capture Interval

When a person has appeared several times within the capture interval, the device only counts 1 time for this person.

### Frequency Threshold

It will trigger an alarm when the frequency reaches the threshold.

### Statistics Cycle

Time period for counting the people frequency. For example, if the statistics cycle is 7 days, device will count people frequency in the last 7 days (including today), if a person has not exceeded the frequency threshold in the last 7 days, it will trigger an alarm.

### Daily Report Time

Daily report of low frequency person statistics at the predefined time.

4. Click **Linked Channel** to select channel.
5. Click **Linked Face Picture Library** to select face picture library.
6. Set linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .
7. Click **Save**.

### Aggregation Strategy

Aggregation strategy parameters are used for frequently appeared person alarm. This function is usually used for technical support, please contact our technical support before editing parameters. You can configure the similarity and score via web browser in **Configuration → VCA Configuration → Aggregation Strategy** .

When a person has two or more face pictures in the face library, the aggregation strategy function will aggregate facial features from these face pictures, so as to improve the accuracy of facial recognition and alarm.

### 7.4.6 Face Picture Search

#### Search by Face Picture Comparison Event

Search face picture by face picture comparison results.

##### Steps

1. Go to **Smart Analysis → Smart Search → Face → Search by Event** .
2. Set the start time and end time.
3. Select a channel.
4. Select **Event Type** as **Face Picture Comparison**.
5. Click **Start Search**. The search result list displays 1 channel.
6. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.

##### What to do next

Refer to [\*\*\*View Searching Result\*\*\*](#) .

#### Search by Uploaded Picture

You can search the face pictures by uploaded picture.

## Steps

1. Go to **Smart Analysis** → **Smart Search** → **Face** → **Search by Picture** .

Upload Sample from Local

Upload Sample from Face Picture Database

Not more than 6 pictures for sample cache. 0/0

IP Channel [All] Camera

Time Segment Today 2020-01-13 00:00 2020-01-13 23:59

Similarity(50~100) ≥ 80

Start Search

**Figure 7-10 Search by Uploaded Picture**

2. Select a channel.

3. Select face pictures for search.

- Click **Upload Sample from Local** and select face pictures from your local directory.
- Click **Upload Sample from Face Picture Database** and select face pictures from created face picture libraries.

4. Set the start time and end time.

5. Set the **Similarity** value (range: 50 to 100). The device will analyze the similarity between samples and face pictures in the library, and show pictures of which are higher than the similarity.

6. Click **Start Search**. The search result list displays 1 channel.

7. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.

## What to do next

Refer to [View Searching Result](#) .

## Search by Name

You can search face picture by name, if you know the name of the person.

## Steps

1. Go to **Smart Analysis** → **Smart Search** → **Face** → **Search by Name** .

The screenshot shows a search interface with the following elements:

- IP Channel:** A dropdown menu currently showing "[All] Camera".
- Time Segment:** A dropdown menu showing "Today", followed by two date-time pickers: "2020-01-13 00:00" and "2020-01-13 23:59".
- Name:** An empty text input field.
- Start Search:** A blue button located at the bottom right of the form.

**Figure 7-11 Search by Name**

2. Set the start time and end time of the face pictures to search.
3. Select a channel.
4. Enter a name.
5. Click **Start Search**. If the name is duplicated in the face picture library, you will have to select a name. The search result list displays 1 channel.
6. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.

#### **What to do next**

Refer to [\*\*\*View Searching Result\*\*\*](#) .

## **Search by Appearance**

Search face picture by appearance.

#### **Steps**

1. Go to **Smart Analysis** → **Smart Search** → **Face** → **Search by Appearance** .
2. Set search conditions.
3. Click **Start Search**. The search result list displays 1 channel.
4. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.

#### **What to do next**


Refer to [\*\*\*View Searching Result\*\*\*](#) .

## View Searching Result

- Double click a file to view the related video.
- Click **Add to Face Database** to add the selected file(s) to a face picture library.
- Click **Add to Sample** to add the select file(s) as sample picture(s). You can use the sample picture(s) to search other pictures. Refer to ***Search by Uploaded Picture*** .
- Click **Export** to export the selected file(s) to a backup device. You can click **Select All** to select all files.

---

### Note

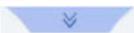- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## 7.5 Perimeter Protection

Go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** . Configure at least one engine usage as **Perimeter Protection**. Refer to ***Engine Configuration*** for details.

---

### Note

The chapter is only available for certain models.

---

### 7.5.1 Line Crossing Detection

Line crossing detection detects people, vehicles, and objects crossing a set virtual line. The detection direction can be set as bidirectional, from left to right or from right to left.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Perimeter Protection** .
2. Select a camera.
3. Click **Line Crossing**.

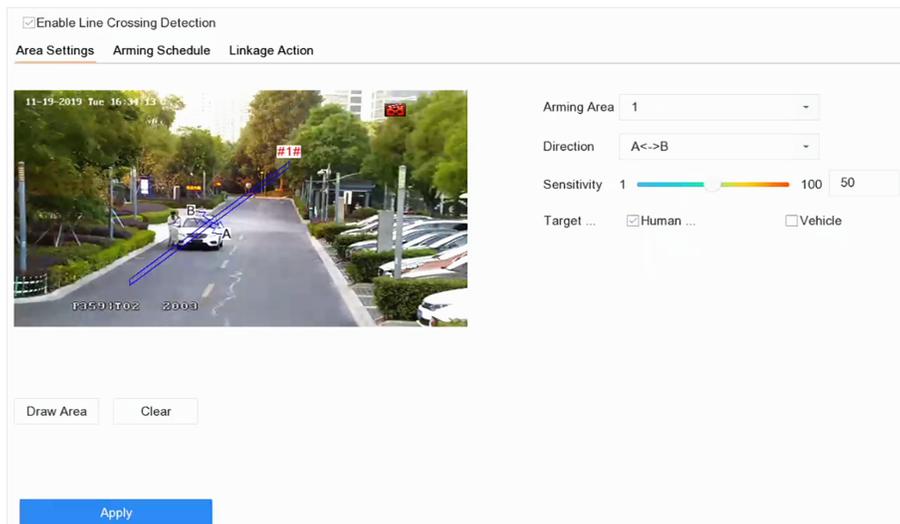


Figure 7-12 Line Crossing Detection

4. Check **Enable Line Crossing Detection**.

5. **Optional:** Check **Save VCA Picture** to save the captured pictures of line crossing detection.

6. **Optional:** Check **Enable AI by Device**.

The device will analyze the video, and cameras only transmit video stream.

7. **Optional:** Set **Shield Area** if **Enable AI by Device** is checked.

### Shield Area

After a shield area is set, the device will not analyze target behavior in the area, so that the perimeter protection events will not be triggered within the area.

---

### Note

- Shield area is only valid for the selected camera.
- After a shield area is set, it will take effect for all perimeter protection events, including line crossing detection, intrusion detection, region entrance detection, and region exiting detection.

---

1) Click **Shield Area**.

2) Check **Enable Shield Area**.

3) Select **Shield Area**.

4) Click **Draw Area**, and draw a quadrilateral in the preview window.

5) Right click your mouse to finish drawing.

6) Click **OK**.

8. Set the line crossing detection rules and detection areas.

1) Select an arming area.

2) Select **Direction** as **A<->B**, **A->B**, or **A<-B**.

### **A<->B**

Only the arrow on the B side shows. When an object goes across the configured line with both directions can be detected and alarms are triggered.

### A->B

Only the object crossing the configured line from the A side to the B side can be detected.

### B->A

Only the object crossing the configured line from the B side to the A side can be detected.

3) Set the detection sensitivity. The higher the value is, the more easily the detection alarm can be triggered.

4) Click **Draw Region**.

5) Draw a virtual line in the preview window.

9. **Optional:** Draw the maximum size/minimum size for targets.

---



### Note

Only the targets in the size ranging from maximum size to minimum size will trigger line crossing detection.

---

1) Click **Max. Size/Min. Size**.

2) Draw an area in preview window.

3) Click **Stop Drawing**.

10. **Optional:** Select **Detection Target** as **Human** or **Vehicle** to discard alarms which are not triggered by human or vehicle.

11. Set the arming schedule. Refer to [Configure Arming Schedule](#).

12. Set linkage actions. Refer to [Configure Linkage Actions](#).

13. Click **Apply**.

## 7.5.2 Intrusion Detection


Intrusion detection function detects people, vehicles or other objects that enter and loiter in a pre-defined virtual region. Specific actions can be taken when an alarm is triggered.

### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Perimeter Protection**.

2. Select a camera.

3. Click **Intrusion**.

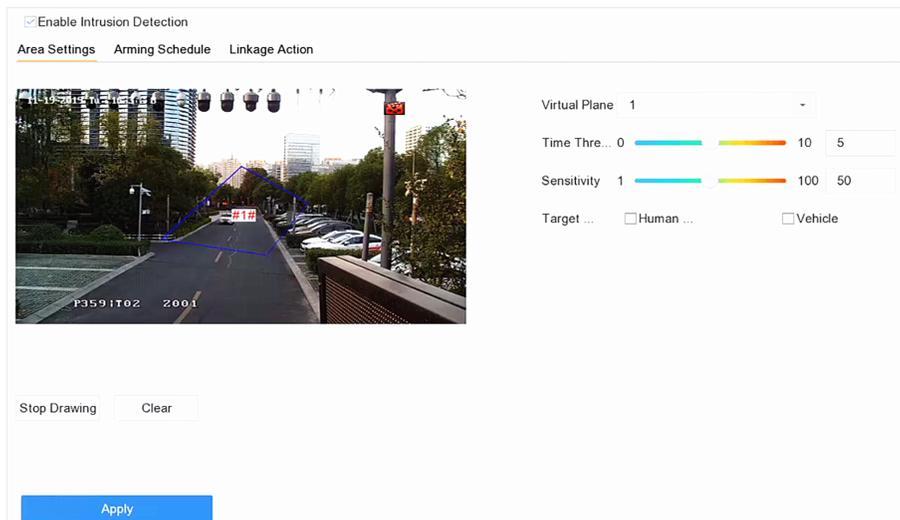

**Figure 7-13 Intrusion Detection**

4. Check **Enable Intrusion Detection**.

5. **Optional:** Check **Save VCA Picture** to save the captured intrusion detection pictures.

6. **Optional:** Check **Enable AI by Device**.

The device will analyze the video, and cameras only transmit video stream.

7. **Optional:** Set **Shield Area** if **Enable AI by Device** is checked.

### Shield Area

After a shield area is set, the device will not analysis target behavior in the area, so that the perimeter protection events will not be triggered within the area.

---

### Note

- Shield area is only valid for the selected camera.
- After a shield area is set, it will take effect for all perimeter protection events, including line crossing detection, intrusion detection, region entrance detection, and region exiting detection.

---

1) Click **Shield Area**.

2) Check **Enable Shield Area**.

3) Select **Shield Area**.

4) Click **Draw Area**, and draw a quadrilateral in the preview window.

5) Right click your mouse to finish drawing.

6) Click **OK**.

8. Set the detection rules and detection areas.

1) Select a virtual panel. Up to 4 virtual panels are selectable.

2) Set **Time Threshold**, and **Sensitivity**.

### Time Threshold

The time an object loiter in the region. When the duration of the object in the defined detection area exceeds the threshold, the device will trigger an alarm.

## Sensitivity

Sensitivity is the object size which is able to trigger an alarm. The higher the sensitivity is, the more easily the detection alarm will be triggered.

3) Click **Draw Area**.

4) Draw a quadrilateral in the preview window.

**9. Optional:** Draw the maximum size/minimum size for targets.

---



### Note

Only the targets in the size ranging from maximum size to minimum size will trigger Intrusion detection.

---

1) Click **Max. Size/Min. Size**.

2) Draw an area in preview window.

3) Click **Stop Drawing**.

**10. Optional:** Select **Detection Target** as **Human** or **Vehicle** to discard alarms which are not triggered by human or vehicle.

**11.** Set the arming schedule. Refer to [Configure Arming Schedule](#).

**12.** Set linkage actions. Refer to [Configure Linkage Actions](#).

**13.** Click **Apply**.

## 7.5.3 Region Entrance Detection

Region entrance detection detects objects that enter a predefined virtual region.

### Steps

**1.** Go to **Smart Analysis** → **Smart Event Settings** → **Perimeter Protection**.

**2.** Select a camera.

**3.** Click **Region Entrance Detection**.

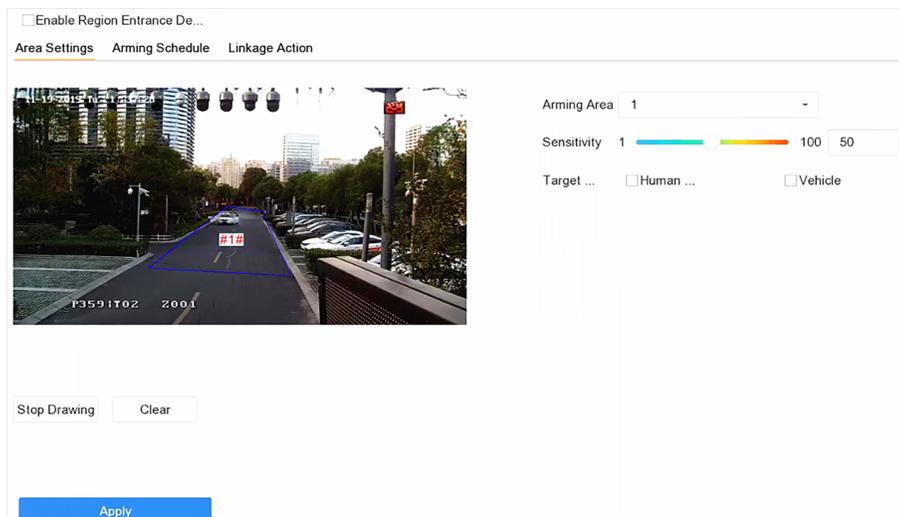


Figure 7-14 Region Entrance Detection

**4. Check **Enable Region Entrance Detection**.**

**5. Optional:** Check **Save VCA Picture** to save the captured pictures of region entrance detection pictures.

**6. Optional:** Check **Enable AI by Device**.

The device will analyze the video, and cameras only transmit video stream.

**7. Optional:** Set **Shield Area** if **Enable AI by Device** is checked.

### Shield Area

After a shield area is set, the device will not analysis target behavior in the area, so that the perimeter protection events will not be triggered within the area.



### Note

- Shield area is only valid for the selected camera.
- After a shield area is set, it will take effect for all perimeter protection events, including line crossing detection, intrusion detection, region entrance detection, and region exiting detection.

---

1) Click **Shield Area**.

2) Check **Enable Shield Area**.

3) Select **Shield Area**.

4) Click **Draw Area**, and draw a quadrilateral in the preview window.

5) Right click your mouse to finish drawing.

6) Click **OK**.

**8. Set detection rules and detection areas.**

1) Select **Arming Region**. Up to 4 regions are selectable.

2) Set **Sensitivity**. The higher the value is, the easier the detection alarm will be triggered. Its range is [0-100].

3) Click **Draw Region**, and draw a quadrilateral in the preview window.

**9. Optional:** Draw the maximum size/minimum size for targets. Only the targets in the size ranging from maximum size to minimum size will trigger line crossing detection.

1) Click **Max. Size/Min. Size**.

2) Draw an area in preview window.

3) Click **Stop Drawing**.

**10. Optional:** Select **Detection Target** as **Human** or **Vehicle** to discard alarms which are not triggered by human or vehicle.

**11.** Set the arming schedule. Refer to **Configure Arming Schedule**.

**12.** Set linkage actions. Refer to **Configure Linkage Actions**.


**13.** Click **Apply**.

### 7.5.4 Region Exiting Detection

Region exiting detection detects objects that exit from a predefined virtual region.

## Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Perimeter Protection** .
2. Select a camera.
3. Click **Region Exiting**.

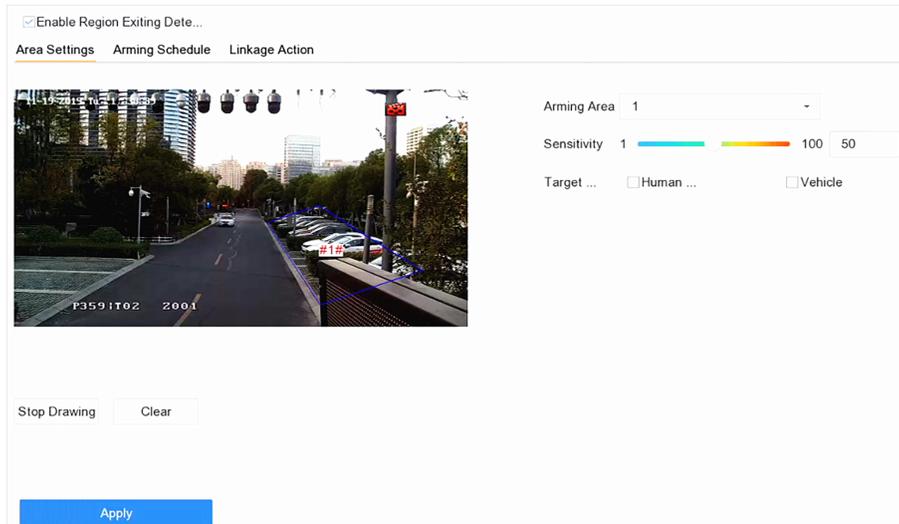

**Figure 7-15 Region Exiting Detection**

4. Check **Enable Region Exiting Detection**.
5. **Optional:** Check **Save VCA Picture** to save the captured region exiting detection pictures.
6. **Optional:** Check **Enable AI by Device**.  
The device will analyze the video, and cameras only transmit video stream.
7. **Optional:** Set **Shield Area** if **Enable AI by Device** is checked.

### Shield Area

After a shield area is set, the device will not analysis target behavior in the area, so that the perimeter protection events will not be triggered within the area.

---

### Note

- Shield area is only valid for the selected camera.
- After a shield area is set, it will take effect for all perimeter protection events, including line crossing detection, intrusion detection, region entrance detection, and region exiting detection.

- 
- 1) Click **Shield Area**.
  - 2) Check **Enable Shield Area**.
  - 3) Select **Shield Area**.
  - 4) Click **Draw Area**, and draw a quadrilateral in the preview window.
  - 5) Right click your mouse to finish drawing.
  - 6) Click **OK**.
8. Follow these steps to set the detection rules and detection areas.
    - 1) Select **Arming Region**. Up to 4 regions are selectable.

- 2) Set **Sensitivity**. The higher the value is, the more easily the detection alarm will be triggered. Its range is [0-100].
- 3) Click **Draw Region** and draw a quadrilateral in the preview window.
9. **Optional:** Draw the maximum size/minimum size for targets. Only the targets in the size ranging from maximum size to minimum size will trigger line crossing detection.
  - 1) Click **Max. Size/Min. Size**.
  - 2) Draw an area in preview window.
  - 3) Click **Stop Drawing**.
10. **Optional:** Select **Detection Target** as **Human** or **Vehicle** to discard alarms which are not triggered by human or vehicle.
11. Set the arming schedule. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#) .
12. Set linkage actions. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#) .
13. Click **Apply**.

## 7.6 Human Body Detection

Go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** . Configure at least one engine usage as **Picture Recognition-Human Body**. Refer to [\*\*\*Engine Configuration\*\*\*](#) for details.

Go to **Smart Analysis** → **Engine Settings** → **Task Configuration** to enable the task for camera. For details, refer to [\*\*\*Task Configuration\*\*\*](#) for details.



### Note

The chapter is only available for certain models of iDS series.

---

### 7.6.1 Human Body Detection

The human body detection enables to detect the human body appearing in the monitoring scene, and capture the human body pictures.


#### Before You Start

Ensure the connected camera supports the human body detection.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Other Events** .
2. Select a camera.
3. Click **Human Body**.
4. **Optional:** For IP camera does not support human body detection, Check **Enable Local Human Body Detection**. Then the device will consume its decoding resource to execute human body detection. Before enabling the function, go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** to select at least one engine as **Video Structuralization-Real-Time**.
5. Check **Save VCA Picture** to save the captured pictures of human body detection.

6. Check **Target of Interest (Human Body)** to discard non-human body pictures and videos which are not triggered by human body detection. The feature is only available for local human body detection.
7. Set detection area.

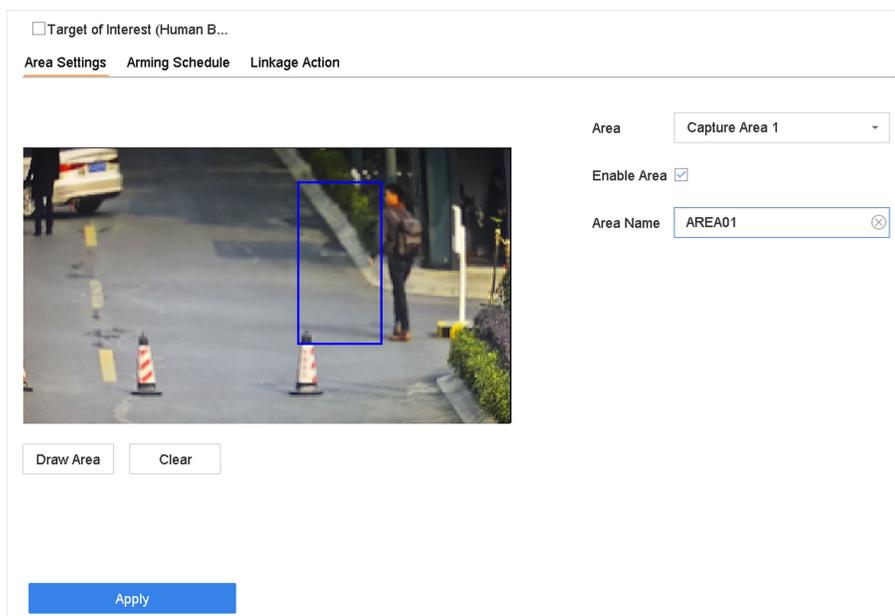

**Figure 7-16 Human Body Detection**

- 1) Select the detection area to configure from the Area drop-down list. Up to 8 detection areas are selectable.
  - 2) Check **Enable Area** to enable the selected detection area.
  - 3) Edit the area name in **Scene Name**. The scene name can contain up to 32 characters.
  - 4) Click **Draw Area** to draw a quadrilateral in the preview window and then click **Stop Drawing**.
8. Set the arming schedule. Refer to **Configure Arming Schedule**.
  9. Set linkage actions. Refer to **Configure Linkage Actions**.
  10. Click **Apply** to activate the settings.

### 7.6.2 Human Body Search

#### Search by Human Body Event

Search pictures by human body detection alarms.

##### Steps

1. Go to **Smart Analysis** → **Smart Search** → **Human** → **Search by Event**.
2. Set the start time and end time.
3. Select a channel.
4. Select **Event Type** as **Human Body Alarm**.
5. Click **Start Search**. The search result list displays 1 channel.

6. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.
7. **Optional:** Export search results.
  - 1) Select result file(s) from the search result interface, or check **Select All** to select all files.
  - 2) Click **Export** to export the selected file(s) to a backup device.

---

### Note

- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## Search by Appearance

Search human body pictures according to manually specified search conditions.

### Steps

1. Go to **Smart Analysis** → **Smart Search** → **Human** → **Search by Appearance** .
2. Specify search conditions.
3. Click **Start Search**. The search result list displays 1 channel.
4. Click **Channel** to select a channel as your desire. It will display search results for the selected channel.
5. **Optional:** Export search results.
  - 1) Select result file(s) from the search result interface, or check **Select All** to select all files.
  - 2) Click **Export** to export the selected file(s) to a backup device.

---

### Note

- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## Search by Uploaded Picture

To increase search accuracy, upload several pictures of one person to compare with captured human body pictures.

### Before You Start

Import human body pictures in a USB flash drive and connect it to device.

### Steps

---

### Note

- When there are multiple targets existing in the same picture, up to 30 target pictures can be analyzed and displayed.
  - The maximum allowed picture size is 3840\*2160.
  - The picture must be in JPG or JPEG format.
-

- The picture name (with the suffix) cannot exceed 64 characters.
  - Ensure the picture you uploaded is clear and recognizable.
- 

1. Go to **Smart Analysis** → **Smart Search** → **Human** → **Search by Picture** .
2. Select a channel.
3. Click **Upload Sample**.
4. Click **Upload Sample from Local** and select face pictures from your local directory.
5. Set the start time and end time.
6. Select a picture in USB flash drive, and click **Import**.
7. Select related pictures, and click **Upload**.
8. Specify search conditions.

### Similarity

Device will analyze the similarity between samples and face pictures in library and show pictures the similarity of which are higher than the set one.

9. Click **Start Search**. The search result list displays 1 channel.
  10. Click **Channel** to select a channel as your desire. It will display searching results for the selected channel.
  11. **Optional:** Export search results.
    1. Select result file(s) from the search result interface, or check **Select All** to select all files.
    2. Click **Export** to export the selected file(s) to a backup device.
- 

### Note

- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## Add Search Result as Sample Picture

You can add searched human body pictures as sample pictures. And then search human body pictures by the sample pictures.

### Steps

1. Search human body pictures.
2. In search result interface, click to select a picture and click **Add to Sample**.
3. Return to search condition settings interface, the selected sample will be listed.

## 7.7 Multi-Target-Type Detection

Multi-target-type detection enables the device to detect the faces, human bodies and vehicles simultaneously in a scene.

### Before You Start

Go to **Smart Analysis** → **Engine Settings** → **Engine Configuration** to configure at least one engine usage as **Video Structuralization-Real-Time**. Refer to [Engine Configuration](#) for details.

## Steps

---



The chapter is only available for certain models of iDS series.

---

1. Go to **Smart Analysis** → **Smart Event Settings** → **Video Structuralization** .
2. Select a camera.
3. Check **Enable Multi-Target-Type Detection**.
4. **Optional:** Check **Save VCA Picture** to save the captured intrusion detection pictures.
5. **Optional:** Check **Enable NVR Smart Analysis**. The device will analyze the video, cameras only transmit video stream.
6. Set detection area.
  - 1) Click **Draw Area**.
  - 2) Adjust the red frame on the image to draw the detection area. It is full screen by default.
  - 3) Click **Stop Drawing**.
7. **Optional:** Set **Capture Quality**. The captured picture will be stored to the device, high quality brings higher resolution, but it takes larger storage space. Picture quality will not affect detection accuracy.
8. Set the arming schedule. Refer to [\*Configure Arming Schedule\*](#) .
9. Set the linkage method. Refer to [\*Configure Linkage Actions\*](#) .
10. Click **Apply**.

## 7.8 Vehicle Detection

Vehicle detection is available for the road traffic monitoring. In vehicle detection, the passed vehicle can be detected and the picture of its license plate can be captured.

### 7.8.1 Configure Vehicle Detection

Vehicle detection, available in the road traffic monitoring, is tend to detect the passed vehicle on the road, and capture its license plate at the same time.

#### Steps

1. Go to **Smart Analysis** → **Smart Event Settings** → **Vehicle Detection** .
2. Select a camera.
3. Click **Vehicle**.
4. Check **Enable Vehicle Detection**.
5. **Optional:** Check **Save VCA Picture** to save the captured vehicle detection pictures.
6. Configure rules, including **Area Settings**, **Picture**, **Overlay Content**, and **Blocklist and Allowlist**.
  - Area Settings**  
Up to 4 lanes are selectable.
  - Blocklist and Allowlist**

You can export the file first to see its format, and edit it and import it to the device.

### 7. Click **Apply**.



Refer to *Network Camera User Manual* for detailed instructions for the vehicle detection.

### 8. Set the arming schedule. Refer to **Configure Arming Schedule**.

### 9. Set the linkage actions. Refer to **Configure Linkage Actions**.

## 7.8.2 Vehicle Search

You can search and view the matched vehicle pictures.

### Steps

1. Go to **Smart Analysis** → **Smart Search** → **Vehicle**.
2. Select a search method. For example, **Search by Appearance**, or **Search by Event**.
3. Select the IP camera for the vehicle search.
4. Set search conditions.
5. Click **Start Search**. The search result list displays 1 channel.
6. Click **Channel** to select a channel as your desire. It will display searching results for the selected channel.
7. Export search results.
  - 1) Select result file(s) from the search result interface, or check **Select All** to select all files.
  - 2) Click **Export** to export the selected file(s) to a backup device.



- You can click  to view export progress.
  - You can click  to return to search interface.
- 

## 7.9 Object Thrown from Building

This function can identify the event of throwing objects from building and identify the real target.

### Steps

1. Go to **Configuration** → **VCA** → **Object Thrown from Building** via web browser.

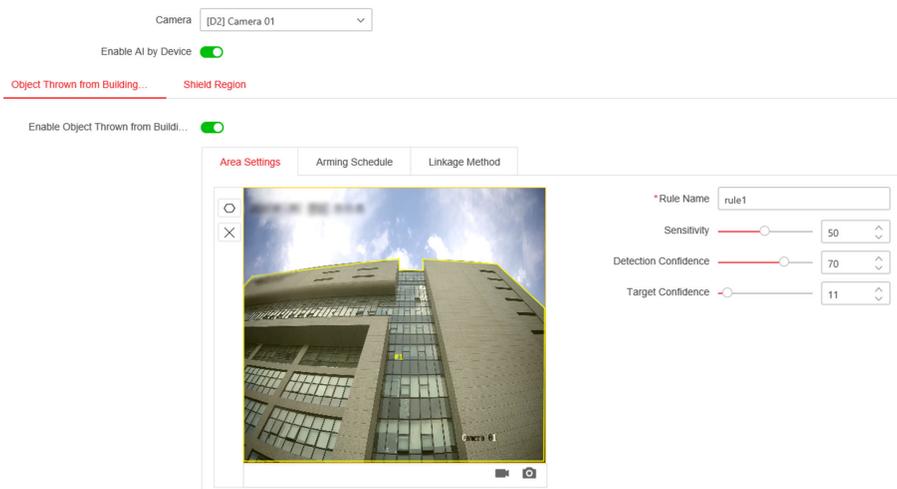


Figure 7-17 Object Thrown from Building

2. Select a camera.

3. **Optional:** Check **Enable AI by Device** if this event shall be analyzed by the video recorder.

### Note

- If **Enable AI by Device** is turned on, at least one engine mode should be configured as **Object Thrown from Building**.
- If the selected camera can analyze this event by itself, you can choose to disable **Enable AI by Device**, and let the camera do the analysis.

4. Check **Enable Object Thrown from Building**.

5. Click **Area Settings** and click  to draw rule area.

### Note

- a. Click  to start drawing, left click each time on the screen to determine a vertex, right click to stop drawing. The inside of the drawn polygon is the shielded area. If you make a mistake, you can click  and redraw.
- b. It is recommended to draw the detection area according to the outline of the building in the screen.

6. Enter **Rule Name**. The default name is rule 1.

7. Set the detection parameters.

### Sensitivity

Used to detect and filter object(s) that are definitely not thrown from the building. The higher the value, the greater the possibility of a false alarm. Default value of 50 is recommended.

### Detection Confidence

Used to detect suspicious object(s) in the detection area. The lower the value, the easier it is to detect the object in the video and make a judgment. Default value of 50 is recommended.

### Target Confidence

Used to determine if the target is a real object thrown from building. The lower the value, the easier it is for a detected object in the video to be determined as an object thrown from building, and the greater the likelihood of a false alarm. Default value of 50 is recommended.


---

## Note

Default value is recommended at first. Adjustment can be made if false alarm is triggered frequently during the operation. Target confidence is recommended to be adjusted initially, and detection confidence is recommended to be adjusted later if no sound detection results provided. If still, there is no obvious effect, then adjust the sensitivity.

---

8. Click **Save**.
9. Click **Arming Schedule**. Refer to [\*\*\*Configure Arming Schedule\*\*\*](#).
10. Click **Linkage Method**. Refer to [\*\*\*Configure Linkage Actions\*\*\*](#).
11. Configure **Shield Region**.

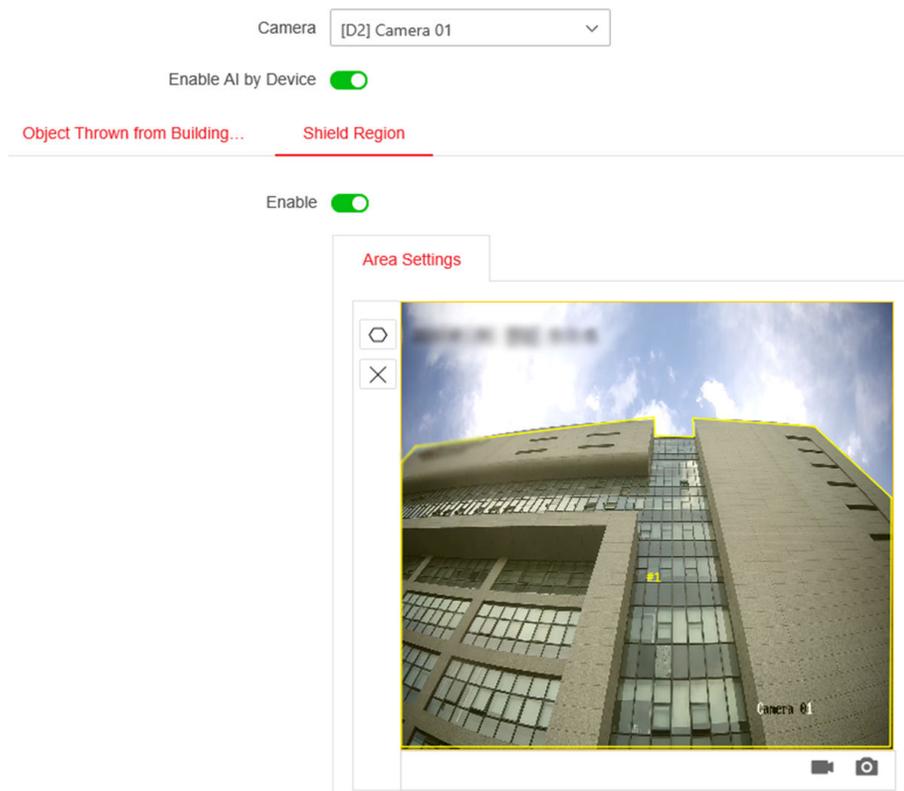

**Figure 7-18 Shield Region**

1. Click **Shield Region**.
2. Draw the region.

## Note

- If there are parts of the screen (either within or outside the detection area) that do not need to be detected (such as an area where the light jumps from time to time or leaves often drift by and trigger false alarms, etc.), you can draw it as a shield region.
- Click  to start drawing, left click each time on the screen to determine a vertex, right click to stop drawing. The inside of the drawn polygon is the shielded area. If you make a mistake, you can click  and redraw.
- 8 shield regions are supported.

12. Click **Save**.

## 7.10 Face Counting


The function is used to count the customer traffic at specific scenes, such as supermarkets, shops, etc.

### Before You Start

Configure at least one engine usage as **Facial Recognition**. Refer to [Engine Configuration](#) for details.

### Steps

1. Go to **Configuration → VCA → Face Counting → Counting Group** via web browser.

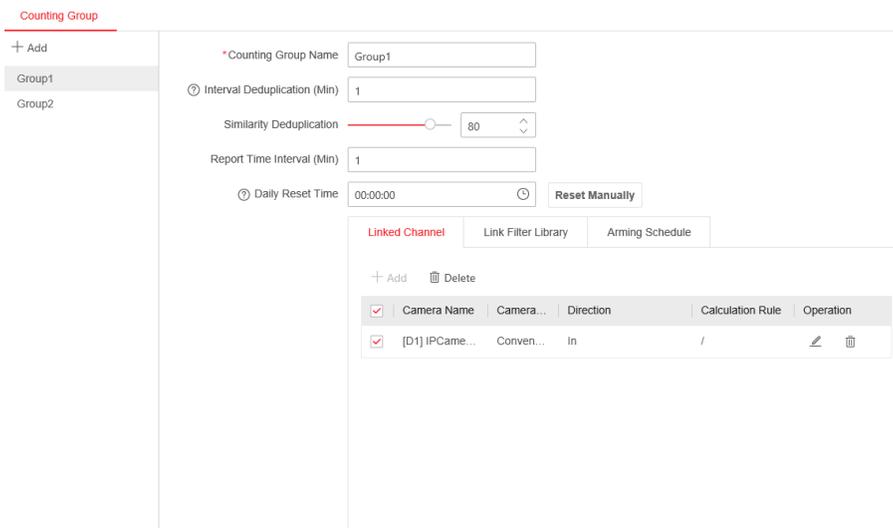

**Figure 7-19 Configure Face Counting**

- Click **Add** to add a group. A group can contain several cameras in the same scene.
- Set group parameters.

### Deduplication Interval

If a person appears several times within one deduplication interval, the frequency will be counted as one. Otherwise, the frequency will be counted as several times.

## Deduplication Similarity

If several similar face pictures are captured in the scene, the device would regard the face pictures as the same person when the similarity of these face pictures reaches the threshold.


## Report Time Interval

The device will automatically report the counting data to the platform according to the time interval.

## Daily Reset Time

The device will reset the time of the deduplication library everyday.

4. Click **Linked Channel**.
5. Click **Add** to add channel(s) to the group.
6. Set the customer traffic direction.

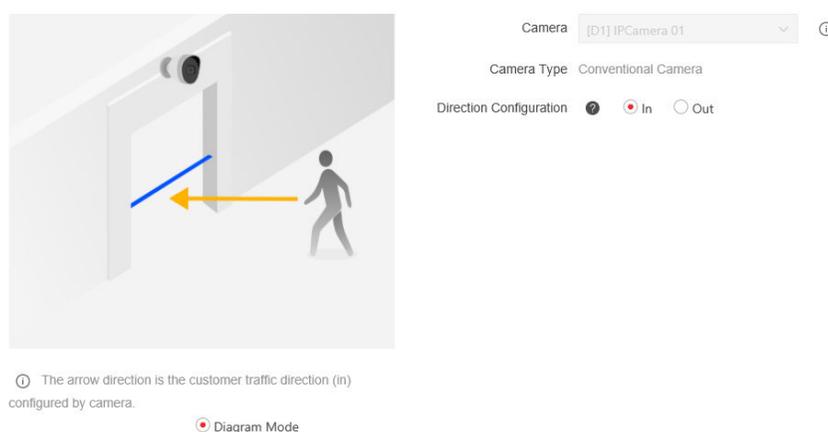

**Figure 7-20 Set Customer Traffic Direction**

---

### Note

The operation interface may vary according to different camera types.

7. **Optional:** Click **Link Filter Library** to select libraries for face picture filtering. If a captured face picture is similar with the ones in the selected libraries, and its similarity reaches the threshold, then the captured face picture will not be counted in to the customer traffic data.

---

### Note

You can configure face picture library in **Configuration → Face Picture Library** via web browser.

8. Set **Arming Schedule**. Refer to **Configure Arming Schedule** for details.
9. Repeat above steps to add other groups or cameras as your desire.
10. Click **Save**.

## What to do next

Counting results can be viewed through specified client softwares and platforms.

## 7.11 Target Detection

In live view mode, the target detection function can achieve smart detection, facial detection, vehicle detection, and human body detection during the last 5 seconds and the following 10 seconds.

### Steps

1. In live view mode, click **Target** to enter the target detection interface.
2. Select different detection types: smart detection (  ), vehicle detection (  ), facial detection (  ), and human body detection (  ).

---

### Note

- a. To enable the detection of throwing objects from building, ensure smart detection (  ) has been checked. When the target is identified, the detected view will be displayed on the left. Meanwhile, the box will display the detected object. (If there is a suspicious target, the parabola will turn green. If there is a real target and the alarm is triggered, the parabola will turn red. )
  - b. For thermal cameras, the temperature measurement event is in smart detection (  ), the face capture and facial temperature measurement are in facial detection (  ).
3. Click  to set alarm configuration.
    - 1) Select IP Camera(s) and IoT channel(s), and complete access control event display settings.

#### Display Pop-Up

Enable this function, the pop-up including person type information, body temperature and mask-wearing status (optional) will be displayed once the alarm is triggered.

#### Mask Not Wearing Event

Temperature units including Celsius degree and Fahrenheit degree of the detected target are available. Enable this function, when the target does not wear mask, the pop-up will show yellow. Meanwhile, if the target has exceptional body temperature, the pop-up will turn red.

4. Select the historical analysis (  ) or real-time analysis (  ) to obtain the results.

---

### Note

The smart analysis results of the detection are displayed in the list. Click a result in the list to play the related video.

---


## 7.12 People Counting

People counting calculates the number of people entering or leaving a certain configured area and creates daily/weekly/monthly/annual reports for analysis.

### Steps

1. Go to **Smart Analysis** → **Smart Report** → **Counting** .

2. Select a camera.
3. Select the report type.
4. Set **Date** to analyze.

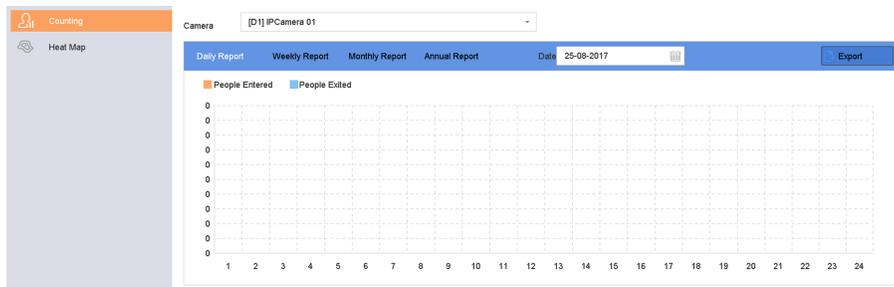

**Figure 7-21 People Counting**

5. **Optional:** Click **Export** to export the report in Microsoft Excel format.

## 7.13 Heat Map


Heat map is a graphical representation of data. The heat map function is used to analyze how many people visited and stayed in a specific area.

### Before You Start

The function must be supported by the connected IP camera and the corresponding parameters must be set.

### Steps

1. Go to **Smart Analysis** → **Smart Report** → **Heat Map**.
2. Select a camera.
3. Select the report type.
4. Set **Date** to analyze.

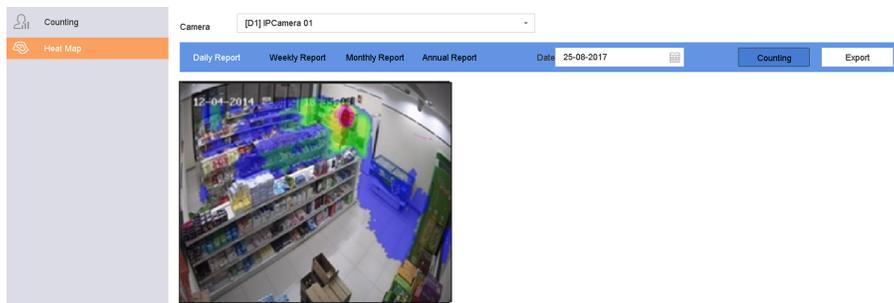

**Figure 7-22 Heat Map**

5. Click **Counting**.

---

### **Note**

As shown in the figure above, red color block (255, 0, 0) indicates the most trafficked area, and blue color block (0, 0, 255) indicates the less-popular area.

---

The results will be displayed in graphics marked in different colors.

**6. Optional:** Click **Export** to export the statistics report in Microsoft Excel format.

## Chapter 8 IoT

IoT (Internet of Things) feature allows you to build connections between your video recorder and IoT devices, including access control and alarm devices. Video recorder will receive alarms from connected IoT devices. You can configure linkage actions like triggering recording and full screen monitoring, when IoT alarm occurs.

### 8.1 Add an IoT Device



Maximum number of IoT channel is the half of maximum network camera number of your video recorder.

---

#### 8.1.1 Add an Access Control Device


Add Hikvision alarm host and video intercom devices to receive alarms. You can configure linkage actions like triggering recording and full screen monitoring, when an alarm occurs.

##### Before You Start

Install access control devices. Ensure network communication between access control devices and video recorder is well.

##### Steps

1. Go to **Business Application** → **IoT** → **Access Control** → **Device Management** .
2. Click **Add**.

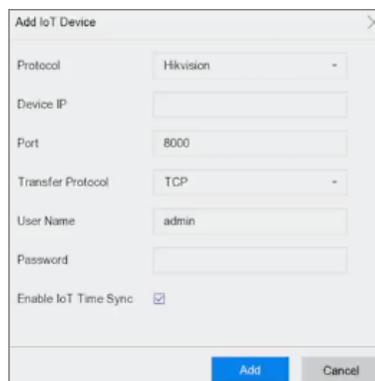


**Figure 8-1 Access Control**

3. Enter access control device information. **Device IP**, **Port**, **Transfer Protocol**, **User Name**, and **Password** must be the same with access control device.
4. **Optional**: Check **Enable IoT Time Sync** as your desire.

## Note

All IoT channels can be enabled/disabled with shortcuts.

- a. Go to **Maintenance** → **System Service** → **More Settings** .
- b. Click **Time Sync Configuration**, select **Enable IoT Time Sync** or **Disable IoT Time Sync** to enable/disable scheduled time sync for all IoT channels.

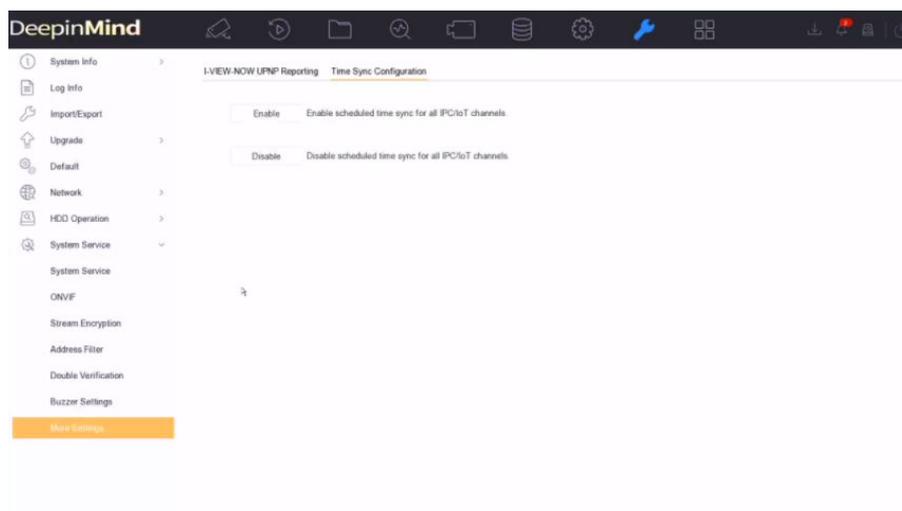

**Figure 8-2 IoT Time Sync**

This function is only available for the admin user.

- 
5. Click **Add**.

## 8.1.2 Add an Alarm Device


Add alarm devices of various manufacturers to receive alarms. You can configure linkage actions like triggering recording and full screen monitoring, when an alarm occurs.

### Before You Start

Install alarm devices. Ensure network communication between alarm devices and video recorder is well.

### Steps

1. Go to **Business Application** → **IoT** → **Alarm** → **Device Management** .
2. Click **Add**.

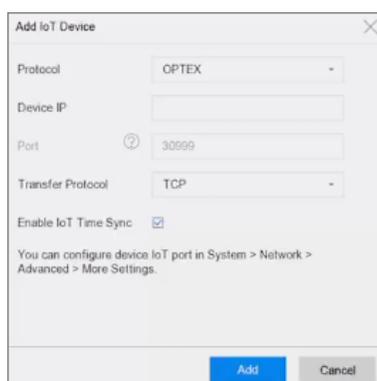

**Figure 8-3 Alarm Device**


3. Enter access control device information. The information must be the same with the alarm device to add.
4. **Optional:** Check **Enable IoT Time Sync** as your desire.

---

 **Note**

All IoT channels can be enabled/disabled with shortcuts.

- a. Go to **Maintenance** → **System Service** → **More Settings** .
- b. Click **Time Sync Configuration**, select **Enable IoT Time Sync** or **Disable IoT Time Sync** to enable/disable scheduled time sync for all IoT channels.

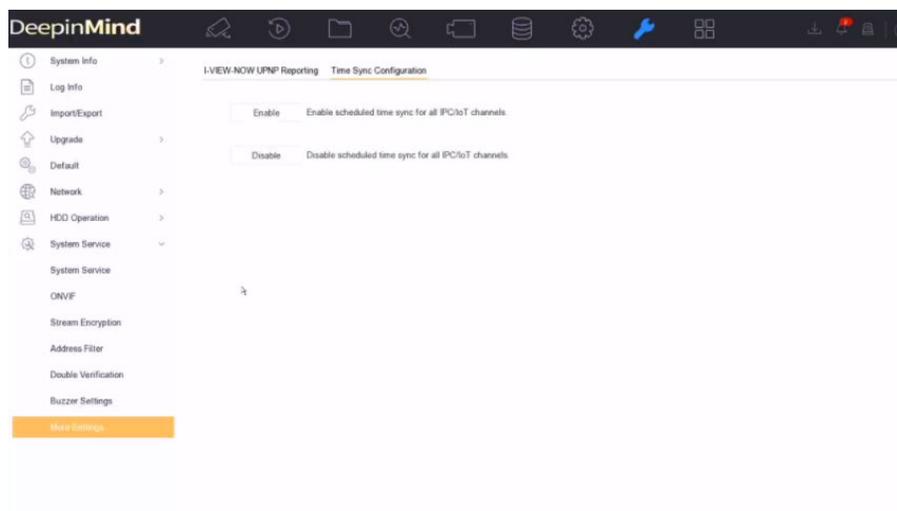

**Figure 8-4 IoT Time Sync**

This function is only available for the admin user.

5. Click **Add**.

### 8.1.3 Add Network Audio Device

Network audio devices can also be added to your recorder, and the audios can be recorded. If a network camera does not have a pick-up, or the recorded audio is not useful, an audio device can be linked with the camera to replenish the audio effect.

#### Before You Start

Ensure the network audio device is properly connected.

#### Steps

1. Go to **Business Application** → **IoT** → **Audio** → **Device Management** .
2. Click **Add**.
3. Set the device parameters, including IP address, password, etc.

#### Link Network Camera

You can link the audio device to a network camera. After the linkage succeeded, the audio of network camera would be replaced with this audio device.

4. Click **Add**.
5. **Optional:** Click  to play the real-time audio.
6. **Optional:** Click  to edit device parameters.
7. **Optional:** Click **Delete** to play the delete the device.



#### Note

If the network audio device has linked a network camera, after the audio device is deleted, the recorder will store audio of the linked network camera itself.

---

## 8.2 Configure the Linkage Action and Arming Schedule

Configure the linkage actions and arming schedule for access control or alarm devices. Linkage actions will be triggered when the designate alarm occurs.

#### Steps

1. Click  of an added IoT device.

**Figure 8-5 Configure IoT**

2. Select **Event Type**. The following configuration is only valid for the selected event type.
3. Check **Enable**.
4. Check linkage actions as your desire. For detailed steps, refer to [Configure Linkage Actions](#).



**Note**

**Full Screen Monitoring** and **OSD Display** are only valid for the selected **Trigger Channel**.


5. Click **Arming Schedule**.
6. Configure arming schedule. For detailed steps, refer to [Configure Arming Schedule](#). Linkage action is only valid during the set schedule.
7. Click **Apply**.

## 8.3 Configure OSD

You can display alarm information received from IoT devices on live view image.

### Steps

1. Click of an added IoT device.
2. Check **OSD Display** on Event Configuration interface.
3. Select **Trigger Channel**.
4. Click **OSD Display Configuration**.

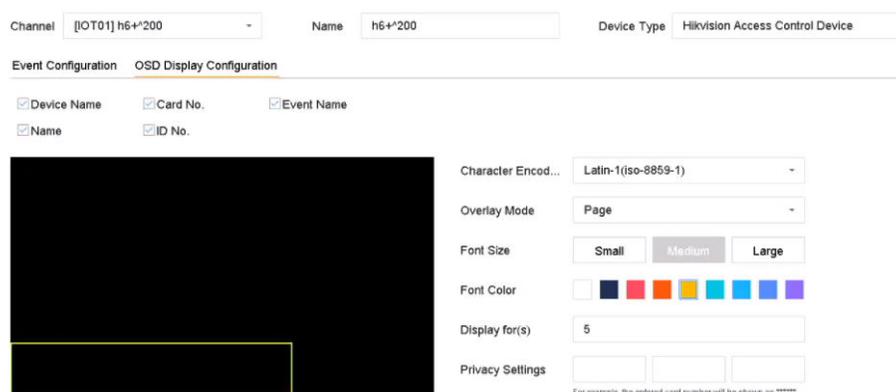

**Figure 8-6 OSD Configuration**

5. Select items, including **Device Name**, **Card No.**, **Event Name**, **Name**, and **ID No.**, to display on live view image. The items are only for access control devices.
6. Configure OSD properties.

### **Overlay Mode - Scroll**

The OSD will automatically scroll to show the new alarm information.

### **Overlay Mode - Page**

When the current OSD cannot show more alarm information, it will automatically turn to new page.

### **Privacy Settings**

Enter privacy information you want to mask. Masked privacy information will be replaced by \*.

\*. Privacy information includes **Event**, **Device**, **Card**, **Name**, and **ID**.

7. Adjust the quadrilateral of yellow frame on the preview window to adjust IoT OSD size and position.
8. Click **Apply**.

## **8.4 Configure Audio Parameters**

After an network audio device is added, you can configure its parameters, including output volume, sampling rate, DNR (digital noise reduction) level, etc.

### **Before You Start**

Ensure you an audio device is added to your recorder, and the network connection is valid.

### **Steps**

1. Go to **Business Application** → **IoT** → **Audio** → **Audio Parameters** .

Channel [MIC1] 12345678901234567890123 -

Name 123456789012345678901234567890C

Output Volume 0  100 80

DNR Level 4 -

Audio Encoding AAC -

Sampling Rate 32kHz -

Audio Stream Bi... 64Kbps -

Apply

**Figure 8-7 Configure Audio Parameters**

2. Set the parameters as your desire.
3. Click **Apply**.

## 8.5 Search the IoT Record

Search alarms by time, by event type, or by channel.

### Steps

1. Go to event record interface.
  - Access control: Go to **Business Application** → **IoT** → **Access Control** → **Card Swiping Record** .
  - Alarm device: Go to **Business Application** → **IoT** → **Alarm** → **Search Data** .

Time Custom 2019-05-18 00:00:00 2019-05-18 23:59:59

Channel [All] IOT Channel -

Event Type All - Event Subtype All -

Name Card No.

Search

**Figure 8-8 Search Event Record (Access Control)**

Time: Custom [2019-05-19 00:00:00] [2019-05-19 23:59:59]

Channel: [All] IOT Channel

Main Type: GJD Alarm Event Sub Type: All

**Search**

**Figure 8-9 Search Event Record (Alarm Device)**

**2. Specify search conditions.**



**Name/Card No.:** When card swiping event occurs, the access control device will upload card name and card No. to video record. You can search event by card name or card No.

**3. Click Search.**

No.	Event Type	Name	Card No.	Card Type	Time	Event Source	View
1	Time Sync. Event				05-18-2019 14:04:39	IOT01	—
2	Time Sync. Event				05-18-2019 14:05:39	IOT01	—
3	Time Sync. Event				05-18-2019 14:06:39	IOT01	—
4	Time Sync. Event				05-18-2019 14:07:39	IOT01	—
5	Time Sync. Event				05-18-2019 14:08:39	IOT01	—
6	Time Sync. Event				05-18-2019 14:09:35	IOT01	—
7	Time Sync. Event				05-18-2019 14:09:40	IOT01	—
8	Time Sync. Event				05-18-2019 14:10:39	IOT01	—
9	Time Sync. Event				05-18-2019 14:11:40	IOT01	—
10	Time Sync. Event				05-18-2019 14:12:40	IOT01	—
11	Time Sync. Event				05-18-2019 14:13:39	IOT01	—
12	Time Sync. Event				05-18-2019 14:14:40	IOT01	—
13	Time Sync. Event				05-18-2019 14:14:41	IOT01	—
14	Time Sync. Event				05-18-2019 14:15:40	IOT01	—
15	Time Sync. Event				05-18-2019 14:16:40	IOT01	—
16	Time Sync. Event				05-18-2019 14:17:40	IOT01	—
17	Time Sync. Event				05-18-2019 14:18:40	IOT01	—
18	Time Sync. Event				05-18-2019 14:19:40	IOT01	—
19	Time Sync. Event				05-18-2019 14:19:46	IOT01	—
20	Time Sync. Event				05-18-2019 14:20:40	IOT01	—

Total: 22 P: 1/1

**Figure 8-10 Search Result (Access Control)**

No.	Channel	Time	Main Type	Sub Type	Status	Data	View
1	IOT03	05-18-2019 14:49:56	GJD Alarm Event	PIR Detection alarm			—

**Figure 8-11 Search Result (Alarm Device)**

## 8.6 IoT Video/Picture


Configure the event recording or capturing schedule for the selected trigger channel, the channel will automatically record videos or capture pictures when IoT alarm occurs.

## 8.6.1 Configure the Event Recording/Capturing

The video recorder can record videos or capture pictures when an IoT alarm occurs.

### Steps


1. Click  of an added IoT device.
2. Select desired **Event Type**.
3. Check **Enable**.
4. Check **Trigger Channel** you want to record event videos or capture pictures when an alarm occurs.

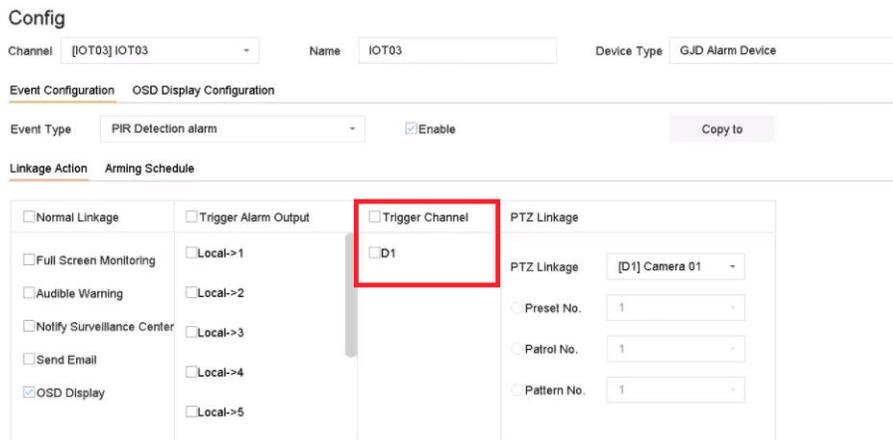

The screenshot shows the configuration page for an IoT device. At the top, the 'Config' section includes fields for 'Channel' (set to '[IOT03] IOT03'), 'Name' (set to 'IOT03'), and 'Device Type' (set to 'GJD Alarm Device'). Below this, there are two tabs: 'Event Configuration' and 'OSD Display Configuration'. Under 'Event Configuration', the 'Event Type' is set to 'PIR Detection alarm' and the 'Enable' checkbox is checked. A 'Copy to' button is visible. The 'Linkage Action' section is expanded to show 'Aiming Schedule'. Under 'Aiming Schedule', there are several options: 'Normal Linkage', 'Trigger Alarm Output', 'Trigger Channel', and 'PTZ Linkage'. The 'Trigger Channel' option is highlighted with a red box, and 'D1' is selected under it. Other options include 'Full Screen Monitoring', 'Audible Warning', 'Notify Surveillance Center', 'Send Email', 'OSD Display', 'Local->1' through 'Local->5', and 'PTZ Linkage' with a dropdown menu set to '[D1] Camera 01' and 'Presel No.', 'Patrol No.', and 'Pattern No.' all set to '1'.

Figure 8-12 Trigger Channel

5. Click **Apply**.
6. Configure the event recording or capturing schedule. Here we take the example of configuring event recording to describe the steps.
  - 1) Go to **Storage** → **Schedule** → **Record** .
  - 2) Select **Camera No.** and check **Enable Schedule**. The camera should be the camera you select in step 4.
  - 3) Select the recording type as **Event**.
  - 4) Drag the mouse on the time bar to set the event detection recording schedule. Refer to **Configure Recording Schedule** for details.
  - 5) Click **OK**.

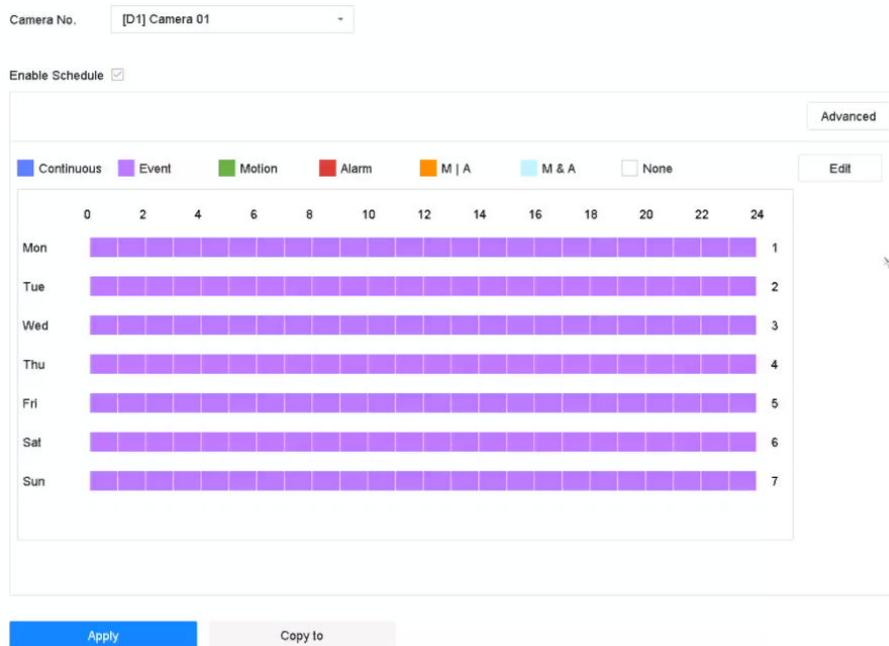

**Figure 8-13 Event Recording**

## Result


When an alarm occurs, the selected trigger channel will start event recording.

## 8.6.2 Search IoT Video

Search IoT event triggered videos.

### Steps

1. Go to **File Management** → **Video** → **Search by Event** .

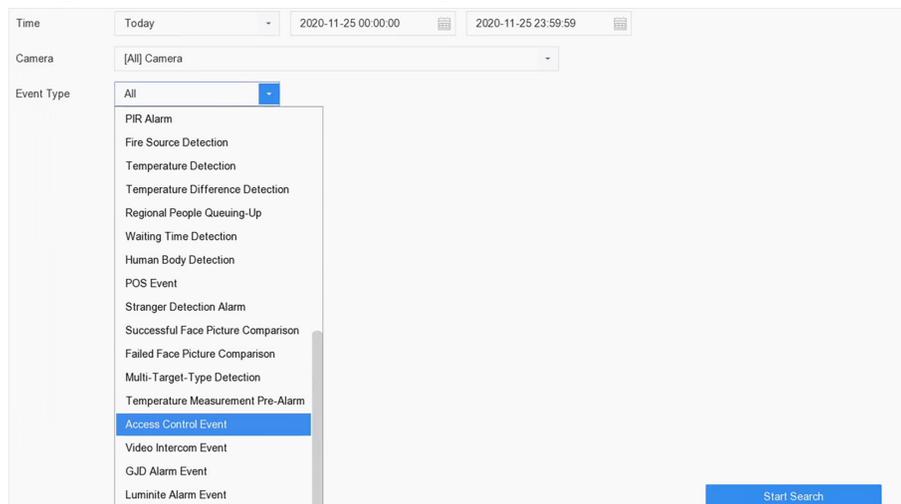

**Figure 8-14 Search Event Video**

2. Set search conditions.

**Camera**

Select it as the selected trigger channels in IoT linkage action configuration.

**Event Type**

Select the desired IoT event.

3. Click **Start Search**.

## Chapter 9 File Management

### 9.1 Search Files


Specify detailed conditions to search videos, audios and pictures.

#### Steps

1. Go to **File Management** → **Video** , **File Management** → **Picture** , or **File Management** → **Audio** as your desire.
2. Select a search method. For example, **Search by Appearance**, or **Search by Time**.
3. Specify detailed conditions, including time, camera, etc.
4. Click **Start Search**.
5. Click **Channel** to select a channel as your desire. It will display the searching results of the selected channel.
6. **Optional:** Click  or  to switch view mode.
7. **Optional:** For videos, click  or  in different view mode to lock a video. The locked video will not be overwritten.
8. **Optional:** Export searching results.
  - 1) Select result file(s) from the search result interface, or check **Select All** to select all files.
  - 2) Click **Export** to export the selected file(s) to a backup device.



#### Note

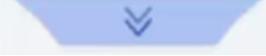- You can click  to view export progress.
  - You can click  to return to search interface.
- 

### 9.2 Export Files

Export files for backup purposes to a USB device, or eSATA HDD.

#### Steps

1. Search files. Refer to **Search Files** for details.
2. Select files.
3. Click **Export**.
4. **Optional:** For vehicle files, check **Backup License Plate Statistics Info** to export license plate statistics information later.
5. Select the file to export as **Video and log** and click **OK**.
6. Select the backup device and folder path.
7. Click **OK**.

## 9.3 Quick Backup

All the videos can be backed up with a shortcut.

### Steps

1. Go to **File Management** → **Video** .
2. Search video(s) by setting different conditions (appearance, event or tag).
3. Click **Quick Backup**.

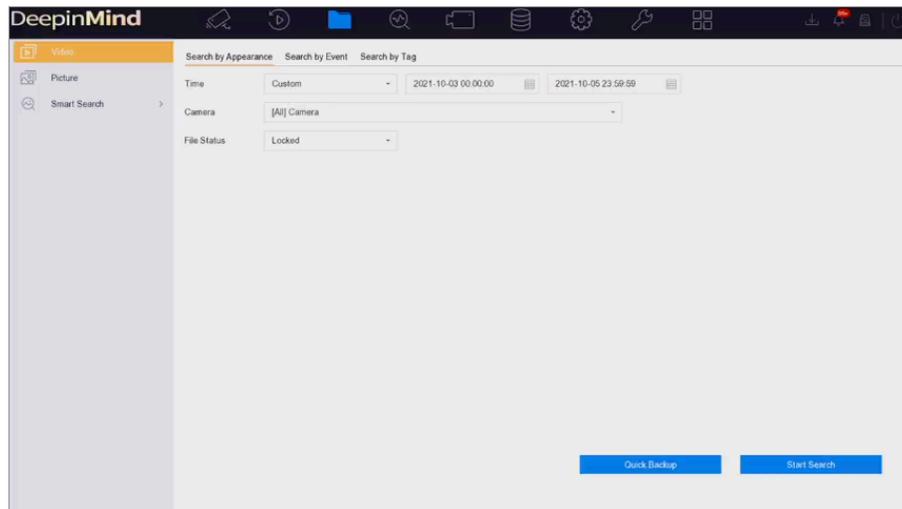


Figure 9-1 Quick Backup

## 9.4 Smart Search

You can search human body files, face files and vehicles in **File Management** → **Smart Search** . Refer to [Human Body Search](#) , [Face Picture Search](#) , and [Vehicle Search](#) for details.

## Chapter 10 Storage

### 10.1 Storage Device Management

#### 10.1.1 SSD Management

##### Initialize SSD

For the device that has pre-installed SSD on the main board, you can view the SSD space distribution, or initialize the SSD.

##### Steps

1. Go to **Storage** → **SSD Management** .
2. Click **Format**.
3. Click **Yes** to initialize SSD.



Initializing SSD will erase its data, including those in face picture library. The device will restart after initialization.

4. Click **Initialize Face Picture Library** to delete face picture data in the SSD.



The initialization will make face picture library related alarms unavailable. The device will restart after initialization.

---

##### SSD S.M.A.R.T. Detection

Self-monitoring, analysis, and reporting technology (S.M.A.R.T.) is a monitoring system included in computer hard disk drives (HDDs) and solid-state drives (SSDs) that detects and reports on various indicators of drive reliability, with the intent of enabling the anticipation of hardware failures. You can run the S.M.A.R.T. detection for your SSD.

##### Steps

1. Go to **Maintenance** → **HDD Operation** → **S.M.A.R.T**
2. Set **HDD No.** as **SSD**.
3. Set **Self-Test Type**.
4. Click **Self-Test** to start the S.M.A.R.T. SSD self-evaluation.

## Upgrade SSD Firmware

You can use a USB flash drive to upgrade your SSD firmware.

### Before You Start

Prepare a USB flash drive that contains the SSD firmware, and insert the USB flash drive to your device USB interface.

### Steps

1. Go to **Storage → SSD Management** .
2. Click **Firmware Upgrade**.
3. Select **Device Name** as the USB flash drive that contains the SSD firmware.
4. Select the SSD firmware.
5. Click **Upgrade**.


## 10.1.2 Manage Local HDD

### Configure HDD Group

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

### Steps

1. Go to **Storage → Storage Mode** .
2. Select **Mode** as **Group**.
3. Click **Apply**.
4. Go to **Storage → Storage Device** .
5. Select a HDD.

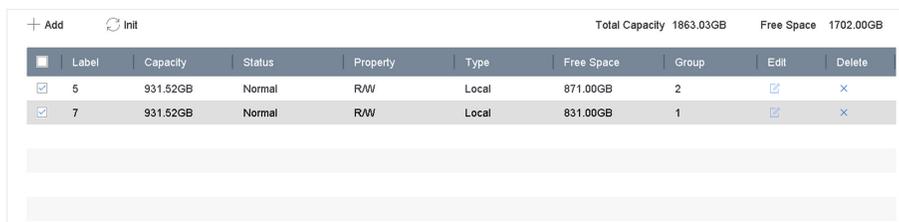

The screenshot shows a web interface for managing storage devices. At the top, there are buttons for '+ Add' and 'Init', and summary statistics: 'Total Capacity 1863.03GB' and 'Free Space 1702.00GB'. Below this is a table with columns for Label, Capacity, Status, Property, Type, Free Space, Group, Edit, and Delete. Two HDDs are listed: one with Label 5, Capacity 931.52GB, Status Normal, Property R/W, Type Local, Free Space 871.00GB, and Group 2; and another with Label 7, Capacity 931.52GB, Status Normal, Property R/W, Type Local, Free Space 831.00GB, and Group 1. Each row has a checkbox on the left and edit/delete icons on the right.

	Label	Capacity	Status	Property	Type	Free Space	Group	Edit	Delete
<input checked="" type="checkbox"/>	5	931.52GB	Normal	R/W	Local	871.00GB	2		
<input checked="" type="checkbox"/>	7	931.52GB	Normal	R/W	Local	831.00GB	1		

**Figure 10-1 Storage Device**

6. Click to enter Local HDD Settings interface.

Local HDD Settings

HDD No. 5

HDD Property  R/W  Read-only  Redundan...

Group  1  2  3  4  5  6  7  8  
 9  10  11  12  13  14  15  16

HDD Capacity 931.52GB

OK Cancel

**Figure 10-2 Local HDD Settings**

7. Select a group number for the HDD.
8. Click **OK**.

---

 **Note**

Regroup the cameras for HDD if the HDD group number is changed.

---

9. Go to **Storage → Storage Mode** .
10. Select group number from the list.
11. Select related camera(s) to save videos and pictures on the HDD group.
12. Click **Apply**.

## Configure the HDD Property

HDD property can be set as R/W, Read-only, or Redundant.

### Before You Start

Set the storage mode to Group. For detailed steps, refer to [\*\*\*Configure HDD Group\*\*\*](#)

### Steps

1. Go to **Storage → Storage Device** .
2. Click  of desired HDD.
3. Select **HDD Property**.

### **R/W**

HDD supports both read and write.

### **Read-only**

Files in read-only HDD will not be overwritten.

### **Redundant**

Save the videos and pictures not only in the R/W HDD but also in the redundant HDD. It effectively enhances the data safety and reliability. Ensure at least another HDD which is in Read/Write status exists.

4. Click **OK**.

## **Configure the HDD Quota**

Each camera or audio device can be configured with an allocated quota for storing videos, pictures, or audios.

### **Steps**

1. Go to **Storage → Storage Mode** .
2. Select **Mode** as **Quota**.
3. Select a device type.
4. Select a device.
5. Set the storage capacity for the quota.
6. Click **Copy to** to copy the quota settings of the current camera to other cameras.
7. Click **Apply**.



### **Note**

- When the maximum capacity is set to 0, devices will use the total HDD capacity for storing files.
  - Reboot the video recorder to activate the new settings.
- 

## **10.1.3 Add a Network Disk**

You can add the allocated NAS or IP SAN disk to the device, and use it as a network HDD.

### **Steps**

1. Go to **Storage → Storage Device** .
2. Click **Add**.

Custom Add

NetHDD: NetHDD 1

Type: NAS

NetHDD IP: 120 . 36 . 2 . 39

NetHDD Directory: /nas/device1/11|

Search

OK Cancel

**Figure 10-3 Add NetHDD**

3. Select **NetHDD** type.
4. Enter **NetHDD IP** address and click **Search** to search the available NetHDD.
5. Select the desired NetHDD.
6. Click **OK**.
7. The added NetHDD will be displayed in the HDD list. Select the newly added NetHDD and click **Init**.

### 10.1.4 Configure Cloud Storage

The cloud storage function enables the device to upload videos to a cloud server. It may not only save your local HDD storage space, but also let you access videos more conveniently. You can enable cloud storage via web browser.

#### Before You Start

Ensure your device is properly connected to Internet, and you have the correct cloud storage information.

#### Steps

1. Go to **Configuration** → **Storage** → **Storage Management** → **Cloud Storage** .

Enable Cloud Storage

Protocol Version: Cloud2.0

Server IP: 0.0.0.0

Server Port: 0

Password:

Encryption Password:

Picture Storage Pool ID: 0

Test

Save

**Figure 10-4 Cloud Storage**

2. Check **Enable Cloud Storage**.
3. Set cloud storage server parameters.

---

 **Note**

There are multiple pools in a cloud storage server. A pool is like an HDD, it is used for store files. Each pool has an ID, hence you have to get the pool ID from storage server.

4. Click **Test** to test if parameters are valid.
5. Click **Save**.

## 10.1.5 Manage eSATA

---

 **Note**

The eSATA function is only available for certain models.

---

### Configure eSATA for Data Storage

When there is an external eSATA device connected to your video recorder, you can configure the eSATA usage as data storage and manage the eSATA.

#### Steps

1. Go to **Storage → Advanced**.
2. Select eSATA **Usage** as **Export** or **Record/Capture**.

#### Export

Use the eSATA for backup.

#### Record/Capture

Use the eSATA for record/capture. Refer to the following steps for operating instructions.

eSATA	eSATA1
Usage	Record/Capture

**Figure 10-5 eSATA Mode**

### What to do next

If eSATA usage is set as **Record/Capture**, enter the storage device interface to edit its property or initialize it.

### Configure eSATA for Auto Backup

If you made an automatic backup plan, the video recorder will back up the local videos of 24 hours ahead of the backup start time to eSATA.

### Before You Start

Ensure the device has correctly connected with an external eSATA hard drive, and its usage type is set as **Export**. Refer to [Manage eSATA](#) for details.

### Steps


1. Go to **Storage → Auto Backup**.
2. Check **Auto Backup**.
3. Set the backup start time in **Start Backup at**.



### Note

If the day experiences a failed backup, the video recorder will back up the videos 48 hours ahead of the backup start time in the next day.

4. Select channels for backup.
5. Select **Backup Stream Type** as your desire.
6. Select **Overwrite** type.
  - **Disable**: When HDD is full, it will stop writing.
  - **Enable**: When HDD is full, it will continue to write new files by deleting the oldest files.
7. Click **Apply**.

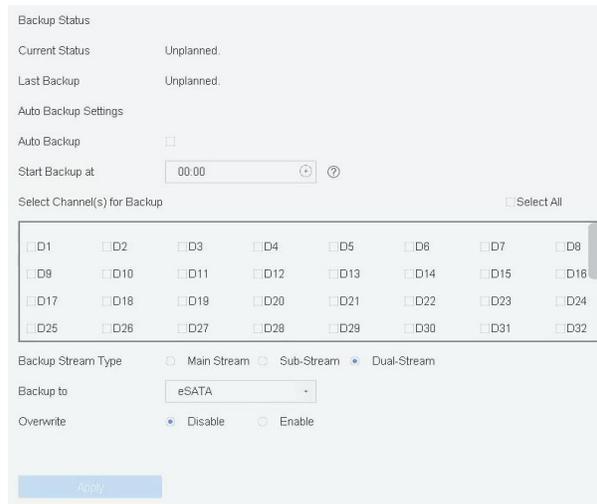


**Figure 10-6 Configure eSATA for Auto Backup**

## 10.1.6 Dynamically Adjust Recording Writing Buffer

Dynamically adjust recording writing buffer allows the device to adjust buffer memory dynamically when bit rate exceeds limit.

### Steps

1. Go to **Storage → Advanced** .
2. Check **Dynamically Adjust Recording Writing Buffer** to avoid video loss when bit rate is higher than 4 Mbps.

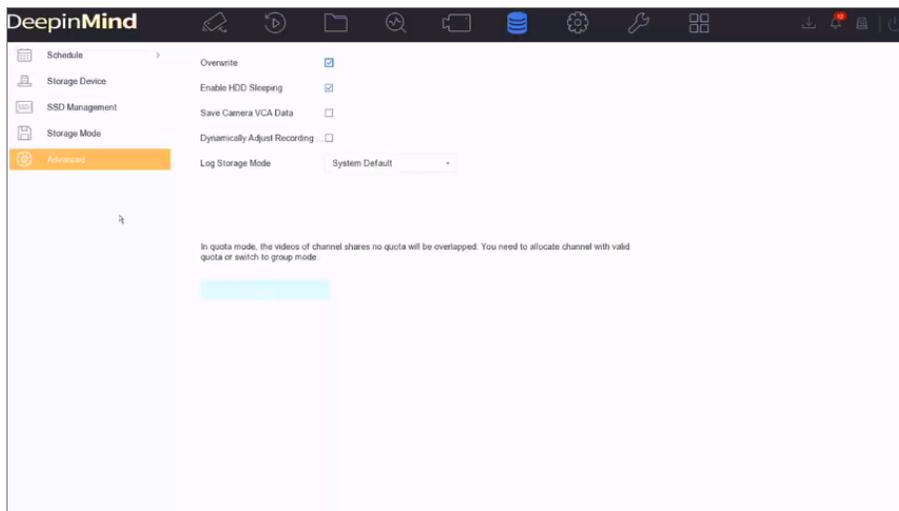

**Figure 10-7 Dynamically Adjust Recording Writing Buffer**

---

### Note

This function will result in higher memory use. Restart the device after you enable/disable the function.

---

## 10.2 Disk Array

A disk array is a data storage virtualization technology that combines multiple physical disk drives into a single logical unit. Also known as a "RAID", an array stores data over multiple HDDs to provide enough redundancy so that data can be recovered if one disk fails. Data is distributed across the drives in one of several ways called "RAID levels", based the redundancy and performance required.

---

### Note

The functions in this section are only available for certain models.

---

### 10.2.1 Create a Disk Array

The video recorder supports software-based disk arrays. Enable the RAID function as required, and ensure each HDD capacity is not less than 4 TB. If your device has no more than 16 SATA interfaces, a disk array can contain no more than 8 HDDs. If your device has 24 SATA interfaces, a disk array can contain no more than 12 HDDs. Two ways are available for creating an array: one-touch configuration and manual configuration.

#### One-Touch Creation

One-touch configuration creates the disk array. By default, the array type created by one-touch configuration is RAID 5.

#### Before You Start

Install at least 3 HDDs. If more than 10 HDDs are installed, 2 arrays will be created. To maintain reliability and stability running of the HDDs, it is recommended to use of enterprise-level HDDs of the same model and capacity.

#### Steps

1. Go to **Storage** → **Advanced** .
2. Check **Enable RAID**.
3. Click **Apply** and reboot the device to have settings take effect.
4. After reboot, go to **Storage** → **RAID Setup** → **Physical Disk** .
5. Click **One-touch Config**.
6. Edit **Array Name** and click **OK** to start configuring.

 **Note**

If you install 4 or more HDDs, a hot spare disk for array rebuilding will be created.


7. **Optional:** The video recorder will automatically initialize the created array. Go to **Storage → RAID Setup → Array** to view the information of the created array.

## Manual Creation

Manually create a RAID 0, RAID 1, RAID 5, RAID 6, or RAID 10 array.

### Steps

1. Go to **Storage → Advanced** .
2. Check **Enable RAID**.
3. Click **Apply** and reboot the device to have settings take effect.
4. After reboot, go to **Storage → RAID Setup → Physical Disk** .
5. Click **Create**.

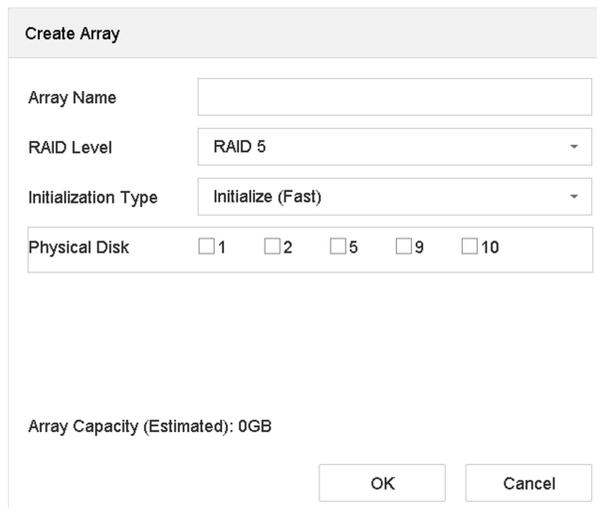

**Figure 10-8 Create Array**

6. Enter **Array Name**.
7. Select **RAID Level** as required.
8. Select the physical disks to constitute the array.


**Table 10-1 The Required Number of HDDs**

RAID Level	The Required Number of HDDs
RAID 0	At least 2 HDDs.
RAID 1	At least 2 HDDs.
RAID 5	At least 3 HDDs.

RAID Level	The Required Number of HDDs
RAID 6	At least 4 HDDs.
RAID 10	The number of HDD must be an even ranges from 4 to 16.

9. Click **OK**.

10. **Optional:** The video recorder will automatically initialize the created array. Go to **Storage** → **RAID Setup** → **Array** to view the information of the created array.

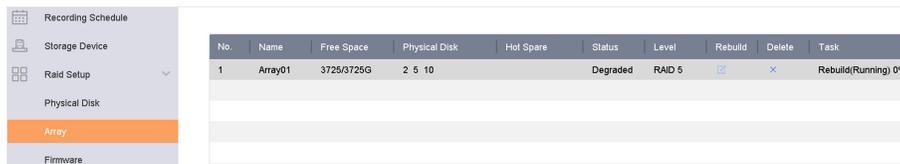

**Figure 10-9 Array List**

## 10.2.2 Rebuild an Array

The array status includes Functional, Degraded, and Offline. To ensure the high security and reliability of the data stored in an array, take immediate and proper maintenance of the arrays according its status.

### Functional

No disk loss in the array.

### Offline

The number of lost disks has exceeded the limit.

### Degraded

If any HDD fails in the array, the array degrades. Restore it to Functional status by rebuilding the array.

## Configure a Hot Spare Disk

The hot spare disk is required for the disk array automatic rebuilding.

### Steps

1. Go to **Storage** → **RAID Setup** → **Physical Disk** .

No.	Capacity	Array	Type	Status	Model	Hot Spare	Task
1	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	—	None
<input type="checkbox"/> 2	2794.52GB		Normal	Functional	ST3000VX000-9YW166	<input checked="" type="checkbox"/>	None
5	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	—	None
<input type="checkbox"/> 9	2794.52GB		Normal	Functional	ST3000VX000-1CU166	<input checked="" type="checkbox"/>	None
10	1863.02GB	Array01	Array	Functional	ST2000VX000-1CU164	—	None

**Figure 10-10 Physical Disk**

2. Click of an available HDD to set it as the hot spare disk.

## Automatically Rebuild an Array


The video recorder can automatically rebuild degraded arrays with the hot spare disks.

### Before You Start

Create hot spare disks. For details, refer to [Configure a Hot Spare Disk](#).

### Steps

1. Go to **Storage** → **RAID Setup** → **Array**.

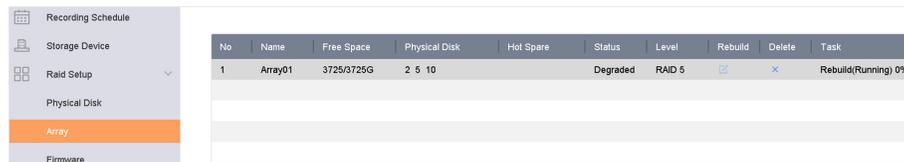

No	Name	Free Space	Physical Disk	Hot Spare	Status	Level	Rebuild	Delete	Task
1	Array01	3725/3725G	2 5 10		Degraded	RAID 5	<input type="checkbox"/>	<input type="checkbox"/>	Rebuild(Running) 0%

Figure 10-11 Array List

## Manually Rebuild an Array

If no hot spare disks are configured, rebuild a degraded array manually.

### Before You Start

At least one available physical disk must exist to rebuild an array.

### Steps

1. Go to **Storage** → **RAID Setup** → **Array**.

2. Click  of the degraded array.

The screenshot shows a 'Rebuild Array' dialog box with the following fields and values:

Field	Value
Array Name	Array01
RAID Level	RAID 5
Array Disk	5 10
Physical Disk	<input type="radio"/> 2 <input type="radio"/> 9

Buttons: OK, Cancel

**Figure 10-12 Rebuild Array**

3. Select the available physical disk.
4. Click **OK**.
5. Click **OK** on the pop up message box "Do not unplug the physical disk when it is under rebuilding."

## Chapter 11 Hot Spare Device Backup

Video recorders can form an N+M hot spare system. The system consists of several working video recorders and at least one hot spare video recorder. When a working video recorder fails, the hot spare video recorder would switch into operation, which increases the reliability of the system.

A bidirectional connection shown in the figure below is required to be built between hot spare video recorder(s) and working video recorders.

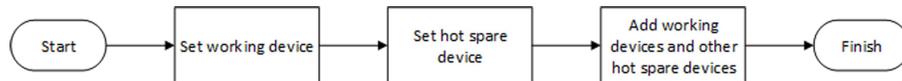


Figure 11-1 Building a Hot Spare System

---

### Note

- Up to 32 working devices and 32 hot spare devices are allowed.
  - It is recommended to use all devices in a same model for compatibility. Contact your dealer for details of models that support the hot spare function.
- 

### 11.1 Set Working Device

#### Steps

1. Go to **System** → **Hot Spare** .
  2. Set **Work Mode** as **Normal Mode**.
- 

### Note

**Normal Mode** is set by default.

---

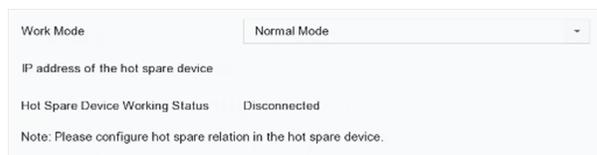


Figure 11-2 Set Working Recorder

3. Click **Apply**.
- 

### Note

Repeat the above steps to set other working devices.


---

### 11.2 Set Hot Spare Device

Hot spare device will take over working device tasks when working device fails.

## Steps

1. Go to **System** → **Hot Spare** .
2. Set **Work Mode** as **Hot Spare Mode**.

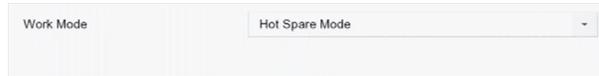

**Figure 11-3 Hot Spare**

3. Click **Apply**.
4. Click **Yes** in the pop-up. Your device will restart automatically.

---

### **Note**

- The camera connection will be disabled when the device works in hot spare mode.
  - It is highly recommended to restore the device defaults after switching the work mode of hot spare devices to normal mode to ensure the normal operation afterward.
- 

## 11.3 Manage Hot Spare System


### Steps

---

#### **Note**

- Up to 32 working devices and 32 hot spare devices are allowed in the hot spare system.
  - Only one hot spare device can add working devices and other hot spare devices. You can find the hot spare device IP address from working devices.
- 

1. Go to **System** → **Hot Spare** through the hot spare device.

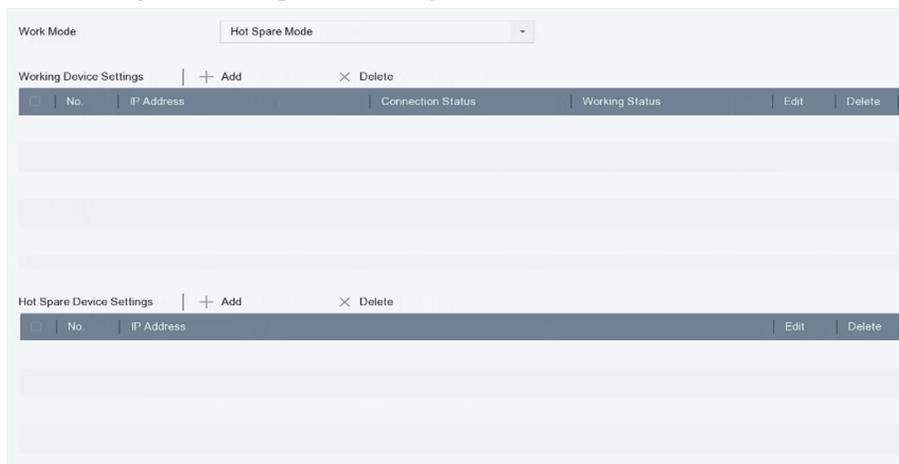

**Figure 11-4 Add Working Device**

2. Click **Add** in **Working Device Settings** to add working devices to the hot spare system.  
After refreshing the interface, you can view the working status of working devices from the hot spare device interface. Also, the working status and IP address of the hot spare device can be viewed from working device interface.

**Table 11-1 Working Status of Working Device**

<b>Working Status</b>	<b>Description</b>
Monitoring	Working devices are working properly.
No need for backup	The working device goes offline and has never been monitored before.
Backing up	The working device has been monitored before but goes offline. A hot spare device will take over the working device, and record the videos of network cameras connected to the working device. The video backup function can be enabled for one working device at a time.
Waiting for synchronization	The working device comes back online, and waits for the a hot spare device to sync videos.
Synchronizing	The hot spare device is restoring videos back into the working device. The synchronization function can be enabled for one working device at a time.
Synchronization finished	Videos are restored back to the working device. The work device is recovered.

3. Click **Add** in **Hot Spare Device Settings** to add hot spare devices to the hot spare system.
4. **Optional:** Click **Delete** to delete working devices or hot spare devices as your desire.

## Chapter 12 Network Settings

### 12.1 Configure DDNS

You can set Dynamic DNS service for network access. Different DDNS modes are available: DynDNS, PeanutHull, and NO-IP.

#### Before You Start

You must register the DynDNS, PeanutHull, or NO-IP services with your ISP before configuring DDNS settings.

#### Steps

1. Go to **System** → **Network** → **TCP/IP** → **DDNS**

The screenshot shows the DDNS configuration interface. At the top, there are tabs for 'TCP/IP', 'DDNS', 'PPPoE', 'NTP', and 'NAT'. The 'DDNS' tab is active. Below the tabs, there is a section for 'Enable' with a checked checkbox. The 'DDNS Type' is set to 'DynDNS' in a dropdown menu. The 'Server Address' is 'member.dyndns.org', 'Device Domain Name' is '1233dyndns.com', 'User Name' is 'test', and 'Password' is masked with asterisks. The 'Status' section shows 'DDNS is disabled.' and an 'Apply' button is located at the bottom left.

Figure 12-1 DDNS Settings

2. Check **Enable**.
3. Select **DDNS Type** as DynDNS.
4. Enter Server Address for DynDNS (i.e., members.dyndns.org).
5. Under Device Domain Name, enter the domain name obtained from the DynDNS Website.
6. Enter **User Name** and **Password** registered in the DynDNS Website.
7. Click **Apply**.

### 12.2 Configure PPPoE

If the device is connected to Internet through PPPoE, you need to configure user name and password accordingly under **System** → **Network** → **TCP/IP** → **PPPoE** .

Contact your Internet service provider for details about PPPoE service.

## 12.3 Configure Port Mapping (NAT)

Two ways are provided for port mapping to realize the remote access via the cross-segment network, UPnP™ and manual mapping.

### Before You Start

If you want to enable the UPnP™ function of the device, you must enable the UPnP™ function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Universal Plug and Play (UPnP™) can permit the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. You can use the UPnP™ function to enable the fast connection of the device to the WAN via a router without port mapping.

### Steps

1. Go to **System** → **Network** → **TCP/IP** → **NAT** .

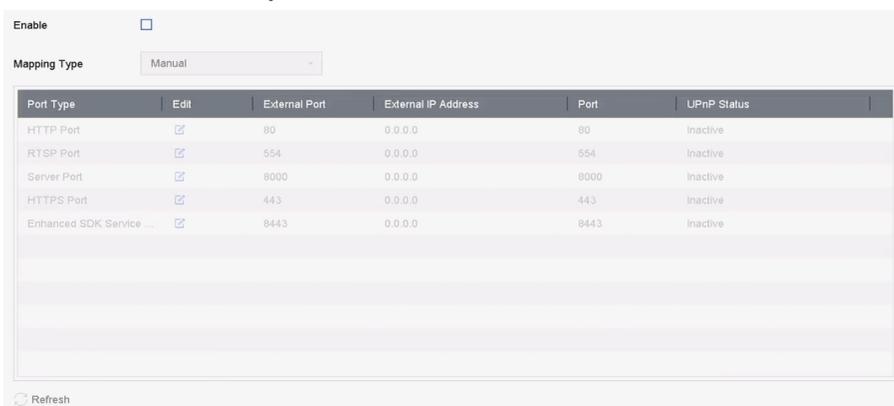


Figure 12-2 Port Mapping Setting

2. Check **Enable**.

3. Select **Mapping Type** as **Manual** or **Auto**.

- Auto: If you select **Auto**, the port mapping items are read-only, and the external ports are set by the router automatically.
- Manual: If you select **Manual**, you can edit the external port on your demand by clicking to activate **External Port Settings**.

### Note

- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.
- The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each

other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

4. Enter the virtual server setting page of router; fill in the blank of **Internal Source Port** with the internal port value, the blank of **External Source Port** with the external port value, and other required contents.

 **Note**

- Each item should be corresponding with the device port, including server port, http port, RTSP port and https port.
- The virtual server setting interface below is for reference only, it may be different due to different router manufactures. Please contact the manufacture of router if you have any problems with setting virtual server.

Delete	External Source Port	Protocol	Internal Source IP	Internal Source Port	Application
<input type="checkbox"/>	81	TCP	192.168.251.101	80	HTTP

**Figure 12-3 Set Virtual Server Item**

## 12.4 Configure SNMP

You can configure SNMP settings to get device status and parameter information.

### Before You Start

Download the SNMP software to receive device information via the SNMP port. By setting the trap address and port, the device is allowed to send alarm events and exception messages to the center.

### Steps

1. Go to **System** → **Network** → **Advanced** → **SNMP** .

SNMP	Email	More Settings
Enable	<input type="checkbox"/>	
SNMP Version	V2	
SNMP Port	161	
Read Community	public	
Write Community	private	
Trap Address		
Trap Port	162	

Apply

**Figure 12-4 SNMP Settings**

2. Check **Enable**. A message will pop up to notify about a possible security risk. Click **Yes** to continue.
3. Configure the SNMP settings as needed.

**Trap Address**

SNMP host IP address.

**Trap Port**

Port of the SNMP host.

4. Click **Apply**.



**Note**

You can configure SNMP v2 and SNMP v3 parameters via web browser in **Configuration → System → Advanced Settings → SNMP** .

---

### 12.5 Configure Email

The system can be configured to send an e-mail notification to all designated users when a specified event occurs such as when an alarm or motion event is detected, or the administrator password is changed, etc.

#### Before You Start

The device must be connected to a local area network (LAN) that contains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the email accounts to which you want to send notifications.

#### Steps

1. Go to **System** → **Network** → **Advanced** → **Email** .
2. Configure the email settings.

#### Server Authentication

Check to enable the function if the SMTP server requires user authentication and enter the user name and password accordingly.

#### SMTP Server

The IP address of SMTP Server or host name (e.g., smtp.263xmail.com).

#### SMTP Port

The SMTP port. The default TCP/IP port used for SMTP is 25.

#### Enable SSL/TLS

Check to enable SSL/TLS if required by the SMTP server.

#### Sender

The sender's name.

#### Sender's Address

The sender's address.

#### Select Receivers

Select the receiver. Up to 3 receivers can be configured.

#### Receiver

The receiver's name.

#### Receiver's Address

The email address of the user to be notified.

#### Attached Image

Check to send email with attached alarm images. The interval is the time between sending two subsequent alarm images.

#### Interval

The time interval for capturing the attached images.

## Perimeter Protection Analysis and Capture by Device

When perimeter protection events are analyzed by the device, the device will send you 3 images with target frames and rule frames in the alarm triggered email.



**Perimeter Protection Analysis and Capture by Device** is only available for /X and /S series.


- Optional:** Enable the alternate SMTP, and configure the required parameters for alternate SMTP. When the preferred SMTP is invalid, the device will use alternate SMTP to send emails.
- Optional:** Click **Test** to send a test email.
- Click **Apply**.

## 12.6 Configure Port

You can configure different types of ports to enable relevant functions.

### Steps

- Go to **System** → **Network** → **Advanced** → **More Settings** .

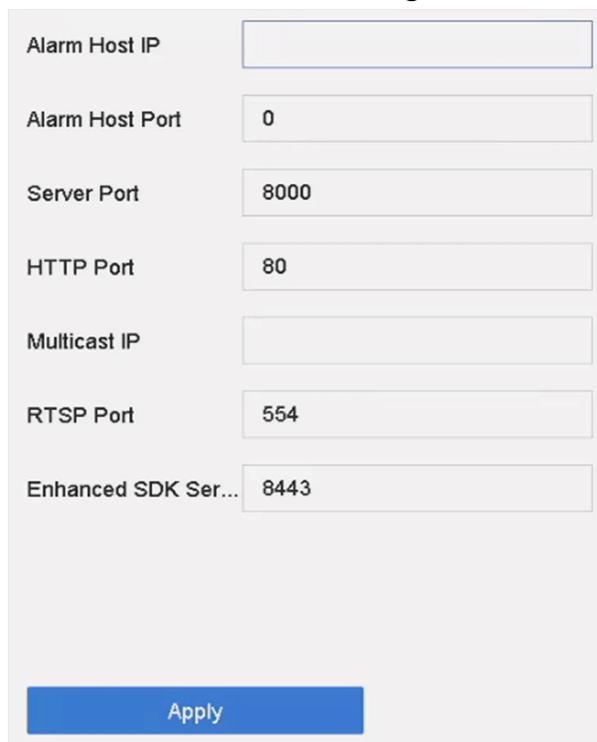

Alarm Host IP	<input type="text"/>
Alarm Host Port	<input type="text" value="0"/>
Server Port	<input type="text" value="8000"/>
HTTP Port	<input type="text" value="80"/>
Multicast IP	<input type="text"/>
RTSP Port	<input type="text" value="554"/>
Enhanced SDK Ser...	<input type="text" value="8443"/>

**Figure 12-5 Port Settings**

- Configure port settings as needed.

### Alarm Host IP/Port

With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the client

management system (CMS) software installed. The alarm host IP refers to the IP address of the remote PC on which the CMS software (e.g., iVMS-4200) is installed, and the alarm host port (7200 by default) must be the same as the alarm monitoring port configured in the software.

### Server Port

Server port (8000 by default) should be configured for remote client software access and its valid range is 2000 to 65535.

### HTTP Port

HTTP port (80 by default) should be configured for remote Web browser access.

### Multicast IP

Multicast can be configured to enable Live View for cameras that exceed the maximum number allowed through network. Both IPv4 and IPv6 are available for multicast IP address. For IPv4, it covers Class-D IP ranging from 224.0.0.0 to 239.255.255.255 and it is recommended to use an IP address ranging from 239.252.0.0 to 239.255.255.255. When adding a device to the CMS software, the multicast address must be the same as that of the device.

### RTSP Port

RTSP (Real Time Streaming Protocol) is a network control protocol designed to control streaming media servers. The port is 554 by default.

### Enhanced SDK Service Port

The enhanced SDK service adopts TLS protocol over the SDK service that provides safer data transmission. The port is 8443 by default.

### 3. Click **Apply**.

## 12.7 Configure ONVIF

ONVIF protocol allows the connection with third-party cameras. The added user accounts have the permission to connect other devices via ONVIF protocol.

### Steps

1. Go to **Maintenance** → **System Service** → **ONVIF** .
2. Check **Enable ONVIF** to enable the ONVIF access management.



### Note

ONVIF protocol is disabled by default.

---

3. Click **Add**.
4. Enter **User Name**, and **Password**



### Caution

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- 
5. Select **Level** as **Media User**, **Operator** or **Admin**.
  6. Click **OK**.

## Chapter 13 POS Configuration

The device can be connected to a POS machine/server, and receive a transaction message to overlay on the image during Live View or playback, as well as trigger a POS event alarm.

### 13.1 Configure POS Connection

#### Steps

1. Go to **System** → **POS**.
2. Click **Add**.



The screenshot shows a web interface for adding a POS device. It features several input fields: an 'Enable' checkbox, a 'POS Name' dropdown menu with 'POS 3' selected, a 'POS Protocol' dropdown menu with 'AVE' selected and a 'Custom' button, and a 'Connection Mode' dropdown menu with 'Sniff' selected and a 'Parameters' button.

**Figure 13-1 POS Settings**

3. Select a POS device from the drop-down list.
4. Check **Enable**.

---

#### **Note**

The number of POS devices supported by each device is the half of its number of channel, e.g., 8 POS devices are supported for the DS-9616NI-I8 model.

5. Select **POS Protocol**.

---

#### **Note**

When a new protocol is selected, reboot the device to activate the new settings.

---

#### **Universal Protocol**

Click **Advanced** to expand more settings when selecting the universal protocol. You can set the start line identifier, line break tag, and end line tag for the POS overlay characters, and the case-sensitive property of the characters. You can also optionally check the filtering identifier and the XML protocol.

Start Line Identifier	<input type="text"/>	Hex	<input checked="" type="checkbox"/>
Line Break	0D0A	Hex	<input checked="" type="checkbox"/>
End Line Identifier	<input type="text"/>	Hex	<input checked="" type="checkbox"/>
Case Sensitive	<input checked="" type="checkbox"/>		
Filtering Identifier	<input checked="" type="checkbox"/>		
Enable XML Prot...	<input checked="" type="checkbox"/>		

OK Cancel

**Figure 13-2 Universal Protocol Settings**

## EPSON

The fixed start and end line tag are used for EPSON protocol.

## AVE

The fixed start and end line tag are used for AVE protocol. Serial port and virtual serial port connection types are supported.

Click **Custom** to configure the AVE settings. Select **Rule** as **VSI-ADD** or **VNET**. Set the address bit of the POS message to send. Click **OK** to save the settings.

## NUCLEUS

Click the **Custom** to configure the NUCLEUS settings.

Enter the employee No., shift No., and the terminal No. in the field. The matching message sent from the POS device will be used as the valid POS data.



### Note

The NUCLEUS protocol must be used in the RS-232 connection communication.

6. Select **Connection Mode** and click **Parameters** to configure the parameters for each connection mode.

### TCP Connection

When using TCP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.

Set the **Allowed Remote IP Address** of the device sending the POS message.

### UDP Connection

When using UDP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.

Set the **Allowed Remote IP Address** of the device sending the POS message.

## USB-to-RS-232 Connection

Configure the USB-to-RS-232 convertor port parameters, including the port serial number, baud rate, data bit, stop bit, parity, and flow ctrl.

USB-to-RS-232 Settings	
Serial Port Number	1
Baud Rate	4800
Data Bit	5
Stop Bit	1
Parity	None
Flow Ctrl	None
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

**Figure 13-3 USB-to-RS-232 Settings**

## RS-232 Connection

Connect the device and the POS machine via RS-232. The RS-232 settings can be configured in **Menu → Configuration → RS-232** . The Usage must be set to Transparent Channel.

## Multicast Connection

When connecting the device and the POS machine via Multicast protocol, set the multicast address and port.

## Sniff Connection

Connect the device and the POS machine via Sniff. Configure the source address and destination address settings.

**Sniff Settings**

Enable Source Port F...

Source Address

Source Port

Enable Destination A...

Enable Destination P...

Destination Address

Destination Port

**Figure 13-4 Sniff Settings**

## 13.2 Configure POS Text Overlay

### Steps

1. Go to **System** → **POS** .
2. Click **Channel Linkage and Display**.

Channel Linkage and Display
Arming Schedule
Event Linkage



Linked Channel

Character Encod...

Overlay Mode

Font Size Large Medium Small

Font Color

Display for(s)

Timeout(s)

Privacy Settings

For example, the entered card number will be shown ...

Overlay POS in ...

**Figure 13-5 Overlay Character Settings**

3. Select **linked channel** to overlay the POS characters.
4. Set the characters overlay for the enabled POS.
  - Character encoding format: currently the Latin-1 format is available
  - Overlay mode of the characters to display in scrolling or page mod

- Font size and font color
  - Display time (sec) of the characters. The value ranges 5 -3600 sec.
  - Timeout of POS event. The value ranges 5 -3600 sec. When the device has not received the POS message within the defined time, the transaction ends.
5. In **Privacy Settings**, set the POS privacy information to not display on the image, e.g., the card number, user name, etc.
- The defined privacy information will be displayed using \*\*\* on the image instead.
6. Check **Overlay POS in Live View**. When this feature is enabled, the POS information is overlaid on the Live View image.



Drag the frame to adjust the textbox size and position on POS settings interface preview screen.

---

7. Click **Apply** to activate the settings.

### 13.3 Configure POS Alarm

A POS event can trigger channels to start recording, or trigger full screen monitoring, etc.

#### Steps

1. Go to **Storage** → **Recording Schedule** .
2. Set the arming schedule. Refer to **Configure Arming Schedule** .
3. Go to **System** → **POS** .
4. Click **Event Linkage** on the POS adding or editing interface.

Channel Linkage and Display Event Linkage

<input checked="" type="checkbox"/> Normal Linkage	<input type="checkbox"/> Trigger Alarm Output	<input type="checkbox"/> Trigger Channel
<input checked="" type="checkbox"/> Full Screen Monitoring	<input checked="" type="checkbox"/> Local->1	<input checked="" type="checkbox"/> D1
<input checked="" type="checkbox"/> Audible Warning	<input type="checkbox"/> Local->2	<input checked="" type="checkbox"/> D2
<input checked="" type="checkbox"/> Send Email	<input checked="" type="checkbox"/> Local->3	<input type="checkbox"/> D3
	<input type="checkbox"/> Local->4	<input type="checkbox"/> D4
	<input type="checkbox"/> 10.15.2.250:8000->1	

\*Notice: please confirm the event output in "Live View" settings menu is the same with the real event output.

**Figure 13-6 Set Trigger Cameras of POS**

5. Select the normal linkage actions.
6. Select one or more alarm output(s) to trigger.
7. Select one or more channels to record or become full-screen monitoring when a POS alarm is triggered.
8. Click **Apply** to save the settings.

## Chapter 14 User Management and Security

### 14.1 Manage User Accounts

The Administrator user name is admin and the password is set when you start the device for the first time. The Administrator has the permission to add and delete users and configure user parameters.

#### 14.1.1 Add a User

##### Steps

1. Go to **System** → **User** .
2. Click **Add** to enter the operation permission interface.
3. Input the admin password and click **OK**.
4. In the Add User interface, enter the information for a new user.



##### Caution

**Strong Password Recommended**—We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. We also recommend that you reset your password regularly. Especially in the high security systems, resetting the password monthly or weekly can better protect your product.

---

##### User Level

Set the user level to Operator or Guest. Different user levels have different operating permission.

- **Operator:** An Operator user level has Two-way Audio permission in Remote Configuration and all operating permissions in Camera Configuration by default.
- **Guest:** The Guest user has no permission of Two-way Audio in Remote Configuration and only has the local/remote playback in the Camera Configuration by default.

##### User's MAC Address

The MAC address of the remote PC that logs onto the device. If it is configured and enabled, it allows only the remote user with this MAC address to access the device.

5. Click **OK**.

In the User Management interface, the added new user is displayed on the list.

## 14.1.2 Edit the Admin User

For the admin user account, you can modify your password and unlock pattern.

### Steps

1. Go to **System** → **User** .
2. Select the admin user from the list.
3. Click **Modify**.

The screenshot shows a dialog box titled "Edit User" with a close button (X) in the top right corner. The dialog contains the following fields and options:

- User Name: admin
- Password: [masked with asterisks] Discard C...
- Confirm: [masked with asterisks]
- Note: Valid password range [8-16]. You can use...
- Password S...: [Progress indicator with three bars]
- User's MAC Ad...: 00 : 00 : 00 : 00 : 00 : 00
- Unlock Patt...:  Enable Unlock Pattern [gear icon]
- GUID File:  Export [question mark icon]
- Security Qu...: [gear icon]
- Reserved E...: [empty field] [question mark icon] Modify

At the bottom of the dialog are two buttons: "OK" (blue) and "Cancel" (grey).

**Figure 14-1 Edit User (Admin)**

4. Edit the admin user information as desired, including a new admin password (strong password is required) and MAC address.
5. Edit the unlock pattern for the admin user account.
  - 1) Check **Enable Unlock Pattern** to enable the use of an unlock pattern when logging in to the device.
  - 2) Use the mouse to draw a pattern among the 9 dots on the screen, and release the mouse when the pattern is done.
6. Check **Export** of **GUID File** to export the GUID file for the admin user account.

---

### **Note**

When the admin password is changed, export the new GUID to the connected USB flash drive in the Import/Export interface for the future password resetting.

7. Configure security question for password resetting.
8. Configure reserved email for password resetting.


9. Click **OK** to save the settings.

## 14.1.3 Edit an Operator/Guest User

You can edit the user information, including user name, password, permission level, and MAC address.

### Steps

1. Go to **System → User**.
2. Select a user from the list and click **Modify**.

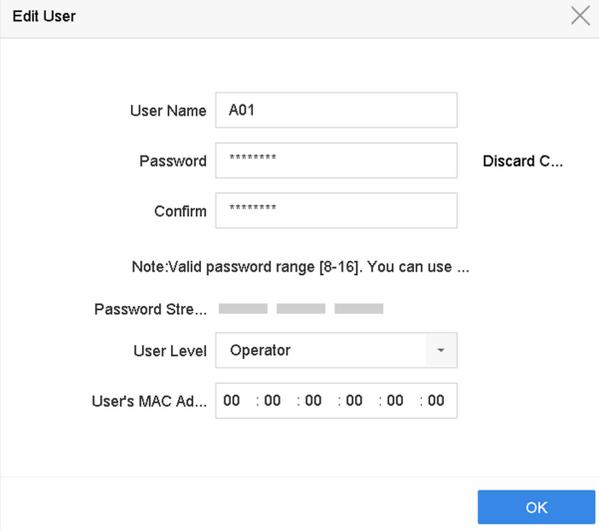

**Figure 14-2 Edit User (Operator/Guest)**

3. Edit the user information as desired, including the new password (strong password is required) and MAC address.
4. Click **OK**.


## 14.2 Manage User Permissions

### 14.2.1 Set User Permissions

For an added user, you can assign the different permissions, including local and remote operation of the device.

### Steps

1. Go to **System → User**.
2. Select a user from the list, and then click  to enter the permission settings interface.

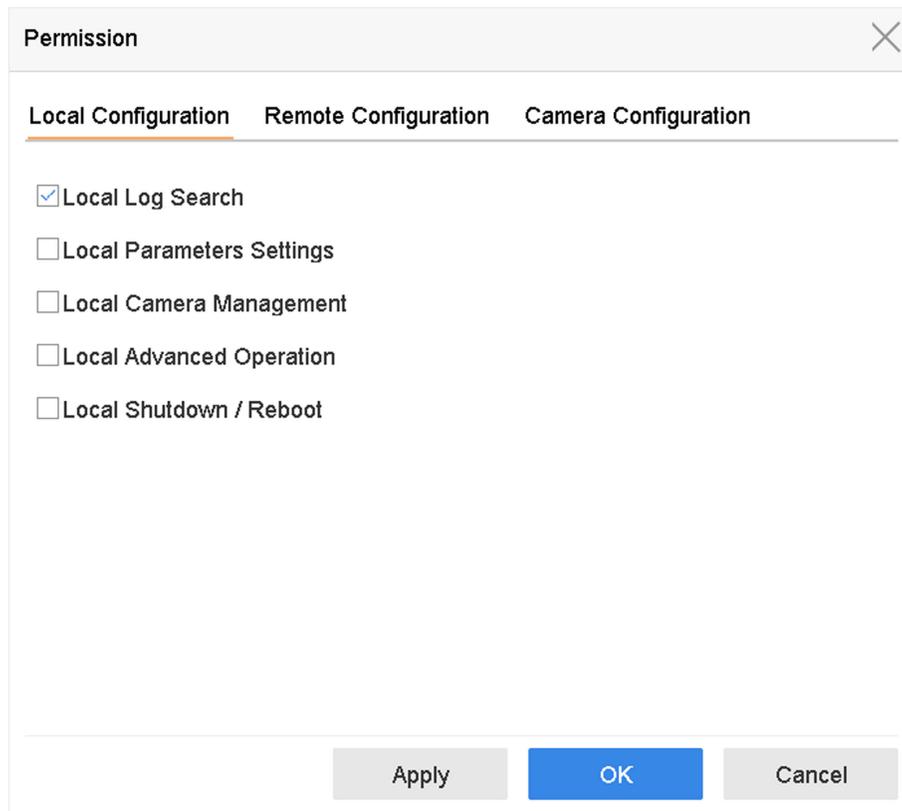

**Figure 14-3 User Permission Settings Interface**

**3. Set the user's operating permissions for **Local Configuration**, **Remote Configuration**, and **Camera Configuration** for the user.**

**1) Set Local Configuration**

**Local Log Search**

Searching and viewing logs and system information of device.

**Local Parameters Settings**

Configuring parameters, restoring factory default parameters, and importing/exporting configuration files.

**Local Camera Management**

Adding, deleting, and editing of IP cameras.

**Local Advanced Operation**

Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.

**Local Shutdown Reboot**

Shutting down or rebooting the device.

**2) Set Remote Configuration**

**Remote Log Search**

Remotely viewing logs that are saved on the device.

### **Remote Parameters Settings**

Remotely configuring parameters, restoring factory default parameters, and importing/exporting configuration files.

### **Remote Camera Management**

Remote adding, deleting, and editing of the IP cameras.

### **Remote Serial Port Control**

Configuring settings for RS-232 and RS-485 port settings.

### **Remote Video Output Control**

Sending remote button control signals.

### **Two-Way Audio**

Operating the two-way radio between the remote client and the device.

### **Remote Alarm Control**

Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.

### **Remote Advanced Operation**

Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.

### **Remote Shutdown/Reboot**

Remotely shutting down or rebooting the device.

## 3) Set Camera Configuration

### **Remote Live View**

Remotely viewing live video of the selected camera(s).

### **Local Manual Operation**

Locally starting/stopping manual recording and alarm output of the selected camera(s).

### **Remote Manual Operation**

Remotely starting/stopping manual recording and alarm output of the selected camera(s).

### **Local Playback**

Locally playing back recorded files of the selected camera(s).

### **Remote Playback**

Remotely playing back recorded files of the selected camera(s).

### **Local PTZ Control**

Locally controlling PTZ movement of the selected camera(s).

### **Remote PTZ Control**

Remotely controlling PTZ movement of the selected camera(s).

## Local Video Export

Locally exporting recorded files of the selected camera(s).

## Local Live View

View live video of the selected camera(s) in local.

4. Click **OK** to save the settings.

## 14.2.2 Set Live View Permission on Lock Screen

The admin user can set live view permission for specific cameras in the screen lock status of device.

- The admin user can set this permission for user accounts.
- When the normal user (Operator or Guest) has no local live view permission for specific camera (s), the live view permission for such camera (s) on lock screen status cannot be configured (live view not allowed by default).

### Steps

1. Go to **System** → **User** .
2. Click **Live View Permission on Lock Screen**.
3. Input admin password and click **Next**.

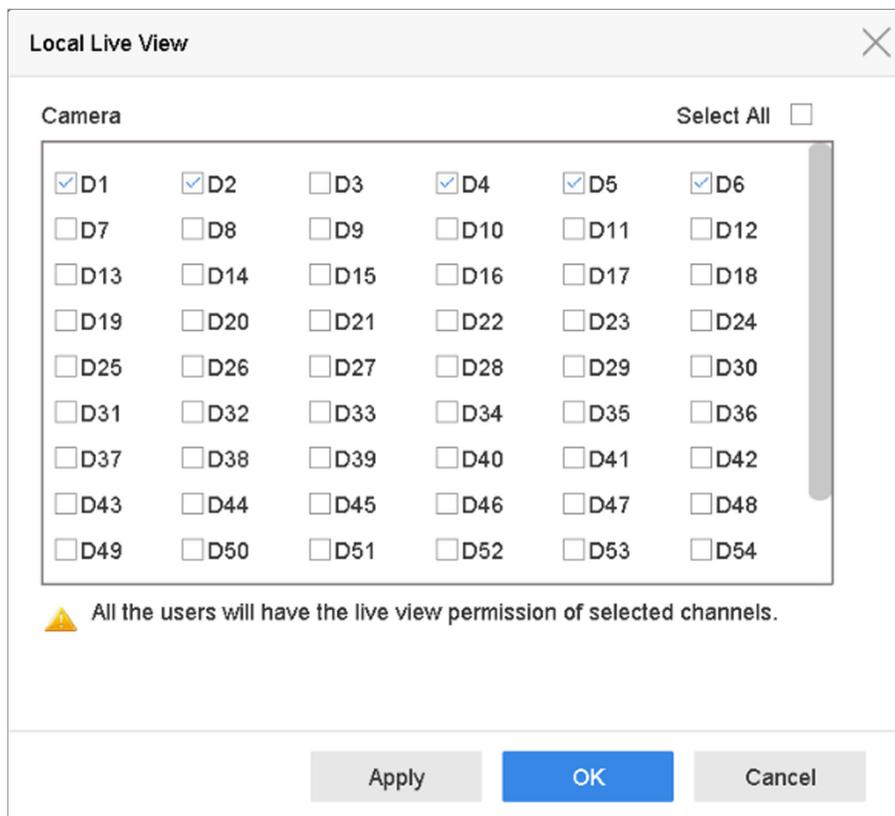


Figure 14-4 Set Live View Permissions on Lock Screen

4. Set the permissions. Select the camera (s) to allow live view when the current user account is in logout status.
5. Click **OK**.

### 14.2.3 Set Double Verification Permission for Non-admin Users

After double verification is enabled in the channel, a non-admin user must be verified by an authorized user to get the permission. Only admin has the authorization to set double verification.

#### Steps

1. Go to **Maintenance** → **System Service** → **Double Verification** .

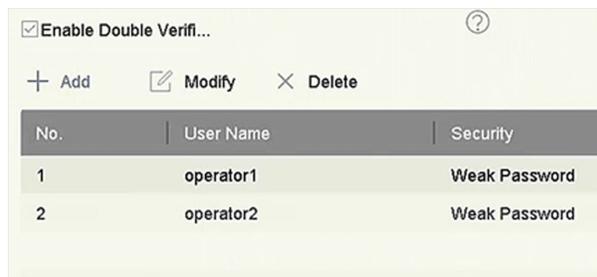


Figure 14-5 Set Double Verification User

2. Check **Enable Double Verification**.
3. Set double verification user. The double verification is different from the system user. You can add up to 8 double verification users.
  - 1) Click **Add** to add a double verification user.
  - 2) Enter the admin password.
  - 3) Set the user parameters, including user name, password, camera permission, etc.
  - 4) Click **OK**.
4. Click **Apply**.
5. Set permission for non-admin users.
  - 1) Go to **System** → **User** .
  - 2) Click  to edit user permission.
  - 3) Select **Camera Permission**. Only **Local Playback**, **Remote Playback/Download**, and **Local Video Export** are available for double verification.
  - 4) Select the channel(s) that requires double verification.
  - 5) Click **OK**.

## 14.3 Configure Password Security

### 14.3.1 Export GUID File


The GUID file can help you to reset password when you forget it. You can export GUID file via web browser. Please keep the GUID file properly.

## Before You Start

Ensure you are on the same network segment with your device.

## Steps

1. Go to **Configuration → System → User Management → User Management**.
2. Select the admin user.
3. Click **Account Security Settings**.
4. Click **Modify**.

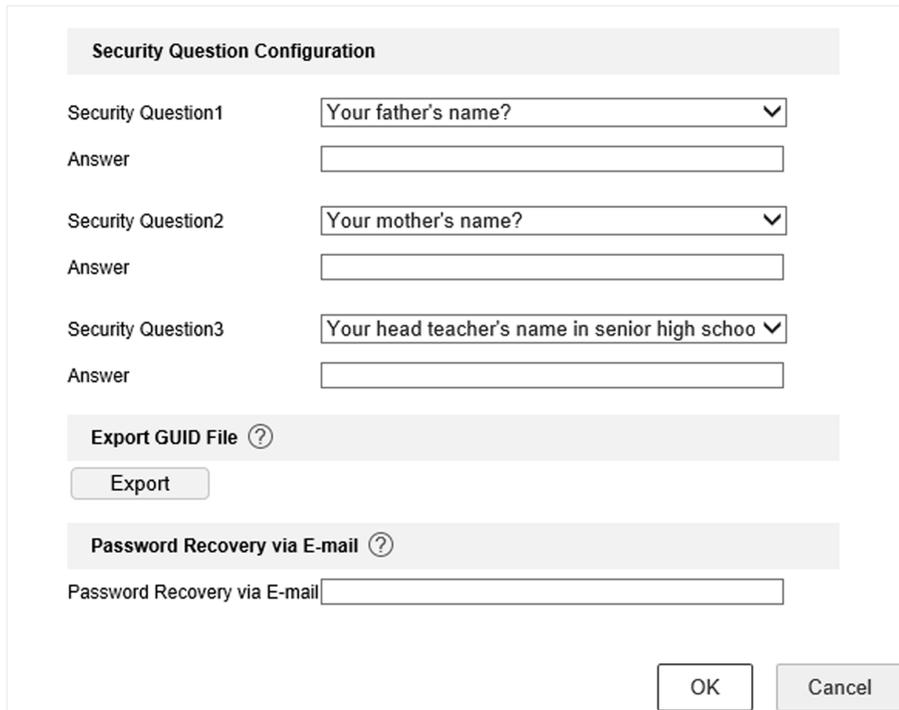

The screenshot displays a 'Security Question Configuration' dialog box. It contains three rows for security questions, each with a dropdown menu and an adjacent text input field for the answer. The questions are: 'Your father's name?', 'Your mother's name?', and 'Your head teacher's name in senior high school'. Below these is an 'Export GUID File' section with a question mark icon and an 'Export' button. Underneath is a 'Password Recovery via E-mail' section with a question mark icon and a text input field. At the bottom right, there are 'OK' and 'Cancel' buttons.

Figure 14-6 Export GUID File


5. Click **Export** in **Export GUID File**.
6. Enter the admin password.
7. Save the GUID file to a directory as your desire.

## 14.3.2 Configure Security Questions

The security questions can help you to reset password when you forget your password, or encounter security issues.

## Steps

1. Click **Security Question Configuration** when you are activating the device, or editing the admin user account.
2. Set the security questions and answers.

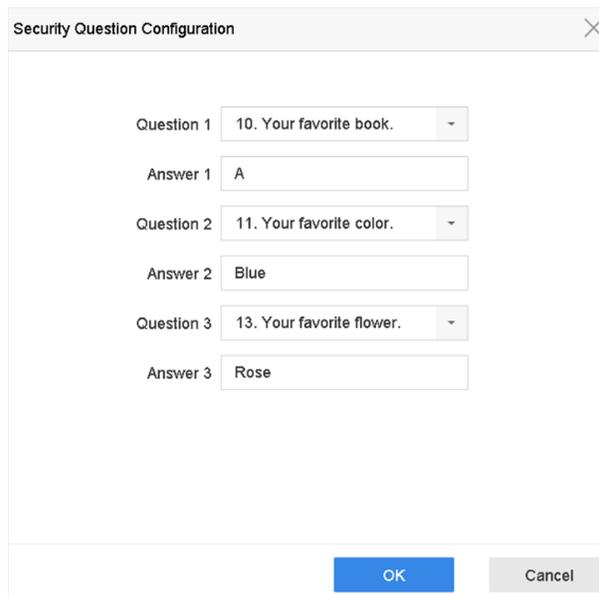

The screenshot shows a dialog box titled "Security Question Configuration" with a close button (X) in the top right corner. It contains three rows of configuration for security questions:

- Question 1: 10. Your favorite book. (dropdown menu)
- Answer 1: A (text input field)
- Question 2: 11. Your favorite color. (dropdown menu)
- Answer 2: Blue (text input field)
- Question 3: 13. Your favorite flower. (dropdown menu)
- Answer 3: Rose (text input field)

At the bottom of the dialog, there are two buttons: "OK" (highlighted in blue) and "Cancel" (greyed out).

**Figure 14-7 Configure Security Questions**

3. Click **OK**.

### 14.3.3 Configure Reserved Email

The reserved email will help you to reset password when you forget your password.

#### Steps

1. Check **Reserved E-mail** when you are activating the device, or click **Modify** when you are editing the admin user account.
2. Enter reserved email address.

The screenshot shows the 'Edit User' dialog box with the following fields and options:

- User Name: admin
- Password: \*\*\*\*\* (with a 'Modify' button)
- User's MAC Ad...: 00 : 00 : 00 : 00 : 00 : 00
- Unlock Patt...:  Enable Unlock Pattern (with a gear icon)
- GUID File:  Export (with a question mark icon)
- Security Qu...: (with a gear icon)
- Reserved E...: z\*\*\*\*\*@\*\*\*\*\*.com (with a 'Modify' button)

Buttons: OK, Cancel

**Figure 14-8 Configure Reserved Email**

3. Click **OK**.

## 14.4 Reset Password

When you forget the admin password, you can reset the password by importing the GUID file, answering security questions, or entering verification code from your reserved email.

### 14.4.1 Reset Password by GUID

You can reset password by GUID via web browser.

#### Before You Start

Ensure you have the correct GUID file.

#### Steps

1. On the user login interface, click **Forgot password**.
2. Select **Verification Mode** as **GUID File Verification**.
3. Click **Browse** to locate the GUID file.
4. Click **Next**.
5. Enter a new password.



### Warning

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

---

6. Confirm the new password.

7. Click **Next**.

### 14.4.2 Reset Password by Security Questions

#### Before You Start

You have configured the security questions when you activate the device or edit the admin user account.

#### Steps

1. On the user login interface, click **Forgot Password**.
2. Select the **password resetting type** as **Verify by Security Question**.
3. Input the correct answers of the three security questions.
4. Click **OK**.
5. Create the new admin password on the Reset Password interface.

### 14.4.3 Reset Password by Reserved Email

#### Before You Start

Ensure you have configured the reserved email when you are activating the device or editing the admin user account. (Refer to **Configure Reserved Email** )

#### Steps

1. On the user login interface, click **Forgot Password**.
2. On the password reset type interface, select **Verify by Reserved Email**.
3. Click **OK**.
4. Click **Next** if you accept the legal disclaimer. You can use a smartphone to scan the QR code and read the legal disclaimer.
5. Obtain the verification code. There are two ways to get the verification code.
  - Use Hik-Connect app to scan the QR code.
  - Send the QR code to email server.
    - a. Insert a USB flash drive to your device.
    - b. Click **Export** to export the QR code to USB flash drive.
    - c. Email the QR code to **pw\_recovery@hikvision.com** as attachment.
6. Check your reserved email, and you will receive a verification code within 5 minutes.
7. Enter the verification code.

8. Click **OK** to set the new password.

### 14.4.4 Reset Password by Hik-Connect

It will restore all parameters to factory default settings if you reset password by Hik-Connect.

#### **Before You Start**

Install the Hik-Connect app on your smart phone.

#### **Steps**

1. On the user login interface, click **Forgot Password**.
2. On the password reset type interface, select **Verify by Hik-Connect**.
3. Use Hik-Connect to scan the QR code. Thereafter, you will have a verification code from Hik-Connect.
4. Enter the verification code.
5. Click **OK**.

## Chapter 15 System Management

### 15.1 Configure Device

#### Steps

1. Go to **System** → **General** .
2. Configure the following settings.

#### Language

The default language used is English.

#### Output Standard

Set the output standard to NTSC or PAL, which must be the same as the video input standard.

#### Resolution

Configure video output resolution.

#### Device Name

Edit device name.

#### Device No.

Edit the device serial number. The Device No. can be set in the range of 1 to 255, and the default No. is 255. The number is used for the remote and keyboard control.

#### Auto Logout

Set the timeout time for menu inactivity. E.g., when the timeout time is set to 5 minutes, then the system will exit from the current operation menu to Live View screen after 5 minutes of menu inactivity.

#### Mouse Pointer Speed

Set the speed of the mouse pointer; 4 levels are configurable.

#### Enable Wizard

Enable/disable the Wizard when the device starts up.

#### Enable Password

Enable/disable the use of the login password.

3. Click **Apply** to save the settings.

### 15.2 Configure Time

#### 15.2.1 Manual Time Synchronization

### Steps

1. Go to **System** → **General** .
2. Configure the date and time.
3. Click **Apply** to save the settings.

### 15.2.2 NTP Synchronization

Connection to a network time protocol (NTP) server can be configured on your device to ensure the system's date and time accuracy.

### Steps

1. Go to **System** → **Network** → **TCP/IP** → **NTP** .
2. Check **Enable**.
3. Configure NTP settings as need.

#### Interval (min)

Time interval between two time synchronization with NTP server

#### NTP Server

IP address of the NTP server

#### NTP Port

Port of the NTP server

4. Click **Apply**

### 15.2.3 DST Synchronization

DST (daylight saving time) refers to the period of the year when clocks are moved one period ahead. In some areas worldwide, this has the effect of creating more sunlit hours in the evening during months when the weather is the warmest.

We advance our clocks ahead a certain period (depends on the DST bias you set) at the beginning of DST, and move them back the same period when we return to standard time (ST).

### Steps

1. Go to **System** → **General** .
2. Check **Enable DST**.
3. Set **DST mode** as **Auto** or **Manual**.

#### Auto

Automatically enable the default DST period according to the local DST rules.

#### Manual

Manually set the start time and end time of the DST period, and the DST bias.

4. Set the DST Bias. Set the time (30/60/90/120 minutes) offset from the standard time.
5. Click **Apply** to save the settings.

## 15.3 Audio Management

The audio files are used for alarm linkage.

You can import and manage audio files in **System → Audio Management** .

### Note

Before importing audio files, prepare a backup device with the audio files in it.

---

## 15.4 Configure Enhanced SVC Mode

In live view or playback, enhanced SVC mode can be configured to extract frames of the video, providing better decoding capacity.

This mode can be enabled if you go to **System → General** .

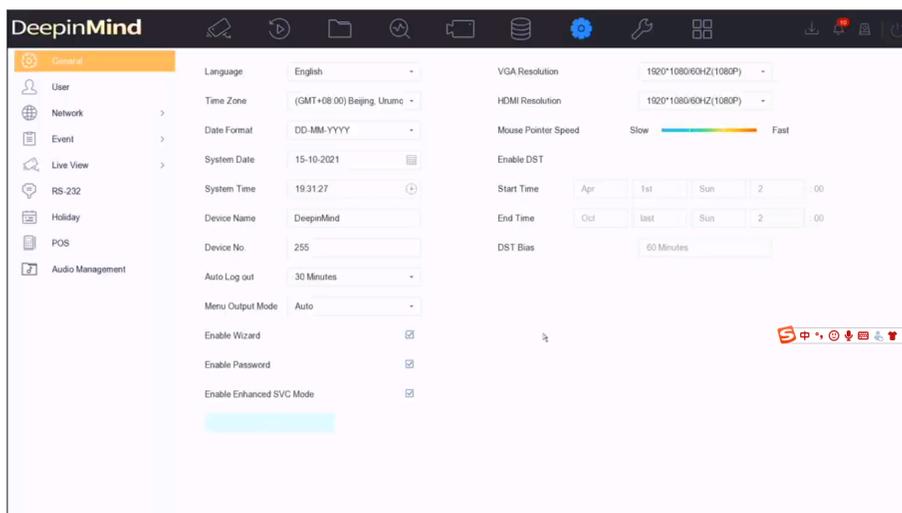


Figure 15-1 Enhanced SVC Mode

### Note

If the enhanced SVC mode configuration of the device does not work, go to the Web page of the camera(s) to enable the enhanced SVC mode.

---

## 15.5 Network Detection

### 15.5.1 Network Traffic Monitoring

Network traffic monitoring is the process of reviewing, analyzing and managing network traffic for any abnormality or process that can affect network performance, availability and/or security.

## Steps

1. Go to **Maintenance** → **Network** → **Traffic** .
2. You can view the real-time network traffic status, including MTU (Maximum Transmission Unit), and network throughput.

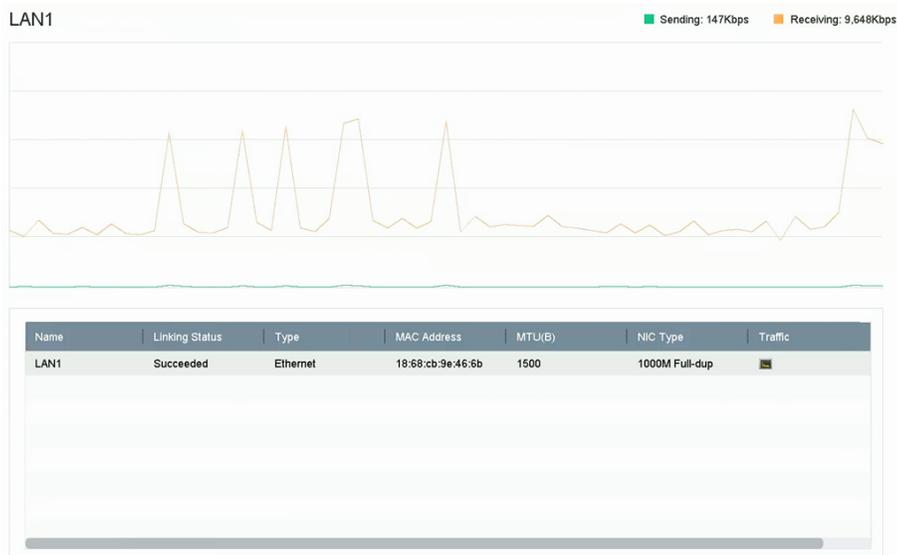


Figure 15-2 Network Traffic

## 15.5.2 Test Network Delay and Packet Loss

Network delay is caused by slow response of the device when oversized data information is not limited during transmission under certain network protocol, e.g. TCP/IP. Packet loss test is for testing network packet loss rate that is the ratio of lost data packet and total number of transmitted data packet.

## Steps

1. Go to **Maintenance** → **Network** → **Network Detection** .
2. Select a network card in **Select NIC**.
3. Enter the destination IP address in **Destination Address**.
4. Click **Test**.

Network Delay, Packet Loss Test

Select NIC: LAN1

Destination Address: 10.6.114.33

Test

Figure 15-3 Test Network Delay and Packet Loss

## 15.5.3 Export Network Packet

After the recorder accessing network, you can use USB flash drive to export network packet.

### Before You Start

Prepare a USB flash drive to export network packet.

### Steps

1. Insert the USB flash drive.
2. Go to **Maintenance** → **Network** → **Network Detection** .
3. Select network card in **Select NIC**.
4. Select the USB flash drive in **Device Name**. You can click **Refresh** if the connected local backup device cannot be displayed.



Figure 15-4 Export Network Packet

5. **Optional:** Click **Status** to view the network status.
6. Click **Export**.



### Note

It will export 1 MB data each time as default.

---

## 15.5.4 Network Resource Statistics

The remote access, including web browser and client software, will consume output bandwidth. You can view the real-time bandwidth statistics.

### Steps

1. Go to **Maintenance** → **Network** → **Network Stat** .

Type	bandwidth
IP Camera	5.120Kbps
Remote Live View	0bps
Remote Playback	0bps
Net Receive Idle	155Mbps
Net Send Idle	160Mbps

Figure 15-5 Network Resource Statistics

2. View the bandwidth statistics, including **IP Camera**, **Remote Live View**, **Remote Play**, **Net Total Idle**, etc.
3. **Optional:** Click **Refresh** to obtain the latest data.

## 15.6 Storage Device Maintenance

### 15.6.1 Bad Sector Detection

#### Steps

1. Go to **Maintenance** → **HDD Operation** → **Bad Sector Detection** .
2. Select the HDD No. you want to configure in the dropdown list.
3. Select **All Detection** or **Key Area Detection** as the detection type.
4. Click **Self-Test** to start the detection.

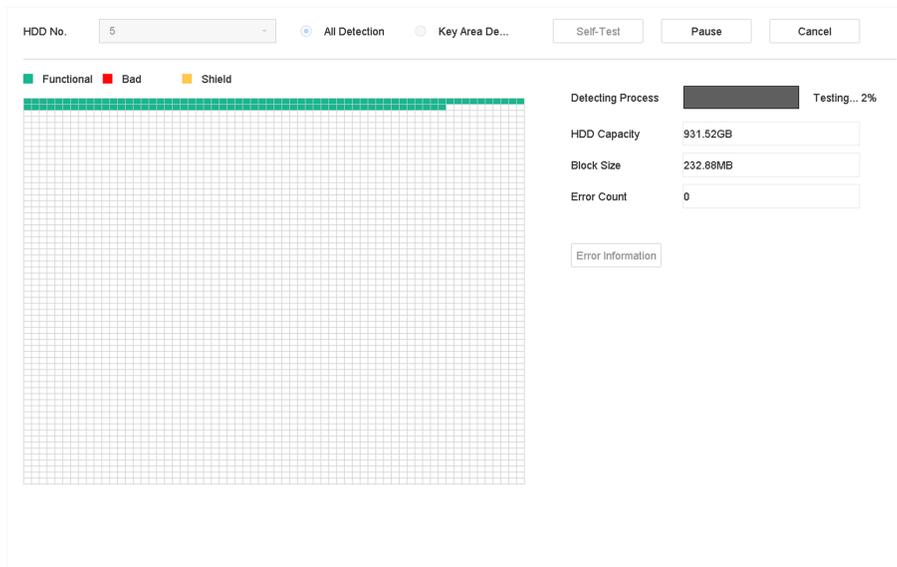


Figure 15-6 Bad Sector Detection

---

#### Note

- You can pause/resume or cancel the detection.
  - After testing has been completed, you can click **Error information** to see the detailed damage information.
- 

### 15.6.2 S.M.A.R.T. Detection

HDD detection functions such as the adopting of the S.M.A.R.T. and the Bad Sector Detection techniques. S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) are HDD monitoring systems to detect various reliability indicators in the hopes of anticipating failures.

#### Steps

1. Go to **Maintenance** → **HDD Operation** → **S.M.A.R.T** .
2. Select the HDD to view its S.M.A.R.T. information list.
3. Set **Self-Test Type**.

## 4. Click **Self-Test** to start the S.M.A.R.T. HDD self-evaluation.

Continue to use this disk when self-evaluation is failed.

HDD No.

Self-Test Type

Temperature...  Self-Evaluation

Working Time...  All-Evaluation

S.M.A.R.T Infor

ID	Attribute Name	Status	Flags	Threshold	Value	Worst	Raw Value
0x1	Raw Read Error R...	OK	2f	51	200	200	8
0x3	Spin Up Time	OK	27	21	113	107	7316
0x4	Start/Stop Count	OK	32	0	98	98	2657
0x5	Reallocated Sector...	OK	33	140	200	200	0
0x7	Seek Error Rate	OK	2e	0	200	200	0
0x9	Power-on Hours C...	OK	32	0	88	88	9369
0xa	Spin Up Retry Count	OK	32	0	100	100	0
0xb	Calibration Retry C...	OK	32	0	100	100	0

**Figure 15-7 S.M.A.R.T. Settings Interface**

### **Note**

To use the HDD even when the S.M.A.R.T. checking has failed, check **Continue to use the disk when self-evaluation is failed**.


The related information of the S.M.A.R.T. is shown, and you can check the HDD status.

## 15.6.3 HDD Health Detection

You can view the health status of a 4 TB to 8 TB Seagate HDD that generated after October 1, 2017. Use this function to help troubleshoot HDD problems. Health Detection shows a more detailed HDD status than the S.M.A.R.T. function.

### Steps

1. Go to **Maintenance** → **HDD Operation** → **Health Detection** .

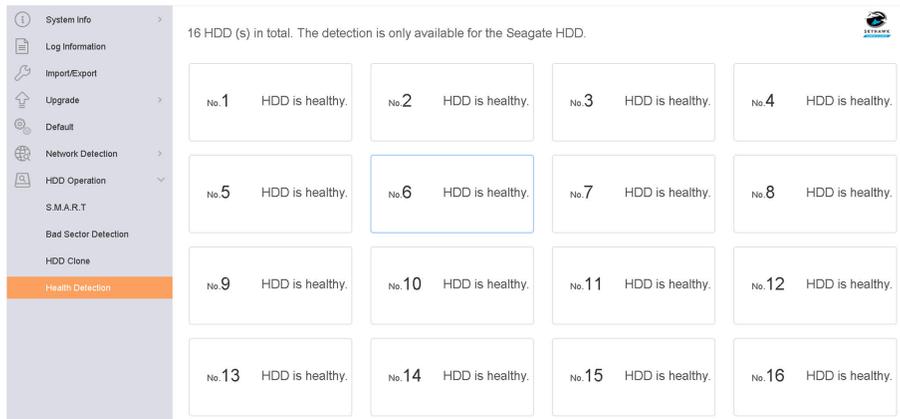

**Figure 15-8 Health Detection**

2. Click a HDD to view details.

## 15.6.4 Configure Disk Clone


Select the HDDs to clone to the eSATA HDD.

### Before You Start

Connect an eSATA disk to the device.

### Steps

1. Go to **Maintenance** → **HDD Operation** → **HDD Clone** .

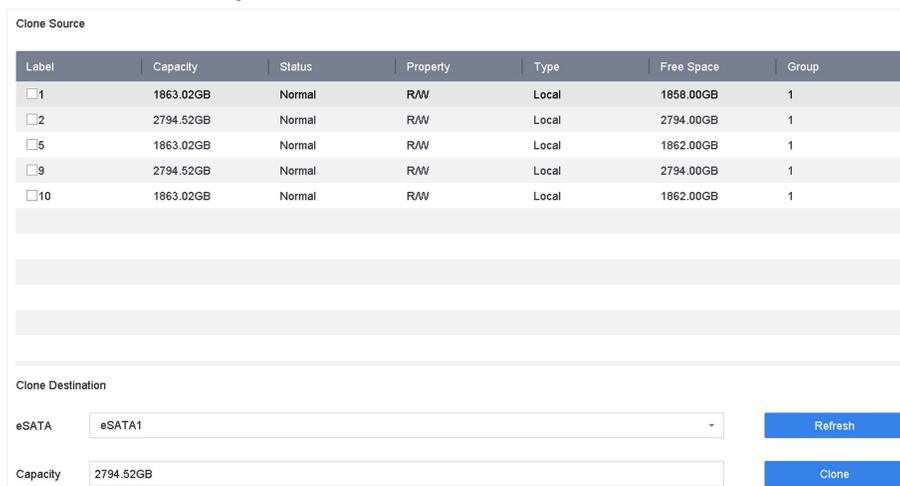

**Figure 15-9 HDD Clone**

2. Check the HDD to clone. The capacity of the selected HDD must match the capacity of the clone destination.

3. Click **Clone**.

4. Click **Yes** on the pop up message box to create the clone.

## 15.6.5 Repair Database

Repairing database will rebuild all databases. It might help to improve your system speed after upgrade.


### Steps

1. Go to **Storage** → **Storage Device** .
2. Select the drive.
3. Click **Repair Database**.
4. Click **Yes**.

---

### Note

- Repairing database will rebuild all databases. Existing data will not be affected, but local search and playback functions will not be available during the process, you can still achieve search and playback functions remotely via web browser, client software, etc.
  - Do not pull out the drive, or shut down the device during the process.
  - You can see the repairing progress at **Status**.
- 

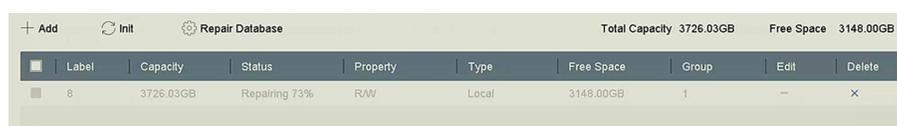

Label	Capacity	Status	Property	Type	Free Space	Group	Edit	Delete
8	3726.03GB	Repairing 73%	R/W	Local	3148.00GB	1	-	x

Figure 15-10 Repair Database

## 15.7 Upgrade Device

Your device firmware can be upgraded with a local backup device or remote FTP server.

### 15.7.1 Upgrade by Local Backup Device

#### Before You Start

Connect your device to a local storage device that contains the firmware update file.

#### Steps

1. Go to **Maintenance** → **Upgrade** .
2. Click **Local Upgrade** to enter the local upgrade interface.



**Figure 15-11 Local Upgrade**

3. Select the firmware update file from the storage device.
4. Click **Upgrade** to start upgrading.

After the upgrade is completed, the device will reboot automatically to activate the new firmware.


## 15.7.2 Upgrade by FTP

### Before You Start

Ensure the network connection of the PC (running FTP server) and the device are valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.

### Steps

1. Go to **Maintenance** → **Upgrade** .
2. Click **FTP** to enter the local upgrade interface.

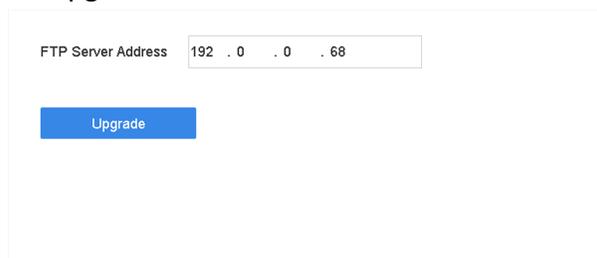

**Figure 15-12 FTP Upgrade**

3. Enter **FTP Server Address**.
4. Click **Upgrade** to start upgrading.
5. After the upgrading is complete, reboot the device to activate the new firmware.

## 15.7.3 Upgrade by Web Browser

You can upgrade the device by web browser

After logging in to the device via web browser, go to **Configuration** → **System** → **Maintenance** → **Upgrade** . Click **Browse** to upload the firmware, and upgrade the device.

## 15.7.4 Upgrade by Hik-Connect

After logging the device into Hik-Connect, the device would periodically check for the latest firmware from Hik-Connect. If an upgrade firmware is available, the device will notify you when you log in. You can also manually check for the latest firmware.

### Before You Start

Ensure the device has successfully connected to Hik-Connect, and it requires to install at least one read-write HDD for firmware downloading.

### Steps

1. Go to **Maintenance** → **Upgrade** → **Online Upgrade** .
2. Click **Check Upgrade** to manually check and download the latest firmware from Hik-Connect.



The device will automatically check for the latest firmware every 24 hours. If it detects available upgrade firmware, the device will notify you when you log in.

3. **Optional:** You can switch on **Download Latest Package Automatically** to automatically download the latest firmware package.
4. Click **Upgrade Now**.

## 15.8 Import/Export Device Configuration Files


The device configuration files can be exported to a local device for backup; and the configuration files of one device can be imported to multiple devices if they are to be configured with the same parameters.

### Before You Start

Connect a storage device to your device. To import the configuration file, the storage device must contain the file.

### Steps

1. Go to **Maintenance** → **Import/Export** .

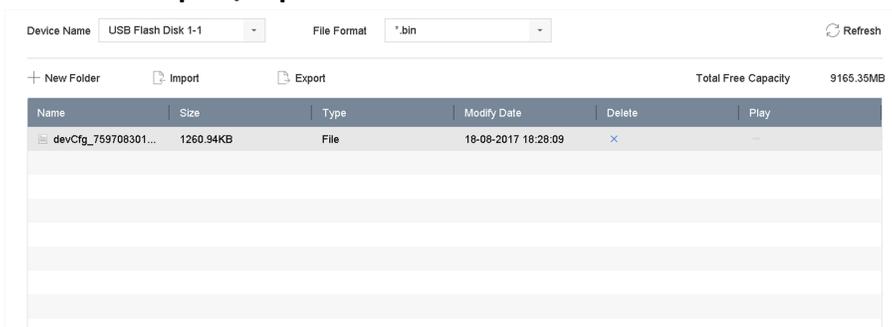

**Figure 15-13 Import/Export Configuration File**

2. Export or import the device configuration files.

- Click **Export** to export configuration files to the selected local backup device.
- To import a configuration file, select the file from the selected backup device and click **Import**.

## **Note**

After having finished importing configuration files, the device will reboot automatically.

---

## 15.9 Log Management

### 15.9.1 Log Storage

You can customize the log storage disk and log storage period.

#### Steps

1. Go to **Storage** → **Advanced** .



The screenshot shows a configuration panel for log storage. It contains three rows of settings: 'Log Storage Mode' with a dropdown menu set to 'Custom'; 'Log Storage Period' with a horizontal slider bar and a numeric input field set to '90' followed by 'Day'; and 'Log Disk/Array No.' with a text input field containing the number '2' and a gear icon to its right. At the bottom of the panel is a blue 'Apply' button.

**Figure 15-14 Log Storage**

2. Set **Log Storage Mode**.

<b>System Default</b>	Each disk will allocate a certain space to store logs in 6 months. After 6 months, old logs will be overwritten.
<b>Custom</b>	You can set <b>Log Storage Period</b> and allocate <b>Log Disk</b> for log storage. When the log disk is full, logs that exceed the period will be overwritten.


3. Click **Apply**.

### 15.9.2 Search & Export Log Files

The device operation, alarm, exception, and information can be stored in log files, which can be viewed and exported at any time.


#### Steps

1. Go to **Maintenance** → **Log Info** .

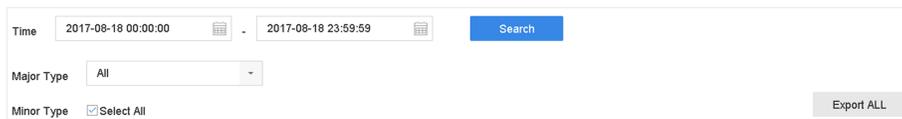

**Figure 15-15 Log Search Interface**

2. Set the log search conditions, including the time, major type and minor type.
3. Click **Search** to start searching the log files.
4. The matched log files will be displayed on the list, as shown below.

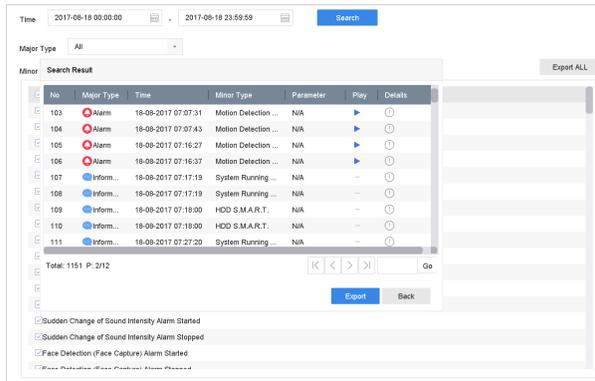

**Figure 15-16 Log Search Results**

## Note

Up to 2,000 log files can be displayed each time.

### 5. Related Operation:



Click or double-click it to view detailed information.



Click it to view the related video file.


**Export/Export ALL** Click it to export all the system logs to the storage device.

## 15.9.3 Upload Logs to the Server

You can upload system logs to the server for backup.

### Steps

1. Go to **System** → **Network** → **Advanced** → **Log Server Settings** .

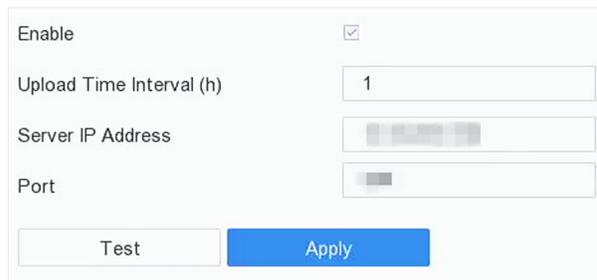

The screenshot shows a configuration panel for Log Server Settings. It includes a checked 'Enable' checkbox, an 'Upload Time Interval (h)' input field with the value '1', a 'Server IP Address' input field with a blurred IP address, and a 'Port' input field with a blurred port number. At the bottom, there are 'Test' and 'Apply' buttons.

**Figure 15-17 Log Server Settings**

2. Check **Enable**
3. Set **Upload Time, Server IP Address, and Port.**
4. **Optional:** Click **Test** to test if parameters are valid.
5. Click **Apply**.

## 15.9.4 One-Way Authentication


You can install a CA certificate (from the server) to your device to authorize the server via web browser. It would improve the log communication security.

### Before You Start

- Download the CA certificate from the server.
- Ensure log server parameters are valid.

### Steps

1. Go to **Configuration → Network → Advanced Settings → Log Server Configuration** .

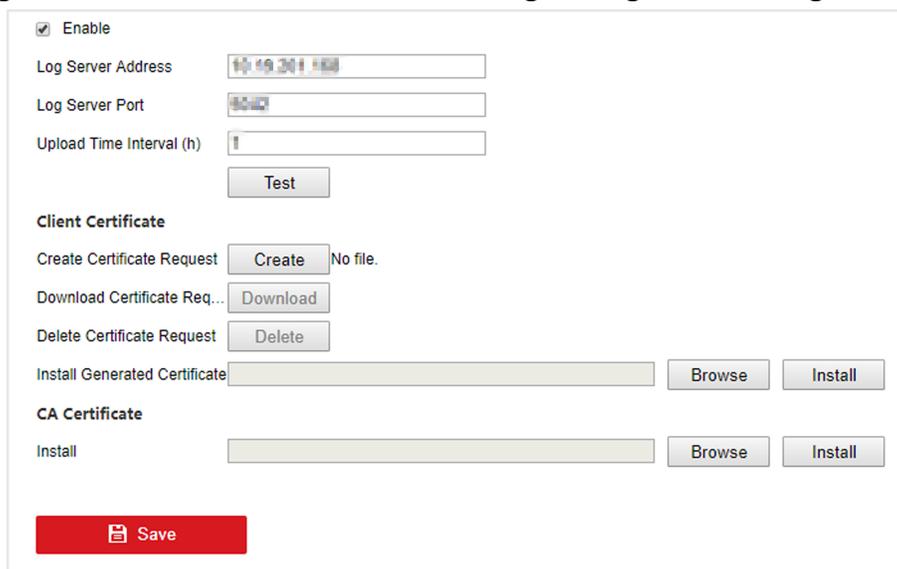

The screenshot shows the One-Way Authentication configuration panel. It features a checked 'Enable' checkbox, 'Log Server Address' and 'Log Server Port' input fields with IP and port icons, and an 'Upload Time Interval (h)' input field with the value '1'. A 'Test' button is located below these fields. The 'Client Certificate' section includes 'Create Certificate Request' (with a 'Create' button and 'No file.' text), 'Download Certificate Req...' (with a 'Download' button), and 'Delete Certificate Request' (with a 'Delete' button). Below this is an 'Install Generated Certificate' field with 'Browse' and 'Install' buttons. The 'CA Certificate' section has an 'Install' field with 'Browse' and 'Install' buttons. A large red 'Save' button is at the bottom.

**Figure 15-18 One-Way Authentication**

2. Install the CA certificate in **CA Certificate**.
3. **Optional:** Click **Test** to test if the connection is valid.

4. Click **Save**.

## 15.9.5 Two-Way Authentication

You can install a CA certificate (from the server) to your device to authorize the server, and create a certificate (from your device) to authorize your device by the server. This would improve the log communication security. Two-way authentication can be configured via web browser.

### Before You Start

- Download the CA certificate from the server.
- Ensure log server parameters are valid.

### Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Log Server Configuration** .

The screenshot shows a web configuration page for Log Server Configuration. At the top, there is a checked checkbox labeled 'Enable'. Below it are three input fields: 'Log Server Address' with the value '192.168.1.100', 'Log Server Port' with the value '8080', and 'Upload Time Interval (h)' with the value '1'. A 'Test' button is located below these fields. The 'Client Certificate' section contains three buttons: 'Create' (with 'No file.' next to it), 'Download', and 'Delete'. Below this is an 'Install Generated Certificate' section with a file input field, a 'Browse' button, and an 'Install' button. The 'CA Certificate' section has an 'Install' label, a file input field, a 'Browse' button, and an 'Install' button. At the bottom left, there is a red 'Save' button with a floppy disk icon.

**Figure 15-19 Two-Way Authentication**

2. Install the CA certificate in **CA Certificate**.
3. Click **Create** in **Client Certificate**, and follow the pop-up to create the certificate.
4. Click **Download** to download the certificate file to a desired location.
5. Upload the downloaded certificate file to the server, and the server will return the certificate key.
6. Open the certificate as a text file, and modify it by the certificate key as the server returned.
7. Install the modified certificate in **Client Certificate**.
8. **Optional:** Click **Test** to test if the connection is valid.
9. Click **Save**.

## 15.10 Export Diagnostic Information

When exceptions occur, you can export diagnostic information via web browser, and check it.


### Steps

1. Go to **Configuration → System → Maintenance → Diagnose** via web browser.
2. Check **Export Diagnostic Information**.
3. Click **Save**.
4. Click **Diagnose Information**.
5. Set the saving path and file name as your desire.
6. Save the file.

## 15.11 Restore Default Settings

### Steps

1. Go to **Maintenance → Default** .

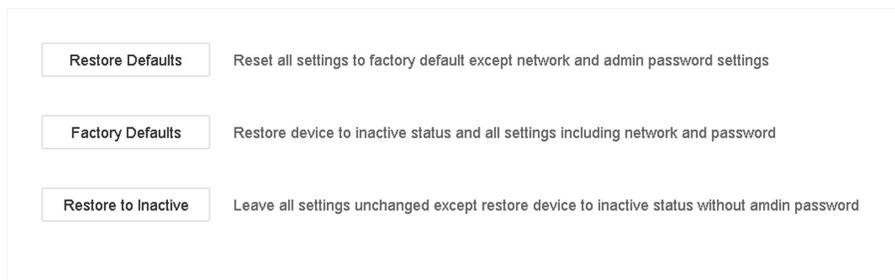

**Figure 15-20 Restore Default Settings**

2. Select the restore type from the following three options.

#### Restore Defaults

Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.

#### Factory Defaults

Restore all parameters to the factory default settings.

#### Restore to Inactive

Restore the recorder to inactive status.



#### Note

The recorder will reboot automatically after restoring to the default settings.

---

## 15.12 Schedule Reboot

The device will automatically restart according to the schedule.

### Steps

1. Go to **Maintenance** → **System Service** → **System Service** → **Schedule Reboot** .
2. Check **Enable**.
3. Set the reboot schedule.
4. Click **Apply**.

## 15.13 Security Management

### 15.13.1 Configure ONVIF

ONVIF protocol allows the connection with third-party cameras. The added user accounts have the permission to connect other devices via ONVIF protocol.

### Steps

1. Go to **Maintenance** → **System Service** → **ONVIF** .
2. Check **Enable ONVIF** to enable the ONVIF access management.



### Note

ONVIF protocol is disabled by default.

3. Click **Add**.
4. Enter **User Name**, and **Password**



### Caution

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.


5. Select **Level** as **Media User**, **Operator** or **Admin**.
6. Click **OK**.

### 15.13.2 IP/MAC Address Filter

The address filter decides whether to allow or forbid specific IP/MAC address to get access to your device.

### Steps

1. Go to **Maintenance** → **System Service** → **Address Filter** .

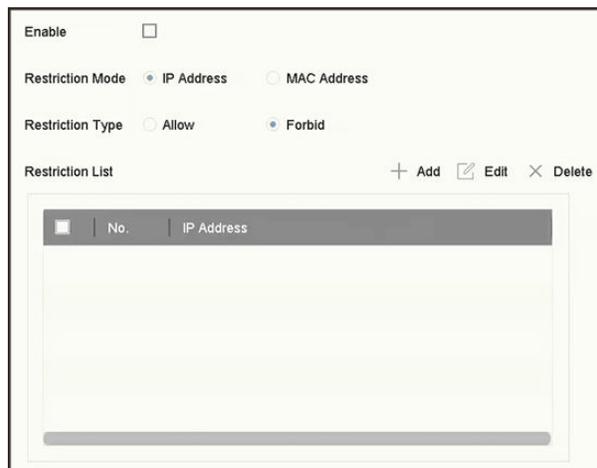

**Figure 15-21 Address Filter**

2. Check **Enable**.
3. Select **Restriction Mode**. Choose to filter by IP address or MAC Address.
4. Select **Restriction Type**. The device mechanism will allow or forbid specific IP/MAC address to get access to your device.
5. **Optional**: Set **Restriction List**. You can add, edit or delete address.
6. Click **Apply** to save the settings.

### 15.13.3 RTSP Authentication

You can specifically secure the stream data of live view by setting the RTSP authentication.

#### Steps

1. Go to **System** → **System Service** → **System Service** .



**Figure 15-22 RTSP Authentication**

2. Select **RTSP Authentication Type**.

---

#### **Note**

Two authentication types are selectable, if you select **digest**, only the request with digest authentication can access the video stream by the RTSP protocol via the IP address. For security reasons, it is recommended to select **digest** as the authentication type.

3. Click **Apply**.
4. Restart the device to take effect the settings.

## 15.13.4 ISAPI Service

ISAPI (Internet Server Application Programming Interface) is an open protocol based on HTTP, which can realize the communication between the system devices (e.g., network camera, NVR, etc.). The device is as a server, the system can find and connect the device.

### Steps

1. Go to **System** → **System Service** → **System Service** .
2. Check **Enable ISAPI**.
3. Click **Apply**.
4. Restart the device to take effect the settings.

## 15.13.5 HTTP Authentication

If you need to enable the HTTP service, you can set HTTP authentication to enhance access security.

### Steps

1. Go to **Maintenance** → **System Service** → **System Service** .



Enable HTTP

HTTP Authentication Type

**Figure 15-23 HTTP Authentication**

2. Check **Enable HTTP**.
3. Select **HTTP Authentication Type**.

---

### **Note**

Two authentication types are selectable, for security reasons, it is recommended to select **digest** as the authentication type.

4. Click **Apply** to save the settings.
5. Restart the device to take effect the settings.

## 15.13.6 IP Camera Occupation Detection

After enabling the feature, when search IP camera in Number of Unadded Online Device interface, the status of IP camera the has been added by other device will show as 

### Steps

1. Go to **System** → **System Service** → **System Service** .
2. Check **Enable IP Camera Occupation Detection**.
3. Click **Apply** to save the settings. And reboot device to take effect the settings.

## Chapter 16 Appendix

### 16.1 Glossary

#### Dual-Stream

Dual-stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the DVR, with the main stream having a maximum resolution of 1080P and the sub-stream having a maximum resolution of CIF.

#### DVR

Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.

#### HDD

Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.

#### DHCP

Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.

#### HTTP

Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network.

#### PPPoE

PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.

#### DDNS

Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

#### Hybrid DVR

A hybrid DVR is a combination of a DVR and NVR.

#### NTP

Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.

### **NTSC**

Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.

### **NVR**

Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other DVRs.

### **PAL**

Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.

### **PTZ**

Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.

### **USB**

Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

## **16.2 Communication Matrix**

Please scan the QR code below to view the communication matrix document.



**Figure 16-1 Communication Matrix**

## **16.3 Device Command**

Please scan the QR code below to view the device command document.



Figure 16-2 Device Command

## 16.4 Frequently Asked Questions

### 16.4.1 Why is there a part of channels displaying “No Resource” or turning black screen in multi-screen live view?

#### Reason

1. Sub-stream resolution or bitrate settings is inappropriate.
2. Connecting sub-stream failed.

#### Solution

1. Go to **Camera** → **Video Parameters** → **Sub-Stream** . Select the channel, and turn down the resolution and max. bitrate (resolution shall be less than 720p, max. bitrate shall be less than 2048 Kbps).

---

#### Note

If your video recorder notifies not support this function, you can log in to the camera, and adjust video parameters via web browser.

2. Properly set the sub-stream resolution and max. bitrate (resolution shall be less than 720p, max. bitrate shall be less than 2048 Kbps), then delete the channel and add it back again.

### 16.4.2 Why is the video recorder notifying the stream type is not supported?

#### Reason

The camera encoding format mismatches with the video recorder.

### **Solution**

If the camera is using H.265/MJPEG for encoding, but video recorder does not support H.265/MJPEG, change the camera encoding format to the same as video recorder.

### **16.4.3 Why is the video recorder notifying risky password after a network camera is added?**

#### **Reason**

The camera password is too weak.

#### **Solution**

Change the camera password.



#### **Warning**

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

---

### **16.4.4 How to improve the playback image quality?**

#### **Reason**

Recording parameter settings are inappropriate.

#### **Solution**

Go to **Camera → Video Parameters** . Increase resolution and max. bitrate, and try again.

### **16.4.5 How to confirm the video recorder is using H.265 to record video?**

#### **Solution**

Check if the encoding type at live view toolbar is H.265.

### **16.4.6 Why is the timeline at playback not constant?**

### Reason

1. When the video recorder is using event recording, it only records video when event occurs. Hence the video may not be continuous.
2. Exception occurs, such as the device offline, HDD error, record exception, network camera offline, etc.

### Solution

1. Ensure the recording type is continuous recording.
2. Go to **Maintenance** → **Log Info** . Search the log file during the video time period. See if there are unexpected events, such as HDD error, record exception, etc.

### 16.4.7 Why is the video recorder notifying the network is unreachable when a network camera is being added?

#### Reason

1. The IP address or port of network camera is incorrect.
2. The network between video recorder and camera is disconnected.

#### Solution

1. Go to **Camera** → **Camera** → **IP Camera** . Click  of the selected camera, and edit its IP address and port. Ensure the video recorder and camera is using the same port.
2. Go to **Maintenance** → **Network** → **Detection** . Enter the IP address of network camera in **Destination Address**, and click **Test** to see if the network is reachable.

### 16.4.8 Why is the IP address of network camera being changed automatically?

#### Reason

When network camera and video recorder are using the same switch but in different subnets, the video recorder will change the IP address of network camera to the same subnet as itself.

#### Solution

When adding camera, click **Custom Add** to add camera.

### 16.4.9 Why is the video recorder notifying IP conflict?

#### Reason

The video recorder uses the same IP address as other devices.

### **Solution**

Change the IP address of video recorder. Ensure it is not the same as other devices.

### **16.4.10 Why is image getting stuck when playing back by single or multi-channel cameras?**

#### **Reason**

HDD read/write exception.

#### **Solution**

Export the video, and play it with other devices. If it plays normally on other device, change your HDD, and try again.

### **16.4.11 Why does my video recorder make a beeping sound after booting?**

#### **Reason**

1. The front panel is not fastened (for the device which its front panel is removable).
2. HDD error, or do not have HDD.

#### **Solution**

1. If it makes continuous beeps, and your device's front panel is removable, ensure the front panel is fastened.
2. If it makes non-continuous beeps (3 long, 2 short), take HDD error as an example, check if the device has installed HDD. If not, you can go to **System → Event → Normal Event → Exception** , and uncheck **Event Hint Configuration** to disable HDD error event hint.  
Check if the HDD is initialized. If not, go to Storage > Storage Device to initialize the HDD.  
Check if the HDD is broken. You can change it, and try again.

### **16.4.12 Why is there no recorded video after the motion detection is set?**

#### **Reason**

1. The recording schedule is incorrect.
2. The motion detection event setting is incorrect.
3. HDD exception.

### **Solution**

1. The recording schedule is setup correctly by following the steps listed in Configuring Record/Capture Schedule.
2. The motion detection area is configured correctly. The channels are being triggered for motion detection (See Configuring Motion Detection).
3. Check if the device has installed HDD.  
Check if the HDD is initialized. If not, go to Storage > Storage Device to initialize the HDD.  
Check if the HDD is broken. You can change it, and try again.

### **16.4.13 Why is the video sound quality not good?**

#### **Reason**

1. The audio input device does not have a good effect in sound collection.
2. Interference in transmission.
3. The audio parameter is not properly set.

#### **Solution**

1. Check if the audio input device is working properly. You can change another audio input device, and try again.
2. Check the audio transmission line. Ensure all lines are well connected or welded, and there is no electromagnetic interference.
3. Adjust the audio volume according to the environment and audio input device.



See Far, Go Further